

## 1 Introduction

This application note describes how to perform the USB2.0 compliance pre-test for the i.MXRT series MCUs.

This document describes the test items, equipment, and tools used in the test and procedures of the USB2.0 compliance pre-test in detail.

## 2 Preparing for the test

### 2.1 Test boards

The boards listed below are certificated and registered in the USB-IF:

- MIMXRT1170-EVK
- MIMXRT1060-EVK
- IMXRT1050-EVKB
- MIMXRT1020-EVK
- MIMXRT1010-EVK
- MIMXRT685-EVK
- MIMXRT595-EVK

### 2.2 Test equipment and tools

[Table 1](#) and [Table 2](#) list the test equipment and the tests for which they are required. Keysight USB electrical test equipment was used in the testing, but you may use equipment from other vendors instead, such as, Tektronix and Lecroy.

Table 1. Digital oscilloscope and software

| Test equipment |                                  |                    | Tests                  |                 |                |
|----------------|----------------------------------|--------------------|------------------------|-----------------|----------------|
| Part number    | Description                      | Manufacturer       | Embedded host hi-speed | Device hi-speed | Low/Full-speed |
| DSOS604A       | Digital real-time oscilloscope   | Keysight (Agilent) | 1                      | 1               | 1              |
| D9010USBC      | USB 2.0 Compliance Test Software | Keysight (Agilent) | 1                      | 1               | 1              |
| 1131B          | Differential probe amplifier     | Keysight (Agilent) | 1                      | 1               | N/A            |

Table continues on the next page...

### Contents

|          |   |           |
|----------|---|-----------|
| <b>1</b> | <b>Introduction.....</b>                  | <b>1</b>  |
| <b>2</b> | <b>Preparing for the test.....</b>        | <b>1</b>  |
| 2.1      | Test boards.....                          | 1         |
| 2.2      | Test equipment and tools.....             | 1         |
| 2.3      | Test demo.....                            | 3         |
| <b>3</b> | <b>Test procedures.....</b>               | <b>3</b>  |
| 3.1      | Electrical test items and procedure ..... | 4         |
| 3.2      | Device Framework test.....                | 46        |
| <b>4</b> | <b>Notes and Failure items fix.....</b>   | <b>49</b> |
| 4.1      | Notes.....                                | 49        |
| 4.2      | Eye diagram adjustment.....               | 51        |
| 4.3      | Inrush Test failure.....                  | 53        |
| 4.4      | Drop test failure.....                    | 54        |
| <b>5</b> | <b>Registering product in USB-IF.....</b> | <b>54</b> |
| <b>6</b> | <b>References.....</b>                    | <b>55</b> |
| <b>7</b> | <b>Revision history.....</b>              | <b>55</b> |
| <b>A</b> | <b>Abbreviations.....</b>                 | <b>56</b> |



Table 1. Digital oscilloscope and software (continued)

| Test equipment |                         |                    | Tests                  |                 |                |
|----------------|-------------------------|--------------------|------------------------|-----------------|----------------|
| Part number    | Description             | Manufacturer       | Embedded host hi-speed | Device hi-speed | Low/Full-speed |
| E2678B         | Differential Probe Head | Keysight (Agilent) | 1                      | 1               | N/A            |
| N2873A         | Single-ended probe      | Keysight (Agilent) | 2                      | 2               | 3              |
| 81160A         | Pulse generator         | Keysight (Agilent) | N/A                    | 1               | N/A            |
| N2774A         | Current probe           | Keysight (Agilent) | N/A                    | N/A             | 1              |

Table 2. Test fixtures and accessories

| Test equipment          |  |                    | Tests                  |                 |                |
|-------------------------|--|--------------------|------------------------|-----------------|----------------|
| Part number             | Description  | Manufacturer       | Embedded host hi-speed | Device hi-speed | Low/Full-speed |
| E2649-66401             | Device hi-speed signal quality test fixture                | Keysight (Agilent) | N/A                    | 1               | N/A            |
| E2649-66402             | Host high speed signal quality test fixture                | Keysight (Agilent) | 1                      | N/A             | N/A            |
| E2649-66403             | Receiver sensitivity test fixture                          | Keysight (Agilent) | N/A                    | 1               | N/A            |
| E2649-66405             | Droop/Drop test fixture                                    | Keysight (Agilent) | N/A                    | N/A             | 1              |
| E2646B                  | USB inrush (SQiDD) test fixture                            | Keysight (Agilent) | N/A                    | N/A             | 1              |
| 82357B                  | USB/GPIB interface   | Keysight (Agilent) | N/A                    | 1               | N/A            |
| 8493C                   | 6 dB attenuators   | Keysight (Agilent) | N/A                    | 1               | N/A            |
| 8120-4948 or equivalent | 50-ohm-coaxial cable with male SMA connectors at both ends | Keysight (Agilent) | N/A                    | 2               | N/A            |

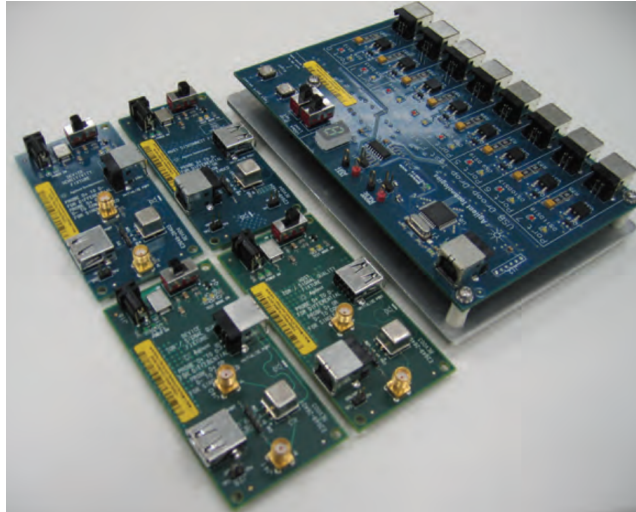


Figure 1. E2649 series hi-speed test fixtures

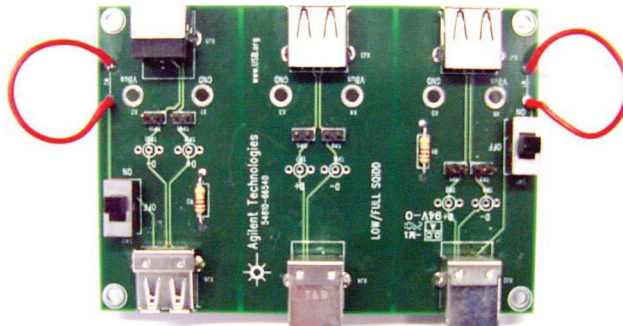


Figure 2. E2646B SOIDD test fixture



Figure 3. 1131B differential probe with E2678B head

## 2.3 Test demo

- For device test, `usb_device_hid_mouse_bm`, enable the macro `USB_DEVICE_CONFIG_COMPLIANCE_TEST` on `usb_device_config.h`.
- For embedded host test, `usb_host_msd_fatfs_bm`, enable the macro `USB_HOST_CONFIG_COMPLIANCE_TEST` on `usb_host_config.h`.

Only these two demos implement the whole USB certification function support. To run the whole compliance test, use these two demos.

## 3 Test procedures

### 3.1 Electrical test items and procedure

The USB automatic test software on the oscilloscope is needed for electrical test, and USBET is selected for automatic test, as shown in Figure 4. To open this software from the main menu of Infiniium oscilloscope, choose **Analyze > Automated Test Apps > D9010USBC USB Test App**.

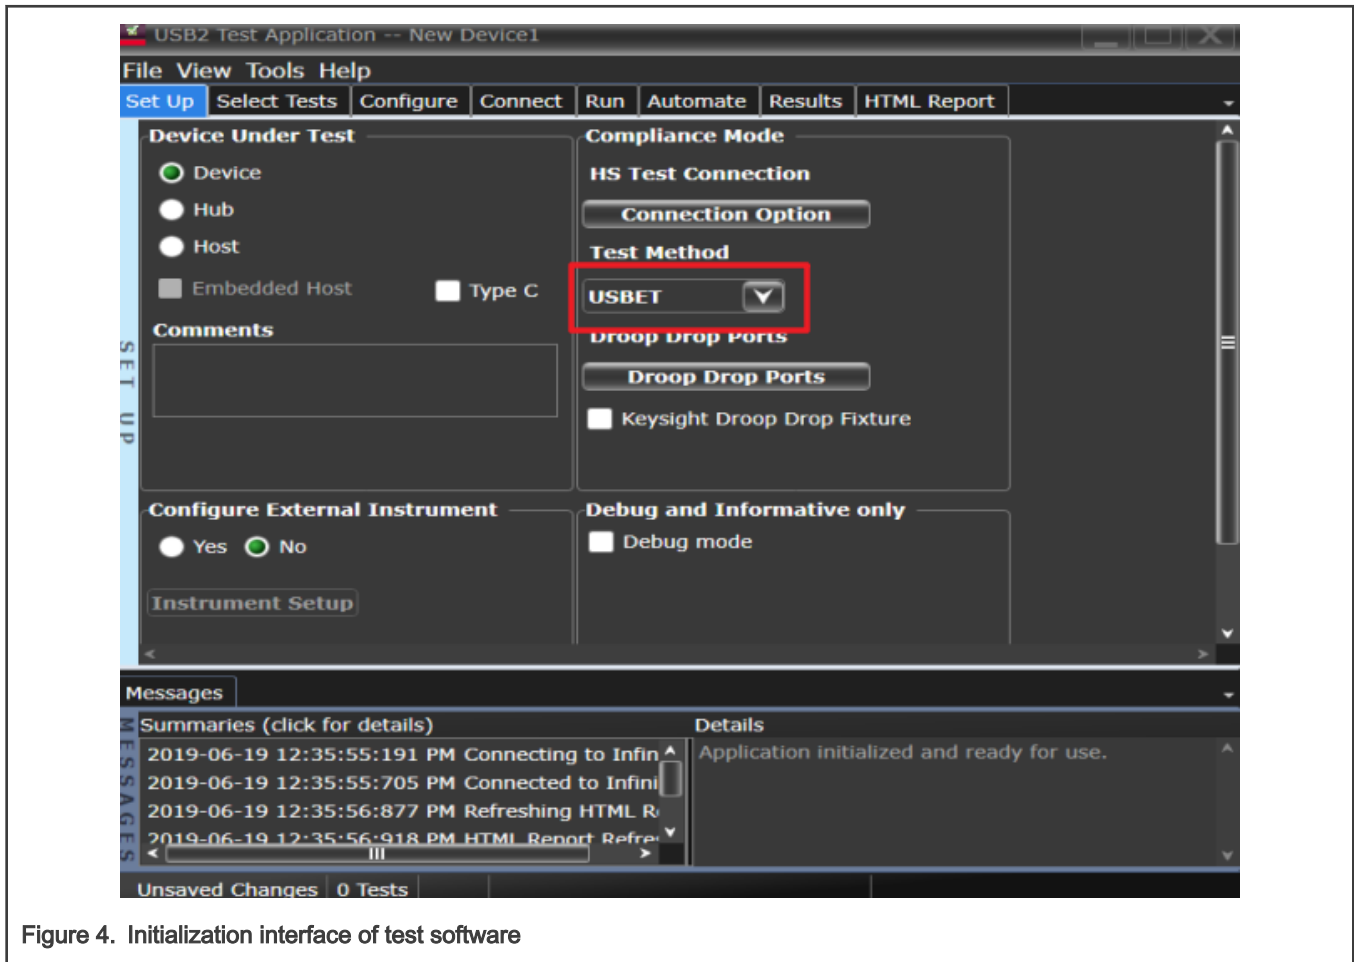


Figure 4. Initialization interface of test software

#### 3.1.1 Device High-Speed signal test

To run a Device High-Speed signal test, perform the following steps:

1. Download and install the HS Electrical test tool on the test PC.
2. Send the test commands, and the device under test enters a specific test mode.

HSETT can be downloaded from [https://www.usb.org/documents?search=HSET&items\\_per\\_page=50](https://www.usb.org/documents?search=HSET&items_per_page=50).


Device High-Speed signal test includes:

- Device High-Speed Signal Quality Test
- Device Packet Parameters test
- Device CHIRP Timing test
- Device Suspend/Reset/Resume Timing test
- Device Test J/K, SE0\_NAK test
- Device Receiver Sensitivity test


Table 3 lists the electrical test limits for the High-Speed device.

**Table 3. High-Speed device electrical test limits**

| Test name  | Pass limits   |
|--|---|
| EL_2 Data Rate   | Within 480 Mb/s +/-0.05%  |
| EL_4 Eye Pattern (without captive cable)                           | Must meet template 1 transform waveform requirements at TP3 (see <a href="#">Figure 5</a> )             |
| EL_6 Device Rise/Fall Time   | > 500 ps  |
| EL_7 Device Non-Monotonic Edge Test                                | Must have monotonic data transitions over the vertical openings   |
| EL_21 Device Sync Field Length Test                                | 32 bits, 65.62 ns <= VALUE <= 67.700 ns   |
| EL_25 Device EOP Length Test                                       | 8 bits, 15.600 ns <= VALUE <= 17.700 ns   |
| EL_22 Measure Interpacket Gap Between Second and Third Packets     | 16.640 ns <= VALUE <= 399.400 ns  |
| EL_22 Measure Interpacket Gap Between First and Second Packets     | 16.640 ns <= VALUE <= 399.400 ns  |
| EL_28 Measure Device CHIRP-K Latency                               | 2.500 $\mu$ s <= VALUE <= 6.000000 ms   |
| EL_29 Measure Device CHIRP-K Duration                              | 1.000 ms <= VALUE <= 7.000 ms   |
| EL_31 Device High-Speed Terminations Enable and D+ Disconnect Time | 1 ns <= VALUE <= 500.000 $\mu$ s  |
| EL_40 Device Resume Timing Response                                | Must transition back to high-speed operation within two-bit times from the end of resume time signaling |
| EL_27 Device CHIRP Response to Reset from High-Speed Operation     | 3.100 ms <= VALUE <= 6.000 ms   |
| EL_28 Device CHIRP Response to Reset from Suspend                  | 2.500 $\mu$ s <= VALUE <= 6.000000 ms   |
| EL_38 EL_39 Device Suspend Timing Response                         | 3.000 ms <= VALUE <= 3.125 ms   |
| EL_8 Device J Test   | 360 mV <= D+ <= 440 mV -10 mV <= D- <= 10 mV  |
| EL_8 Device K Test   | 360 mV <= D- <= 440 mV -10 mV <= D+ <= 10 mV  |
| EL_9 Device SE0_NAK Test   | -10 mV <= D+ <= 10 mV -10 mV <= D- <= 10 mV   |
| EL_18 Minimum SYNC Field   | Detect the end of the SYNC field within 12-bit times  |
| EL_17 Receiver sensitivity   | VALUE <= +/- 200 mV   |
| EL_16 Squelch  | VALUE >= +/- 100 mV   |

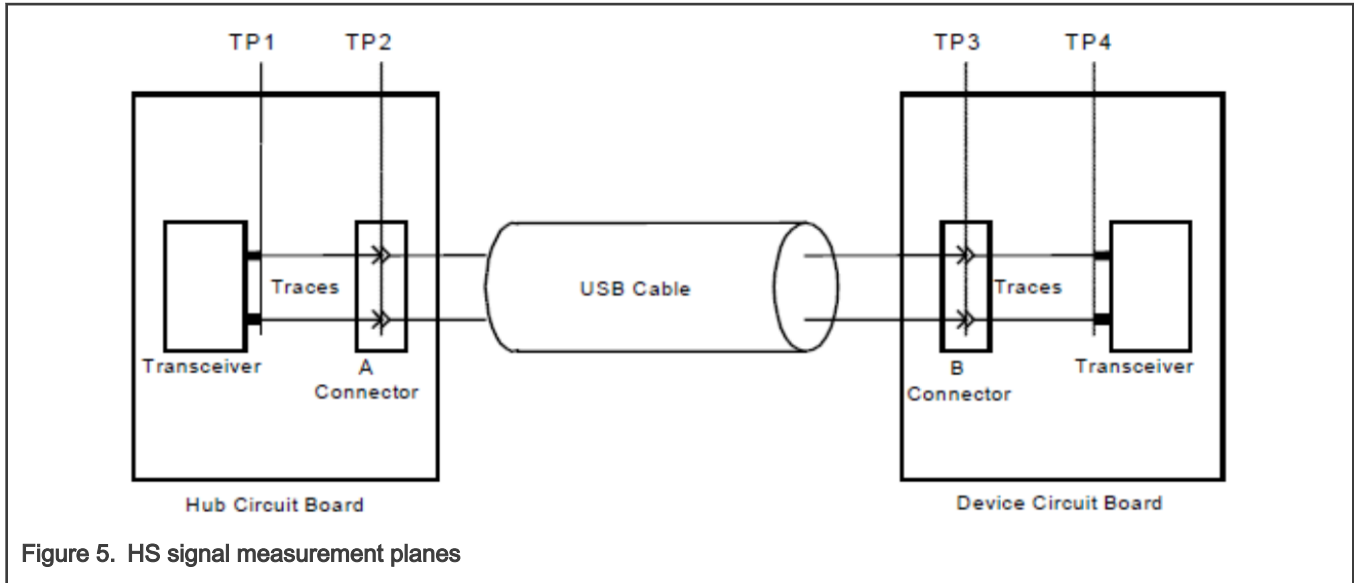

According to the USB2.0 Specification, if the DUT does not contain a captive cable, it must meet the requirement of the Template 1 for the eye patterns. Transmit eye patterns specify the minimum and maximum limits, as well as limits on timing jitter, within which a driver must drive signals at each of the specified test planes. Figure 6 shows Template 1.

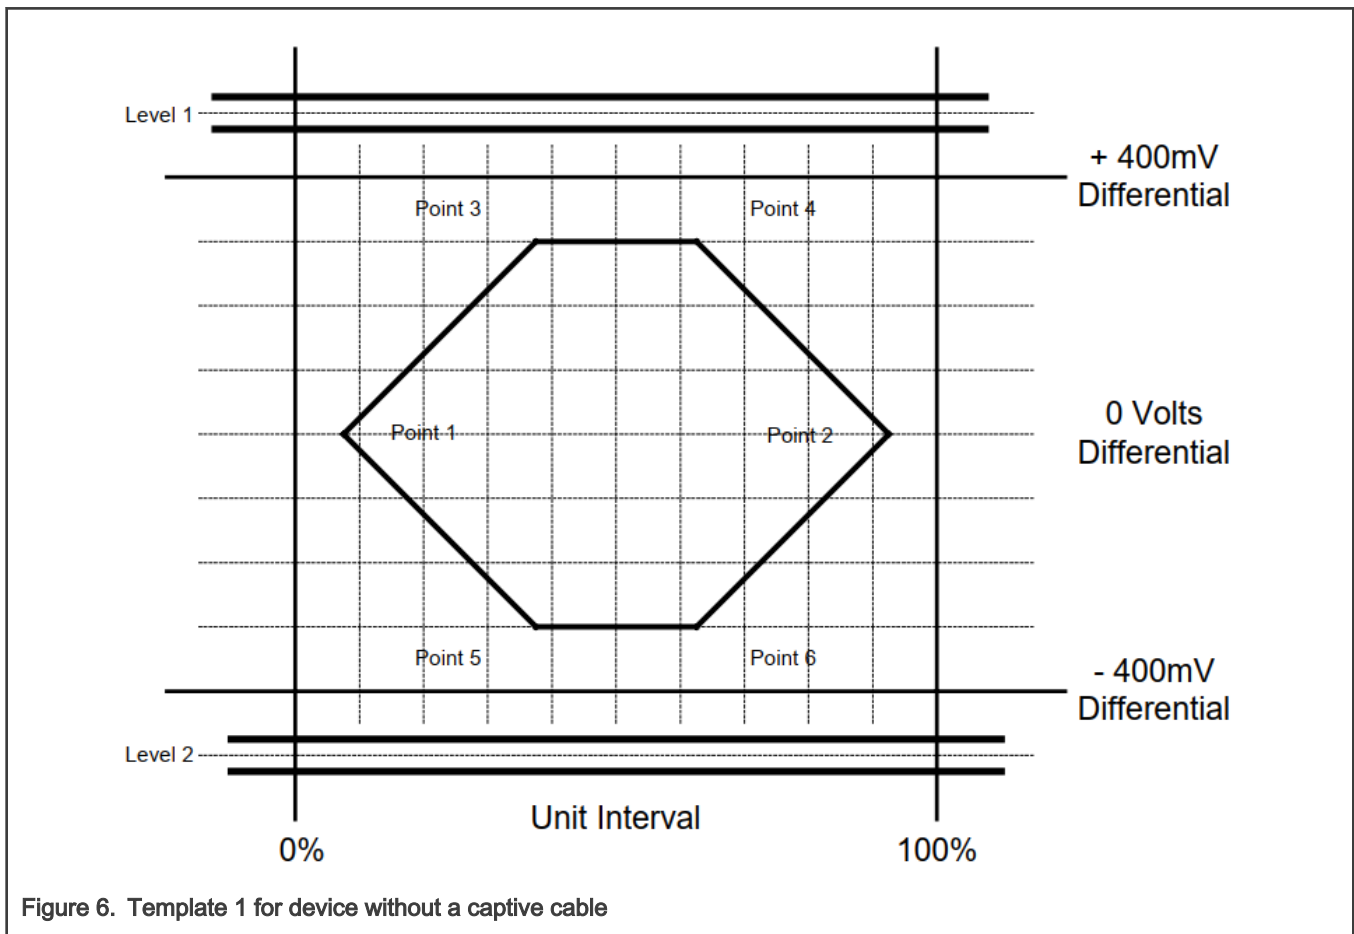


### 3.1.1.1 Device Hi-speed Signal Quality Test procedure

This test measure the transmitter’s ability to carry out effective hi-speed transmission. For the device, measure the hi-speed signal quality on the upstream port. [Table 4](#) lists the equipment used in the test.

**Table 4. Equipment used in Device Hi-Speed Signal Quality Test**

| Item   | Model                                | Quantity |
|--|--------------------------------------|----------|
| Oscilloscope   | Keysight DSOS604A                    | 1        |
| Differential probe                                     | Keysight 1131B with E2678B           | 1        |
| Host test bed computer                                 | Any computer with hi-speed USB ports | 1        |
| Device HS Signal Quality test fixture and 4” USB cable | Keysight E2649-66401                 | 1        |
| 5 V power supply                                       | Keysight 0950-2546 or equivalent     | 1        |

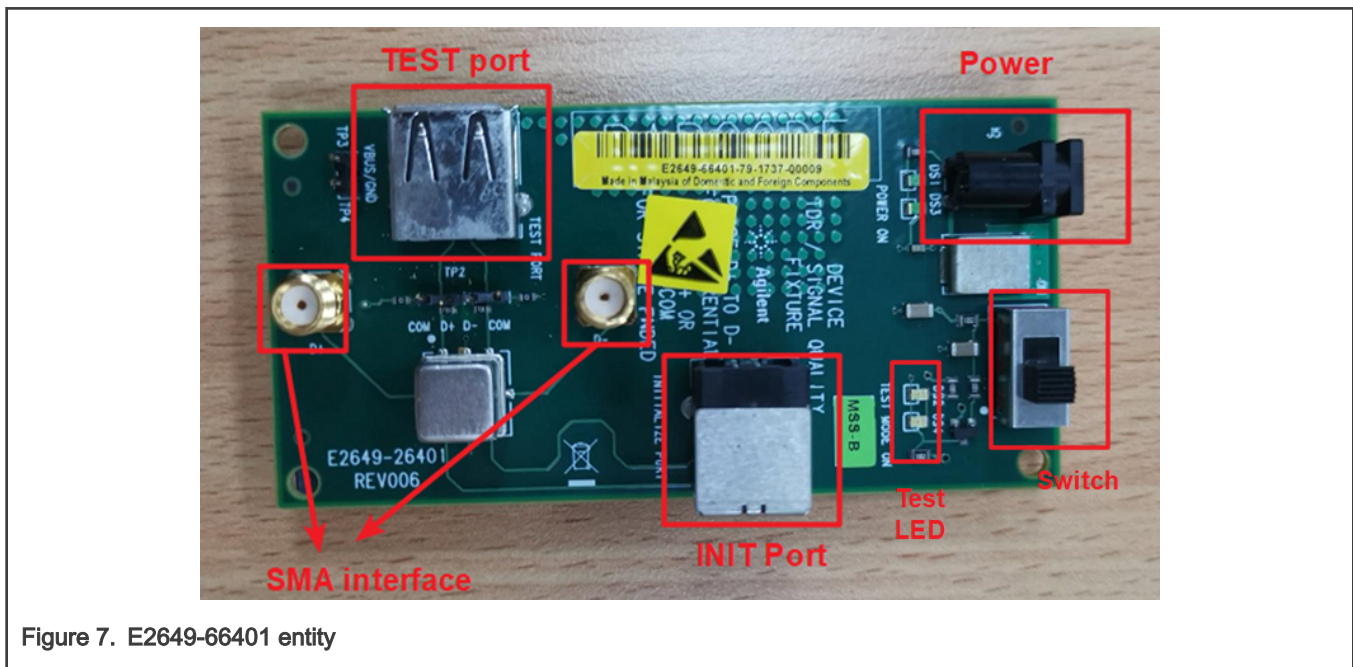

**Figure 7. E2649-66401 entity**

For the test, perform the following steps:

1. Open the test software in on the oscilloscope, select **Device** as the DUT, check the test items shown in [Figure 8](#), and set the test type to **Hi-Speed Near End** in the **Configure** tab.

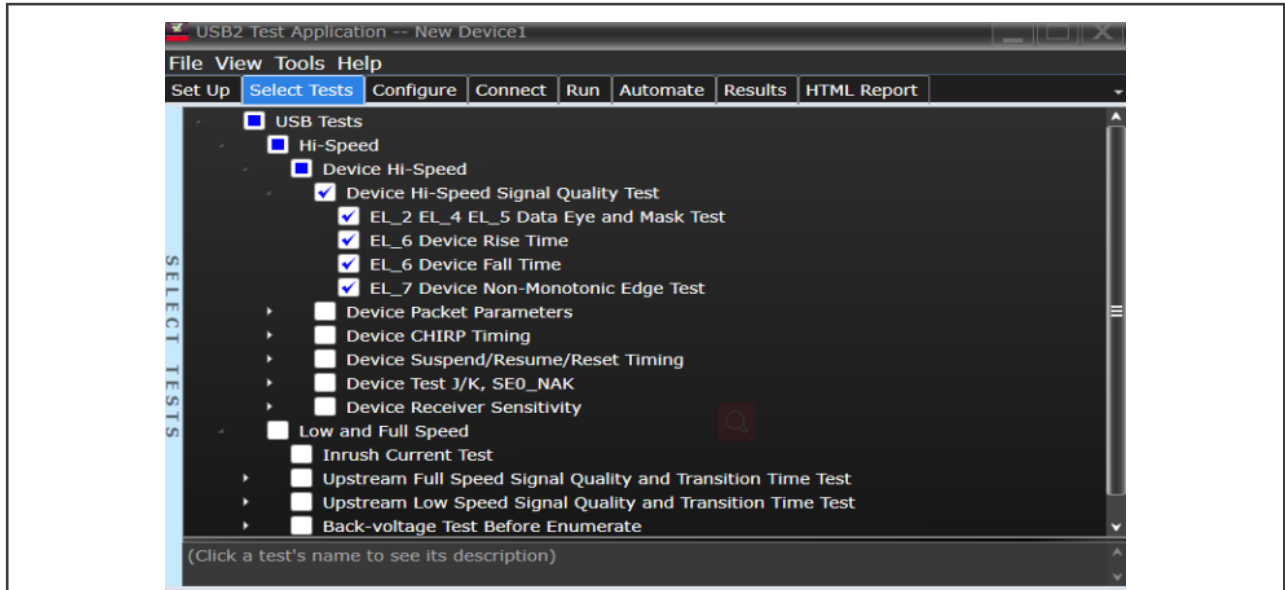


Figure 8. Device Hi-Speed Signal Quality Test

2. Connect the 50 ohm terminator to the SMA interface on the fixture, as shown in [Figure 9](#).



Figure 9. 50 ohm SMA terminator

3. Connect the test equipment, fixture, and oscilloscope, as shown in [Figure 10](#).

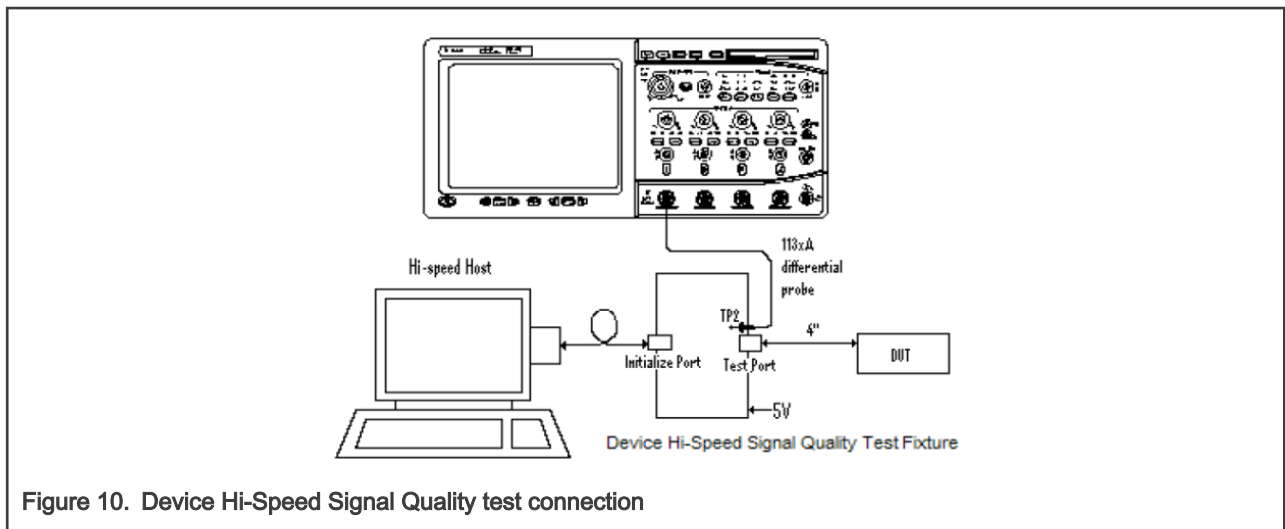


Figure 10. Device Hi-Speed Signal Quality test connection

4. Attach the 5 V power supply to **J5** of the E2649-66401 Device Hi-Speed signal quality test fixture. Leave the **TEST** switch at the **OFF** position. Verify that the green Power LED is lit and the yellow Test LED is not lit.



5. Use a 4" USB cable to connect the **[TEST PORT]** of the Device Hi-speed Signal Quality test fixture into the upstream facing port of the device under test.
6. Use a 5-meter USB cable to connect the **[INIT PORT]** of the test fixture to a Hi-speed capable port of the Test Bed Computer.



Figure 11. Device connection physical map

7. Power on the device and click the **Run Tests** button of the Automated Test software on the oscilloscope. As shown in [Figure 12](#), invoke the HS Electrical Test Tool software on the Hi-Speed Electrical Test Bed computer, according to the type of PC's USB Controller. It is divided into EHCI HSETT and XHCI HSETT. Both can be downloaded from the USB-IF website. Select Device and click the **TEST** button to enter the **Device Test** menu. The DUT is enumerated with VID of the device shown together with the root port in which it is connected. For i.MX RT boards as DUT, the default VID is 0x1fc9 and PID is 0x0091.

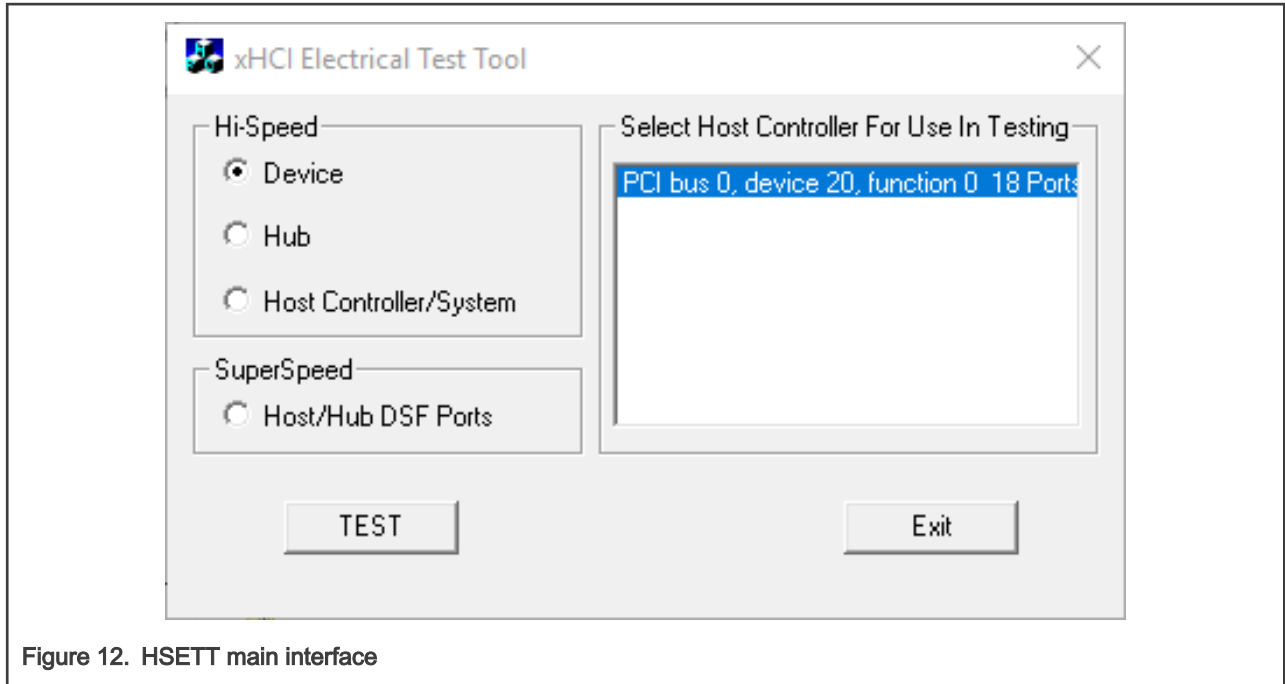


Figure 12. HSETT main interface

8. Select **TEST\_PACKET** from the **Device Command** drop-down menu, as shown in Figure 13. Click **EXECUTE**. The device under test continuously transmits test packets.

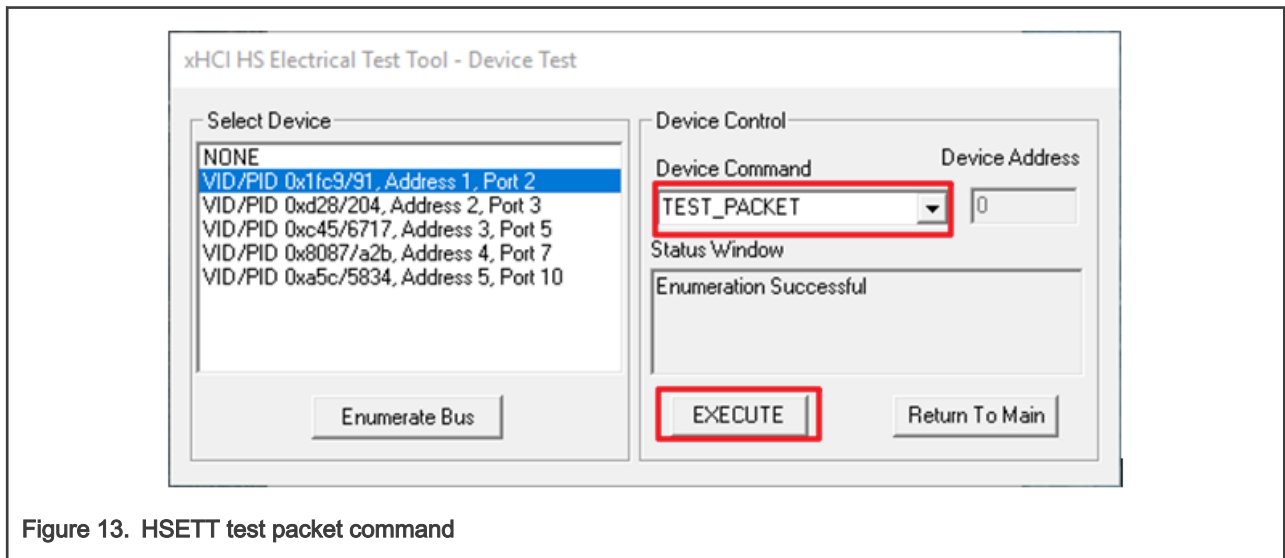


Figure 13. HSETT test packet command

9. Place the Test Switch (S1) in the **TEST** position according to the prompt on the oscilloscope. Verify that the yellow TEST LED is lit. The waveform that the oscilloscope catches must be similar to the waveform prompted in the Automated Test software.

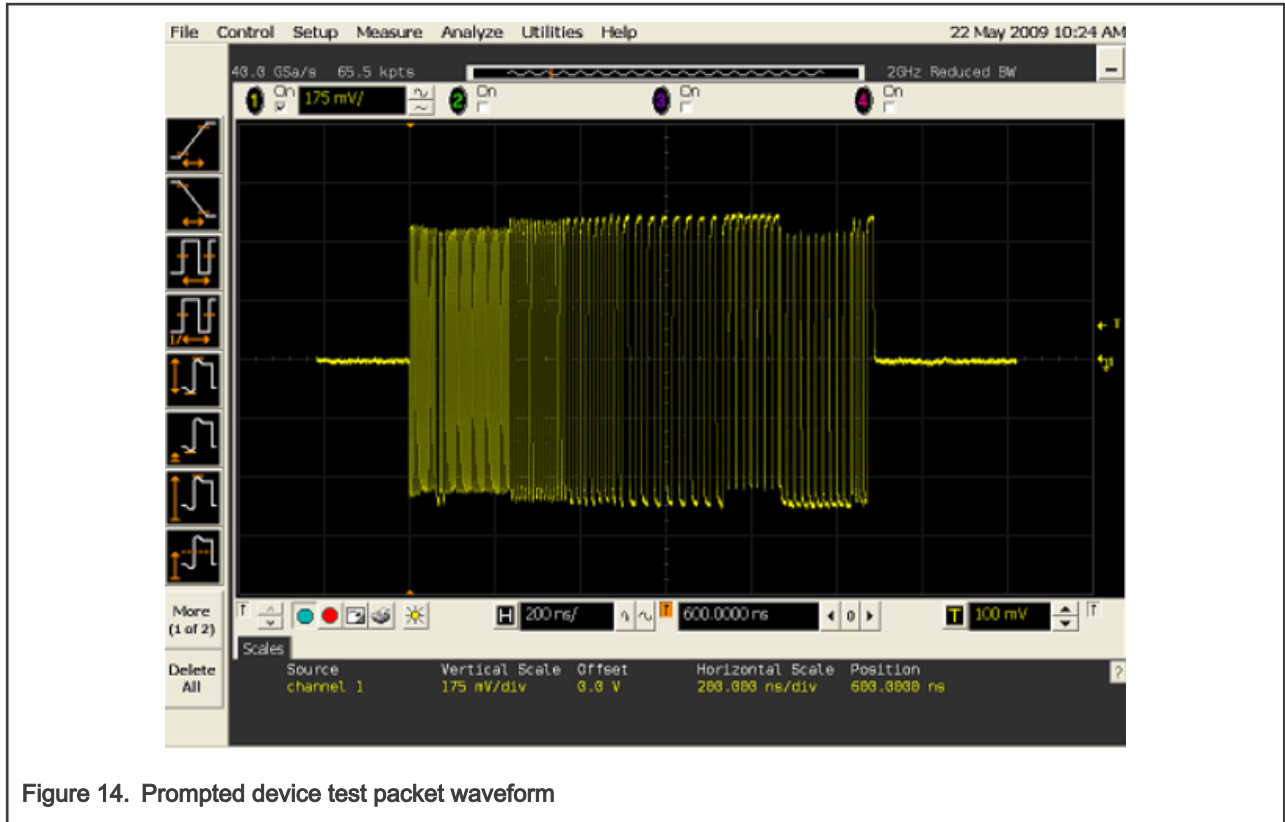


Figure 14. Prompted device test packet waveform

10. When the **Testing Complete** dialog appears, click **OK**. The **Results** tab shows the test results.

| Pass | # Failed | # Trials | Test Name                             | Actual Value | Margin  | Pass Limits      |
|------|----------|----------|---------------------------------------|--------------|---------|------------------|
| ✓    | 0        | 1        | EL_2 EL_4 EL_5 Data Eye and Mask Test | Pass         | 100.0 % | Pass/Fail        |
| ⓘ    |          | 1        | EL_6 Device Rise Time                 | 769.220 ps   |         | Information Only |
| ⓘ    |          | 1        | EL_6 Device Fall Time                 | 718.730 ps   |         | Information Only |
| ✓    | 0        | 1        | EL_7 Device Non-Monotonic Edge Test   | Pass         | 100.0 % | Pass/Fail        |

Figure 15. Device Hi-Speed Signal Quality Test result

### 3.1.1.2 Device Packet Parameters test procedure

This test is used to check whether the length of each field in the USB message and the interval between messages is accurate. The equipment used in the test is same as device high-speed signal quality test, except that the 5 V power cable can be unplugged.

To run the test, perform the following steps:

1. Select the test items as shown in [Figure 16](#), connect the test equipment as shown in [Figure 10](#), and connect the 50 ohm terminator to the SMA interface on the fixture.

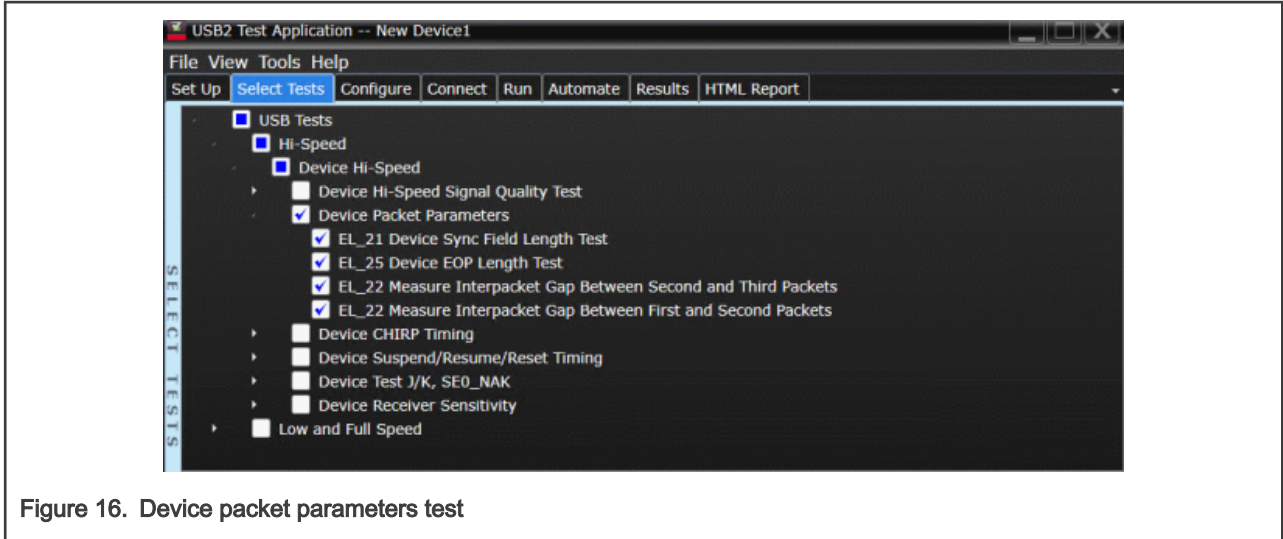


Figure 16. Device packet parameters test

2. The connection of the DUT, PC, and oscilloscope probe is the same as the signal quality test.
3. To restore the device to normal operation, cycle the device power and click **Run Tests** on the oscilloscope. As shown in [Figure 17](#), in the **Device Test** menu of the HS electrical tool, click **Enumerate Bus** once. Observe the oscilloscope and verify the SOFs packets are being transmitted on the port under test.

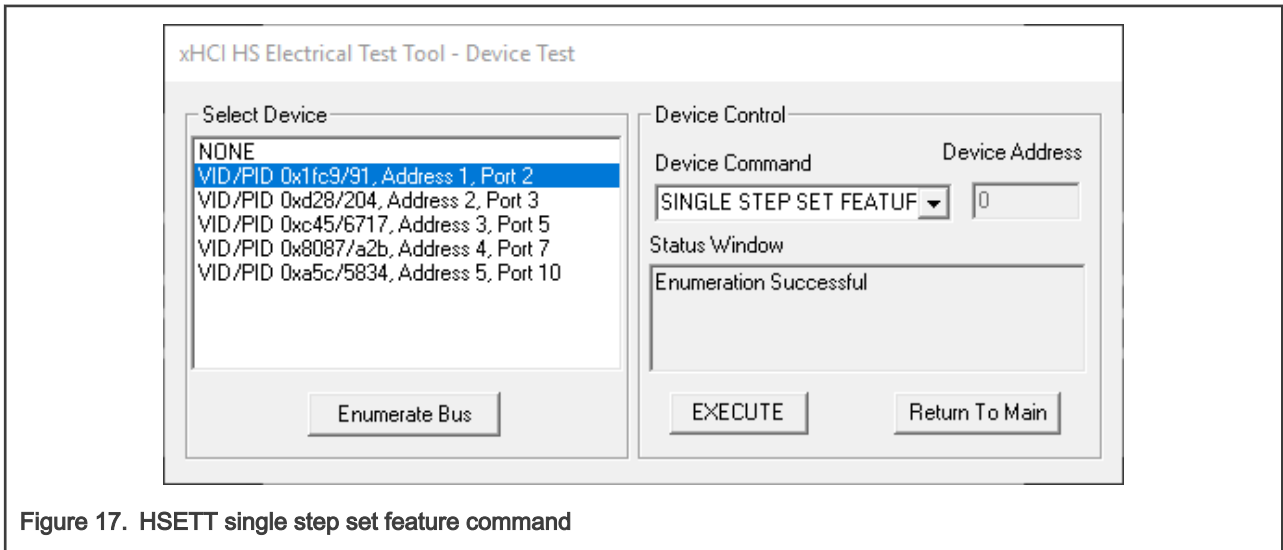


Figure 17. HSETT single step set feature command

4. According to the prompt of the oscilloscope, select **SINGLE STEP SET FEATURE** from the **Device Command** window. Click **EXECUTE** once. Verify that the waveform the oscilloscope catch is similar to the waveform prompted in the Automated Test software. Then click **OK** to the next step.



Figure 18. Prompted waveform

- In the **Device Test** menu of the HS electrical test tool, click **Step** once again. This is the second step of the two-step Single Step Set Feature command. Verify that the waveform the oscilloscope catch is similar to the waveform prompted in the automated test software. When the **Testing Complete** dialog appears, click **OK**.



Figure 19. Prompted waveform

### 3.1.1.3 Device CHIRP Timing test procedure


This item tests the ChirpJ and ChirpK signals generated during the high-speed handshake procedure. [Table 5](#) lists the equipment used in the test.

**Table 5. Equipment used in Device CHIRP Timing test**

| Item   | Model                                | Quantity |
|--|--------------------------------------|----------|
| Oscilloscope   | Keysight DSOS604A                    | 1        |
| Single-ended probe                                     | Keysight N2873A                      | 2        |
| Host test bed computer                                 | Any computer with hi-speed USB ports | 1        |
| Device HS Signal Quality test fixture and 4" USB cable | Keysight E2649-66401                 | 1        |
| 5 meter USB 2.0 hi-speed cable                         | Any listed on USB-IF website         | 1        |


To run the test, perform the following steps:

1. Select the test items in the automated test software on the oscilloscope, as shown in [Figure 20](#).

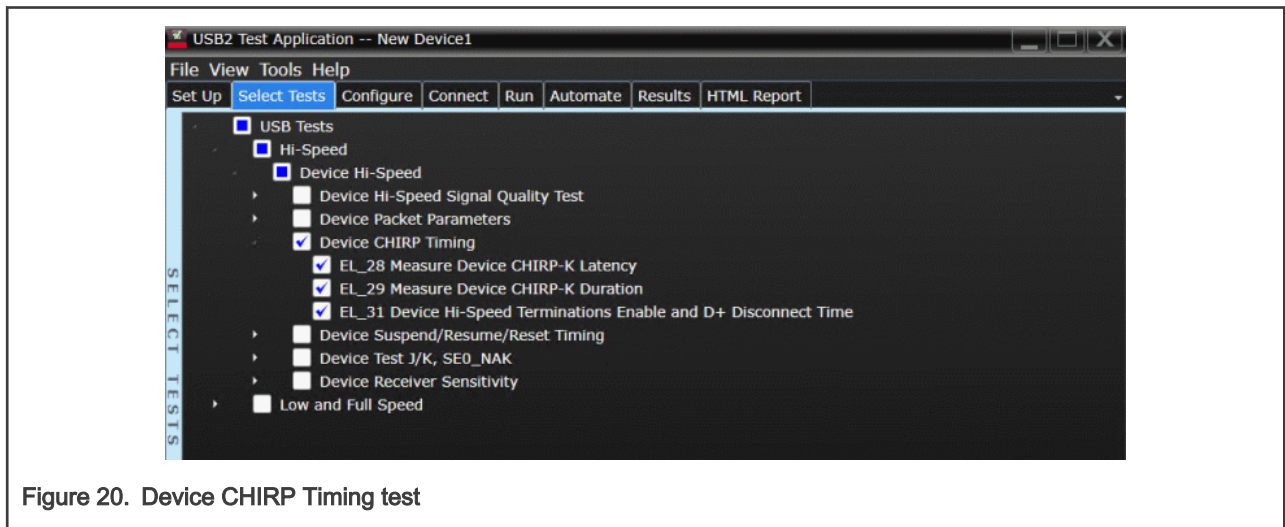

**Figure 20. Device CHIRP Timing test**

2. Connect the test equipment as shown in [Figure 21](#). According to the prompt of the test software, attach the single-end probes on Channel 2 to D- of TP2 and Channel 3 to D+ of TP2. Connect the 50 ohm terminator to the SMA interface on the fixture.

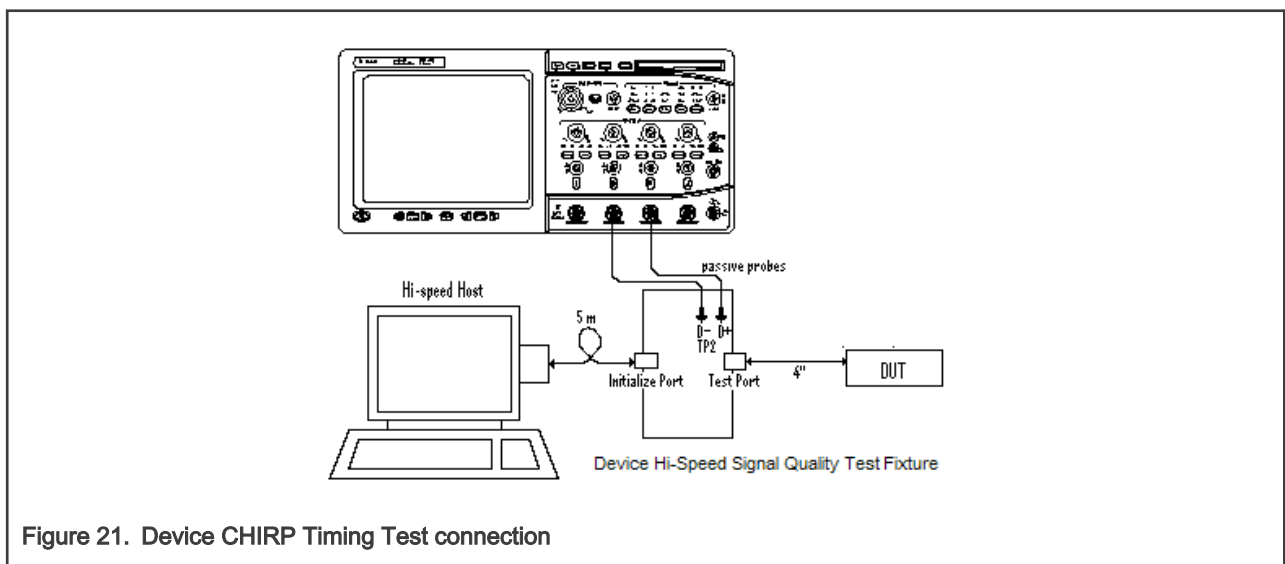

**Figure 21. Device CHIRP Timing Test connection**

3. To restore the device to normal operation, cycle the device power and click **Run Tests** on the oscilloscope. On the HS electrical test tool software, click **Enumerate Bus** once, and the oscilloscope captures and measures the Chirp handshake.
4. When the **Testing Complete dialog** appears, click **OK**.

### 3.1.1.4 Device Suspend/Reset/Resume Timing test procedure

This test measures the timing of the device’s response to the suspend, resume, and reset signals from the host. The equipment used in the test is same as device CHIRP Timing test.

To run the test, perform the following steps:

1. Select the test items in the Automated Test software on the oscilloscope as shown in .

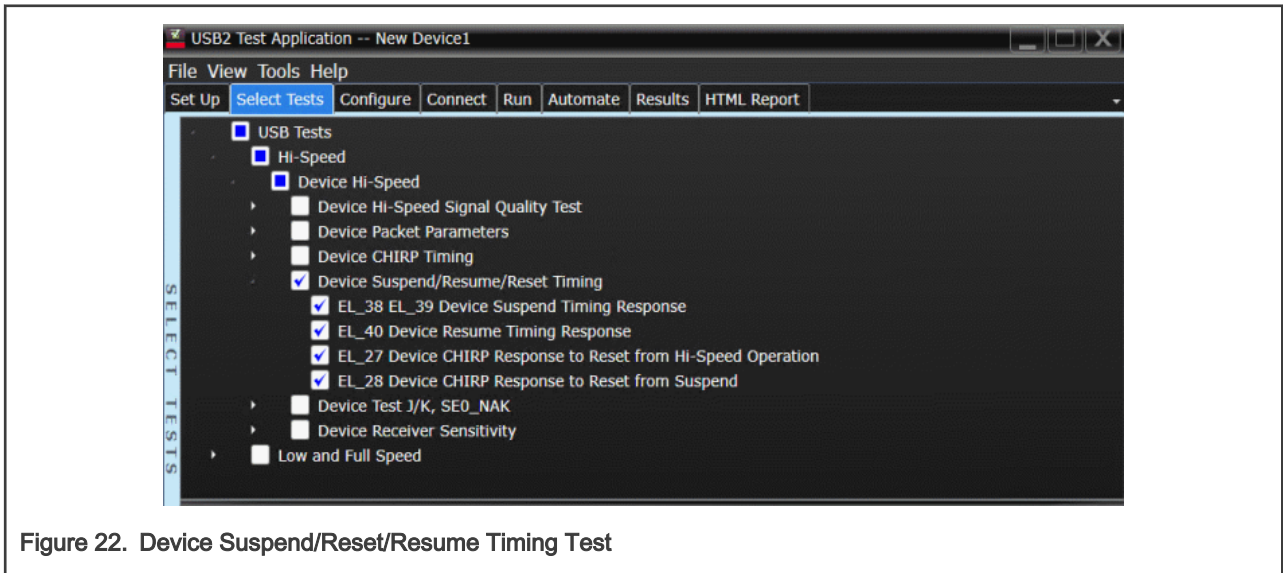


Figure 22. Device Suspend/Reset/Resume Timing Test

2. The connection of the DUT, PC, and oscilloscope probes is the same as the Device CHIRP Timing test.
3. Reset the power for the EVK and click **Run Tests** on the oscilloscope. On the **Device Test** menu of the HS electrical test tool software, click **Enumerate Bus** once.

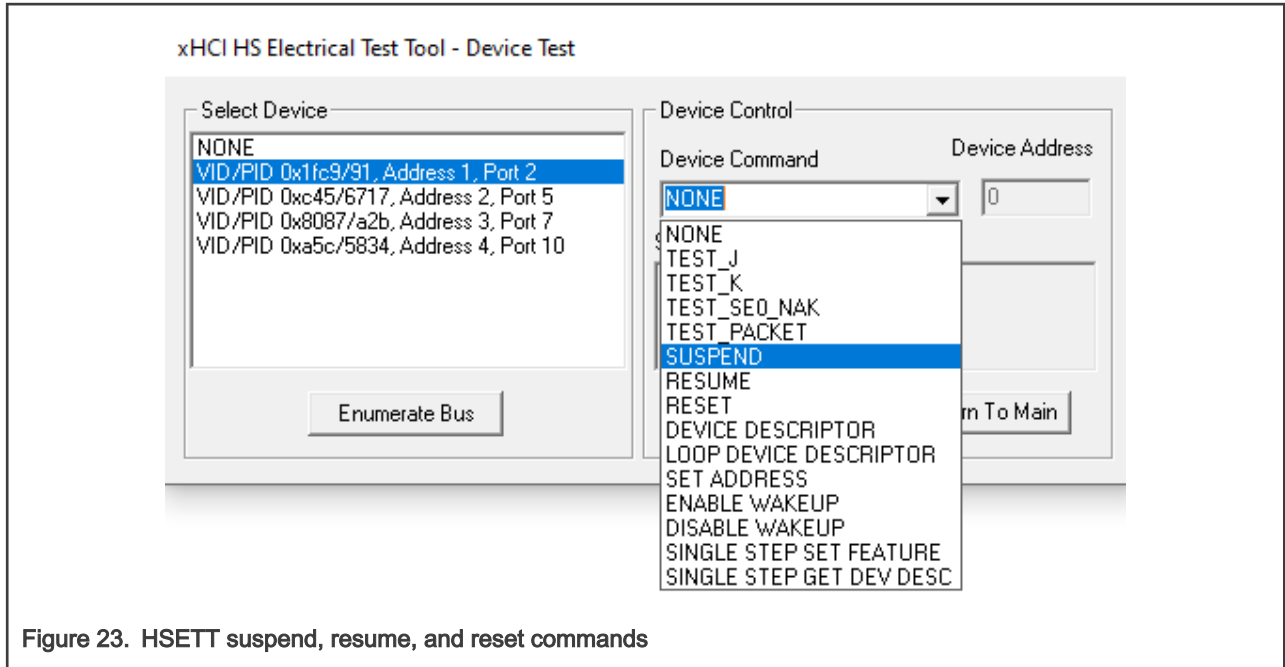


Figure 23. HSETT suspend, resume, and reset commands

- As shown in Figure 23, select the DUT and **SUSPEND** from the **Device Command** drop-down menu. Click **EXECUTE** once to place the device into suspend. The waveform that the oscilloscope catches is similar to the waveform prompted in the automated test software. Click **OK**.

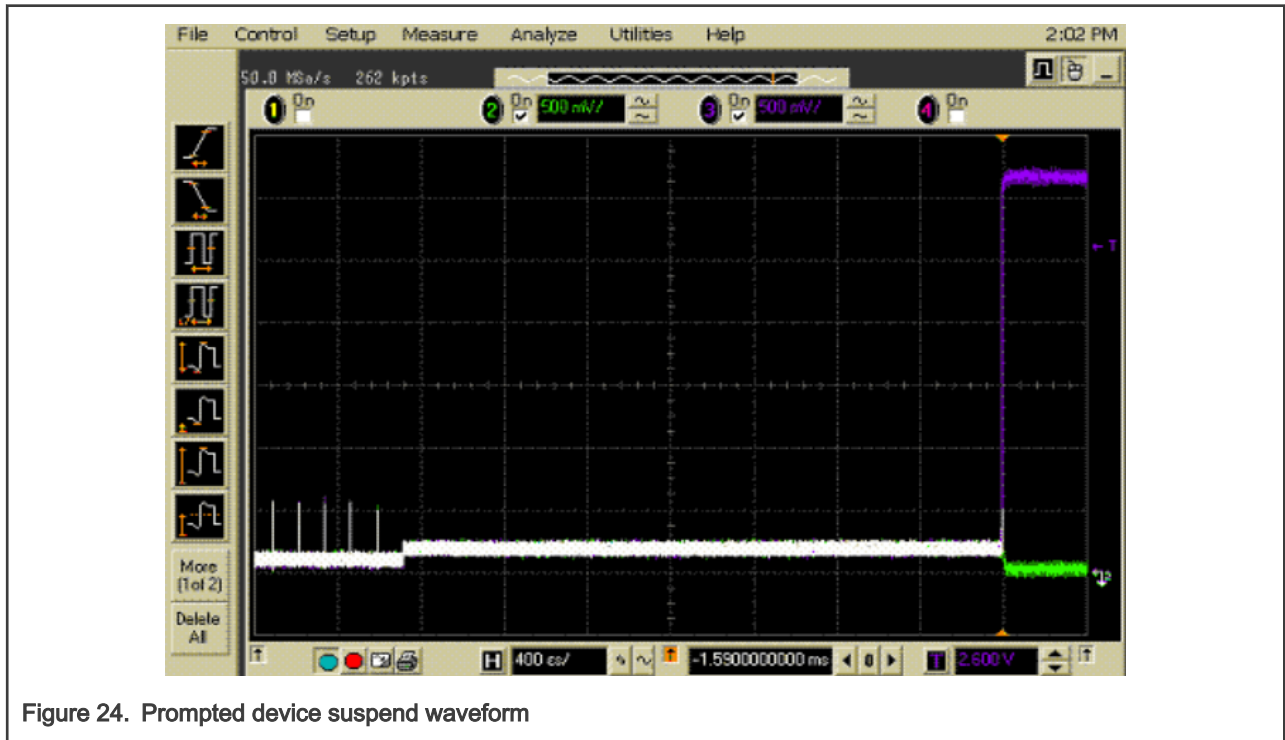


Figure 24. Prompted device suspend waveform

- On the **Device Test** menu of the HS electrical test tool, select **RESUME** from the **Device Command** drop-down menu. Click **EXECUTE** once to resume the device from suspend. The waveform that the oscilloscope catches is similar to the waveform prompted in the automated test software. Click **OK**.




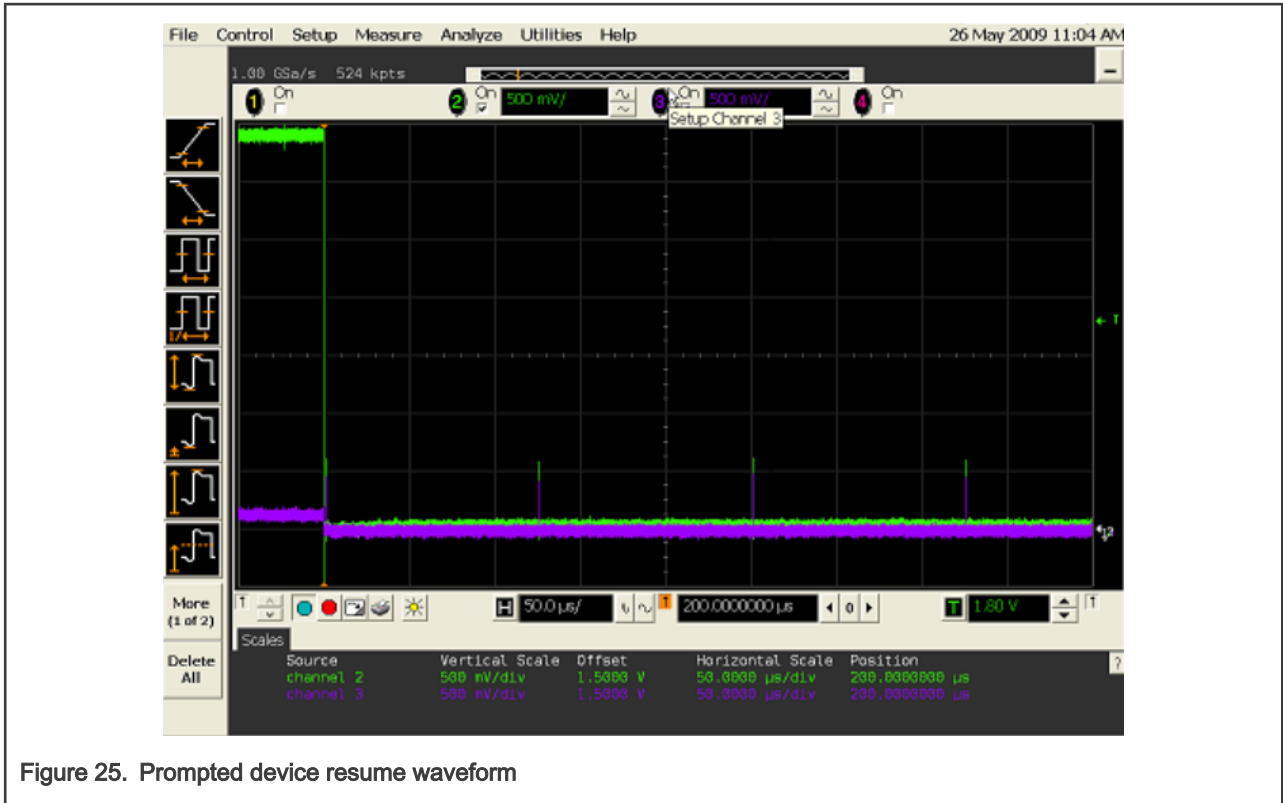


Figure 25. Prompted device resume waveform

- On the **Device Test** menu of the HS electrical test tool, select **RESET** from the **Device Command** drop-down menu. Click **EXECUTE** once to reset the device operating in high speed. The waveform that the oscilloscope catches is similar to the waveform prompted in the automated test software. Click **OK**.

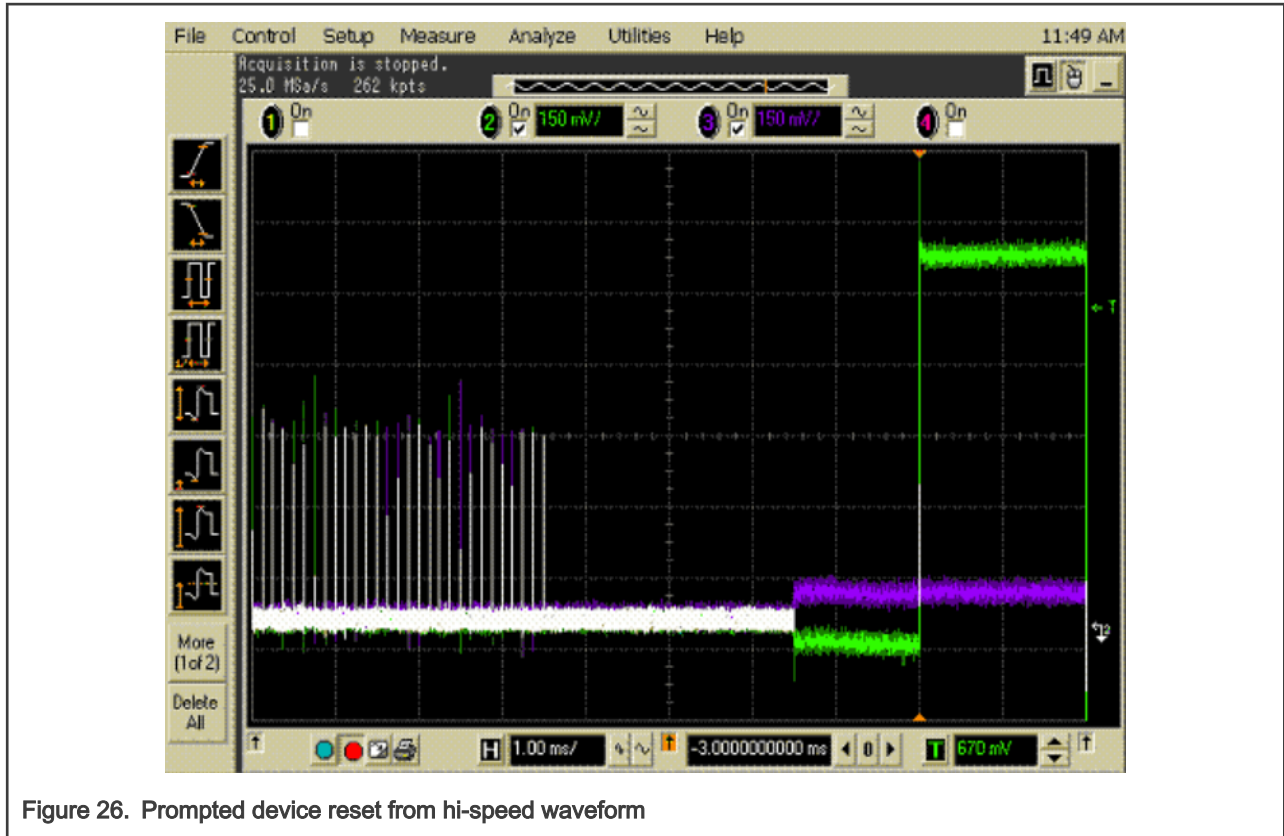

7. Select **SUSPEND** and click **EXECUTE** again to place the device into suspend once more. To reset the device from suspend, select **RESET** and click **EXECUTE** once. The waveform that the oscilloscope catches is similar to the waveform prompted in the automated test software. When the **Testing Complete** dialog appears, click **OK**.

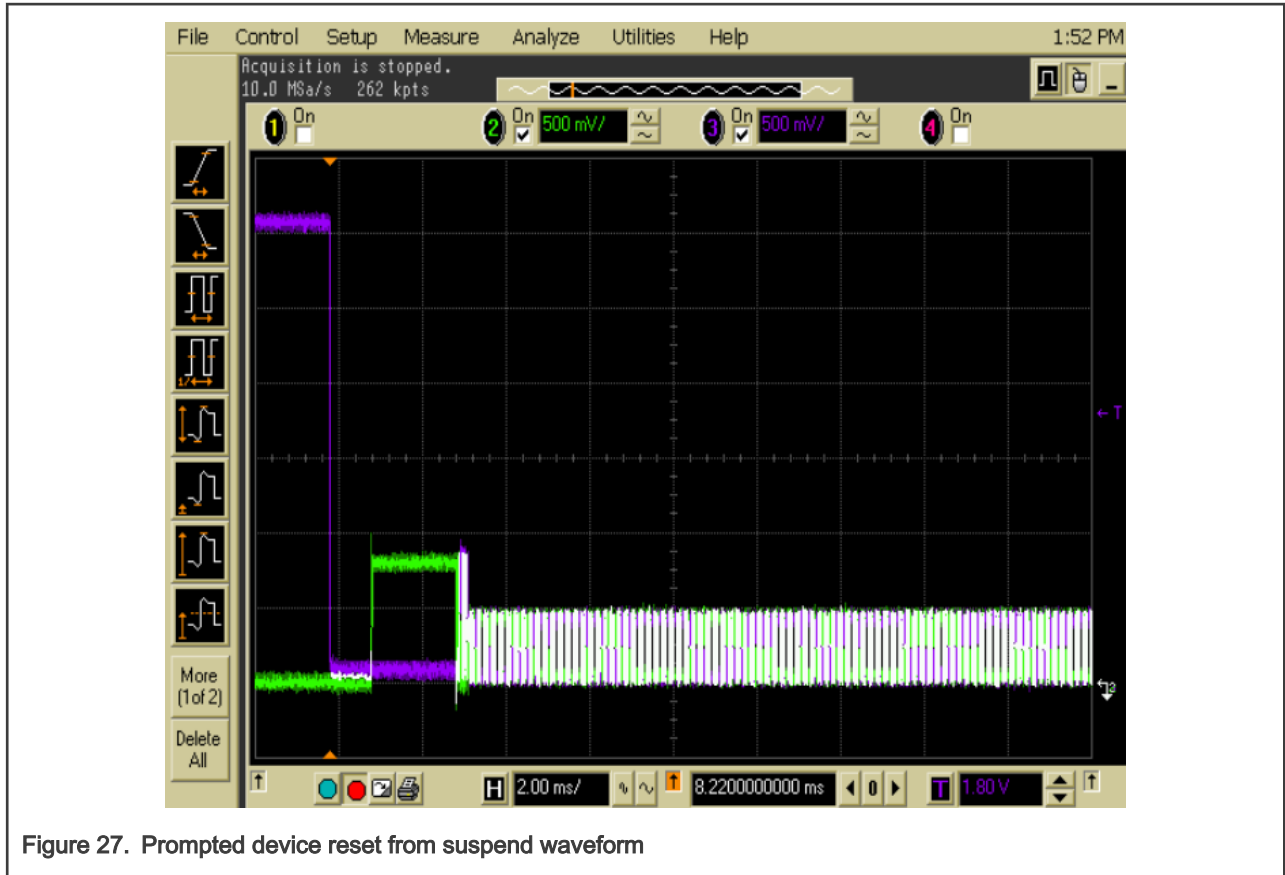


Figure 27. Prompted device reset from suspend waveform

### 3.1.1.5 Device Test J/K, SE0\_NAK test procedure

This item tests the voltage of the two data lines when the device is in the three differential signal states of J, K, and SE0. [Table 6](#) lists the equipment used in the test.

Table 6. Equipment used in Device Test J/K, SE0\_NAK test

| Item  | Model                                | Quantity |
|---|--------------------------------------|----------|
| Multimeter  | Any                                  | 1        |
| Host test bed computer                                | Any computer with hi-speed USB ports | 1        |
| Device HS Signal Quality test fixture and 4"USB cable | Keysight E2649-66401                 | 1        |
| 5 V power supply                                      | Keysight 0950-2546 or equivalent     | 1        |
| 5 meter USB 2.0 hi-speed cable                        | Any listed on USB-IF website         | 1        |

To run the test, perform the following steps:

1. Select the test items in the automated test software on the oscilloscope, as shown in [Figure 28](#). There is no need to use an oscilloscope to capture the waveform in this test. To form a complete report, use a multimeter to measure the voltage and input the measurement into the test software.

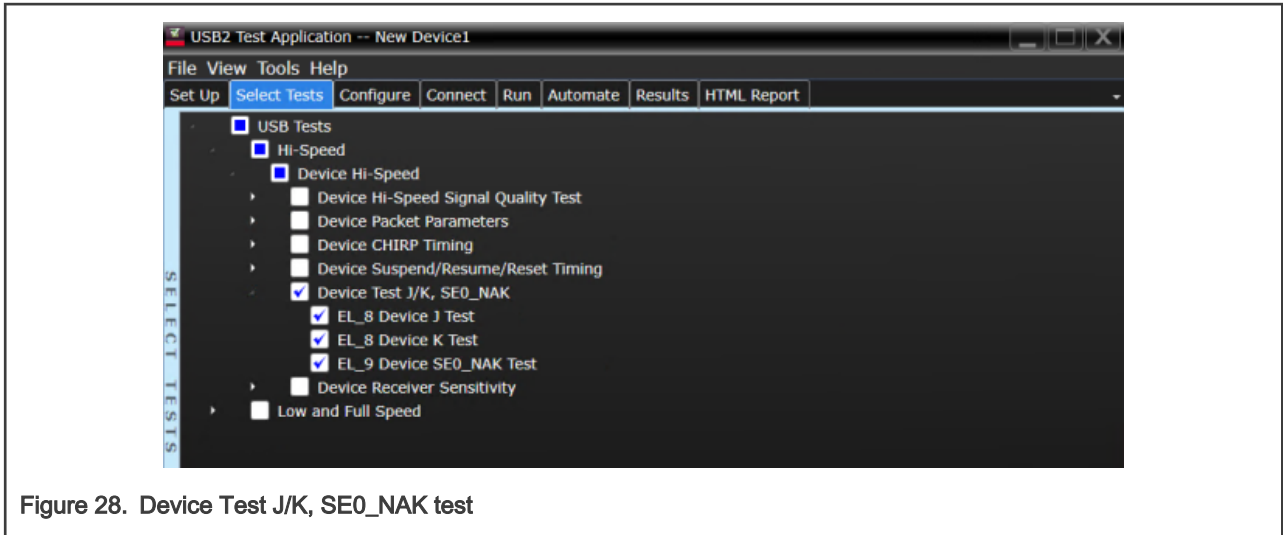


Figure 28. Device Test J/K, SE0\_NAK test

- As shown in Figure 29, connect the test equipment and place the switch in the test switch to **OFF** position. Verify that the green power LED is lit and the yellow test LED is OFF.

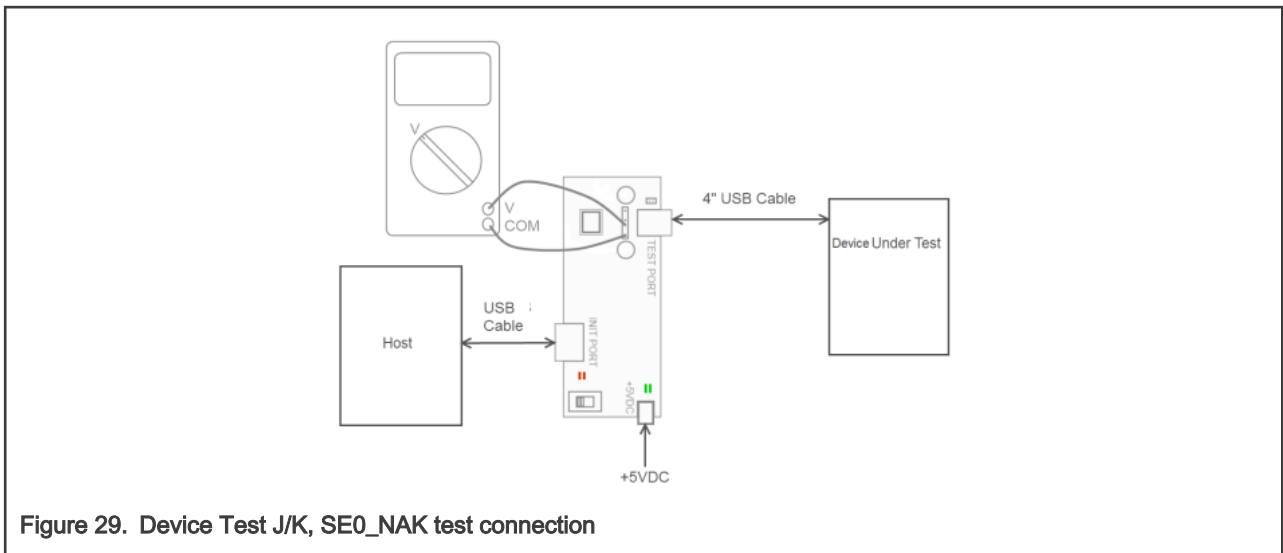


Figure 29. Device Test J/K, SE0\_NAK test connection

- Reset the power for the EVK and click **Run Tests** on the oscilloscope. On the **Device Test** menu of the HS electrical test tool, click **Enumerate Bus** once.
- Select **TEST\_J** from the **Device Command** drop-down menu, as shown in Figure 30. To place the device into `TEST_J` test mode, click **EXECUTE** once.

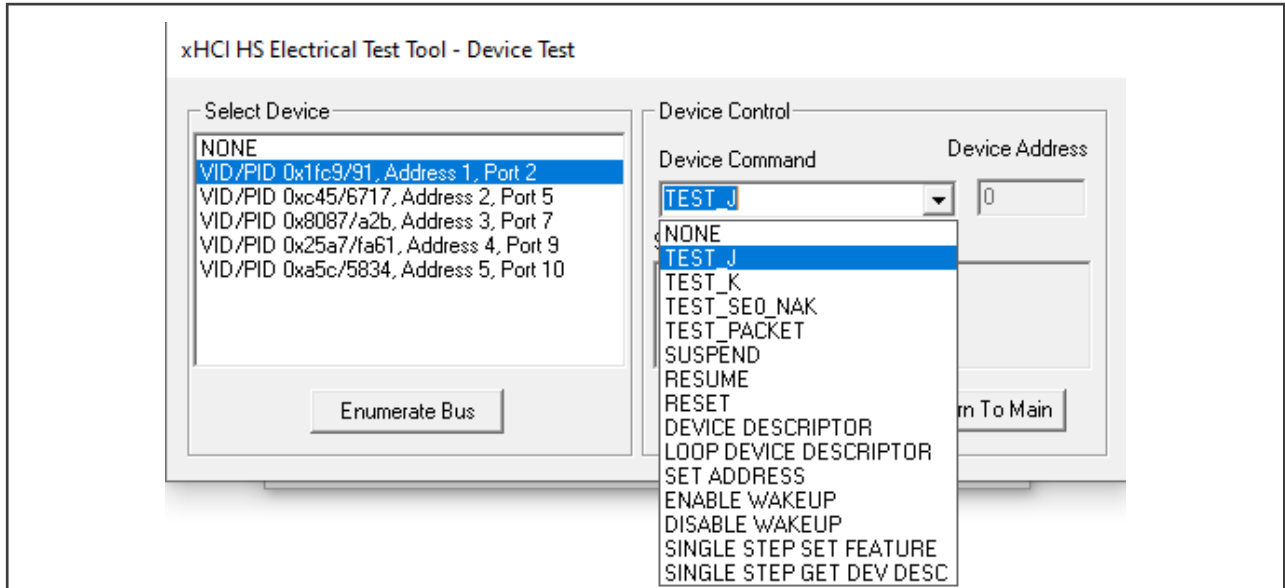


Figure 30. HSETT TEST\_J, TEST\_K and Test\_SE0\_NAK command

5. Switch the test fixture into the **TEST** position. Use a multimeter to measure the DC voltage on the D+/D- lines at TP2 with respect to GND. Record the measurement in the pop-up dialog of the oscilloscope. Click **OK**.

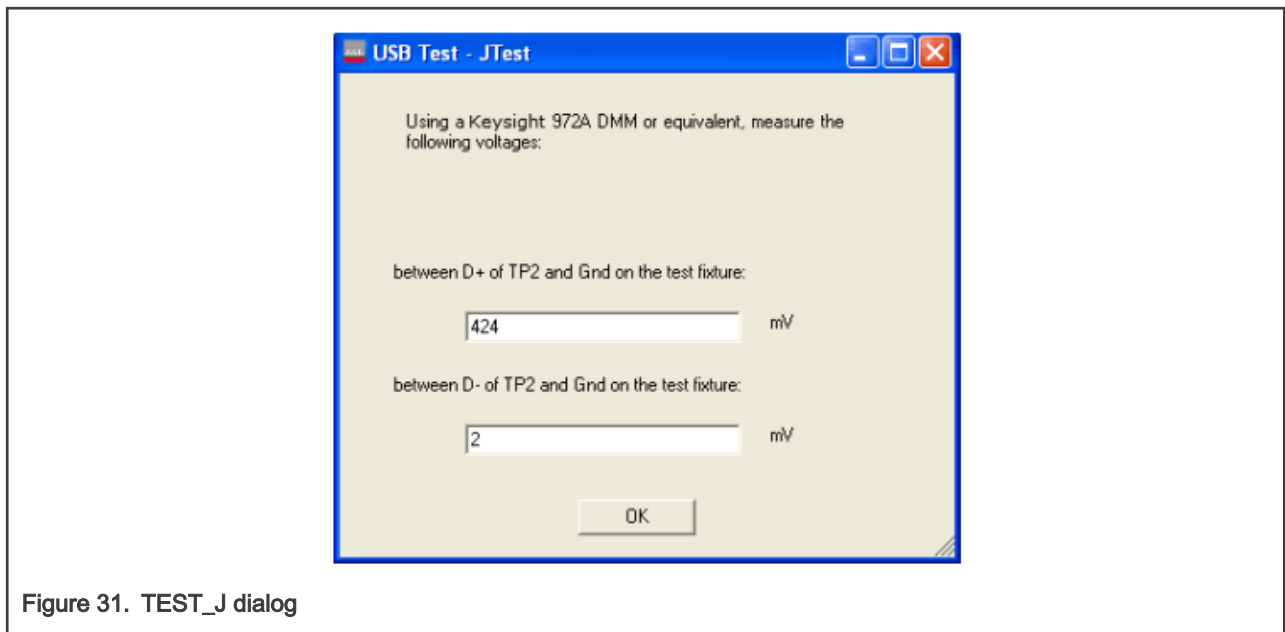


Figure 31. TEST\_J dialog

6. Return the test switch of the test fixture to the **NORMAL** position. Reset the power for the EVK. On the **Device Test** menu of the HS electrical test tool, click **Enumerate Bus** once.
7. Select **TEST\_K** from the **Device Command** drop-down menu. To place the device into TEST\_K test mode, click **EXECUTE** once.
8. Switch the test fixture into the **TEST** position and verify that the yellow test LED is lit. Use a multimeter to measure the DC voltage on the D+/D- lines at TP2 with respect to GND. Record the measurement in the pop-up dialog of the oscilloscope. Click **OK**.

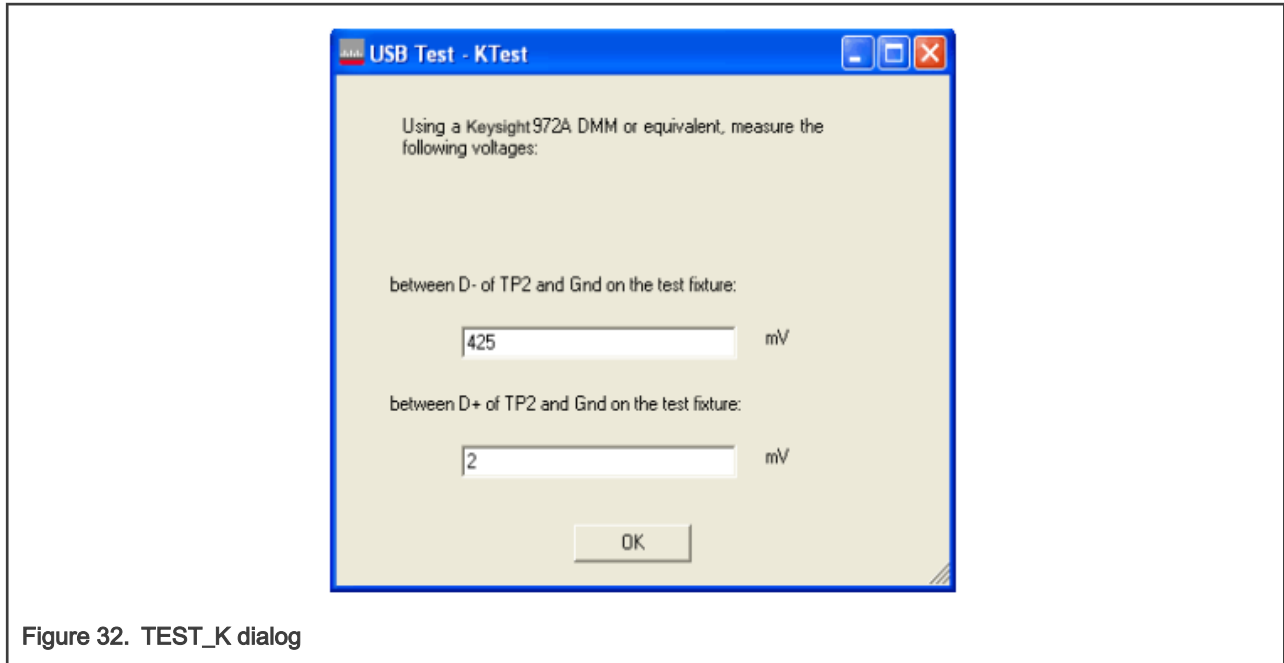


Figure 32. TEST\_K dialog

9. Return the test switch of the test fixture to the **NORMAL** position. Reset the power for the EVK. On the **Device Test** menu of the HS electrical test tool, click **Enumerate Bus** once.
10. Select **TEST\_SE0\_NAK** from the **Device Command** drop-down menu. To place the device into TEST\_SE0\_NAK mode, click **EXECUTE** once.
11. Switch the test fixture into the **TEST** position. Verify that the yellow test LED is lit. Use a multimeter to measure the DC voltage on the D+/D- lines at TP2 with respect to GND. Record the measurement in the pop-up dialog of the oscilloscope. Click **OK**.

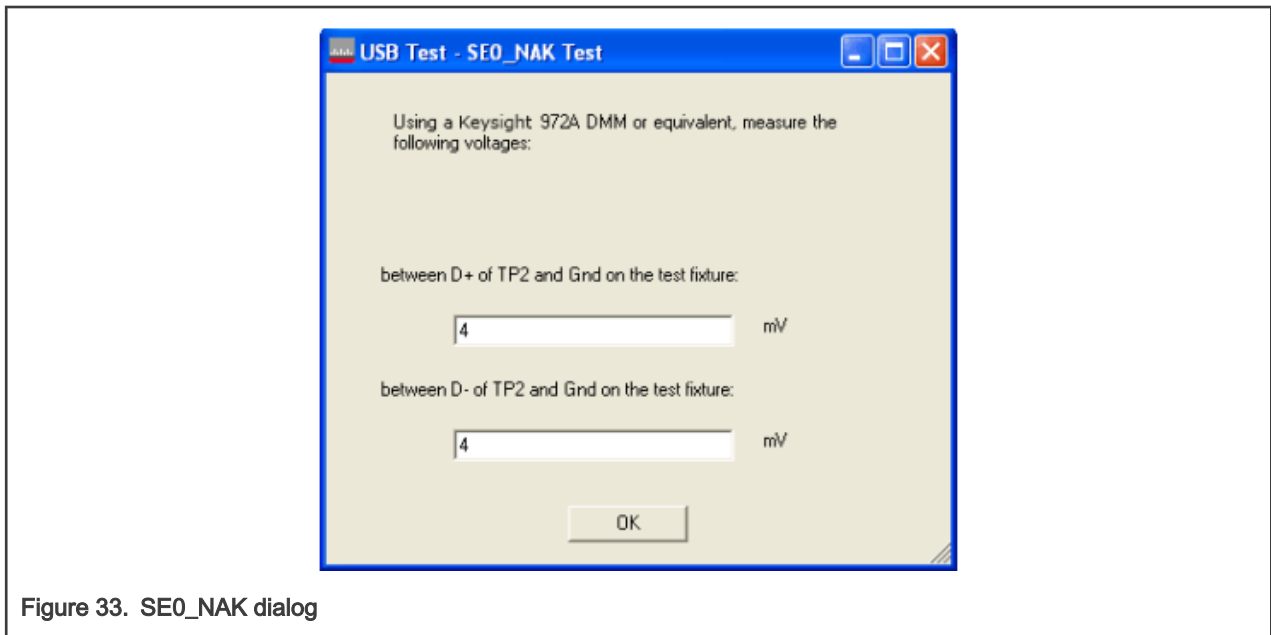


Figure 33. SE0\_NAK dialog

### 3.1.1.6 Device Receiver Sensitivity test procedure


Due to the lack of signal generating equipment, this application note does not introduce the pre-test of the receiver sensitivity but lists the procedure of the receiver sensitivity test. [Table 7](#) lists the equipment used in the test.

**Table 7. Equipment used in Device Receiver Sensitivity test**


| Item   | Model                               | Quantity |
|--|-------------------------------------|----------|
| Oscilloscope   | Keysight DSOS604A                   | 1        |
| Differential probe   | Keysight 1131B with E2678B          | 1        |
| Host test bed computer                                     | Any computer with hi-speed USB port | 1        |
| Receiver Sensitivity test fixture and 4" USB cable         | Keysight E2649-66403                | 1        |
| 5 V power supply   | Keysight 0950-2546 or equivalent    | 1        |
| Digital signal generator                                   | Keysight 81160A                     | 1        |
| USB/GPIB interface   | Keysight 82357B                     | 1        |
| 6 dB attenuators   | Keysight 8493C                      | 2        |
| 50-ohm-coaxial cable with male SMA connectors at both ends | Keysight 8120-4948                  | 2        |
| 5-meter USB2.0 hi-speed cable                              | Any listed on USB-IF website        | 1        |

To run the test, perform the following steps:

1. Select the test items in the USB automated test software on the oscilloscope, as shown in [Figure 34](#). Connect the equipment and test fixture, as shown in [Figure 35](#). Verify that the green power LED is lit and the yellow test LED is OFF.

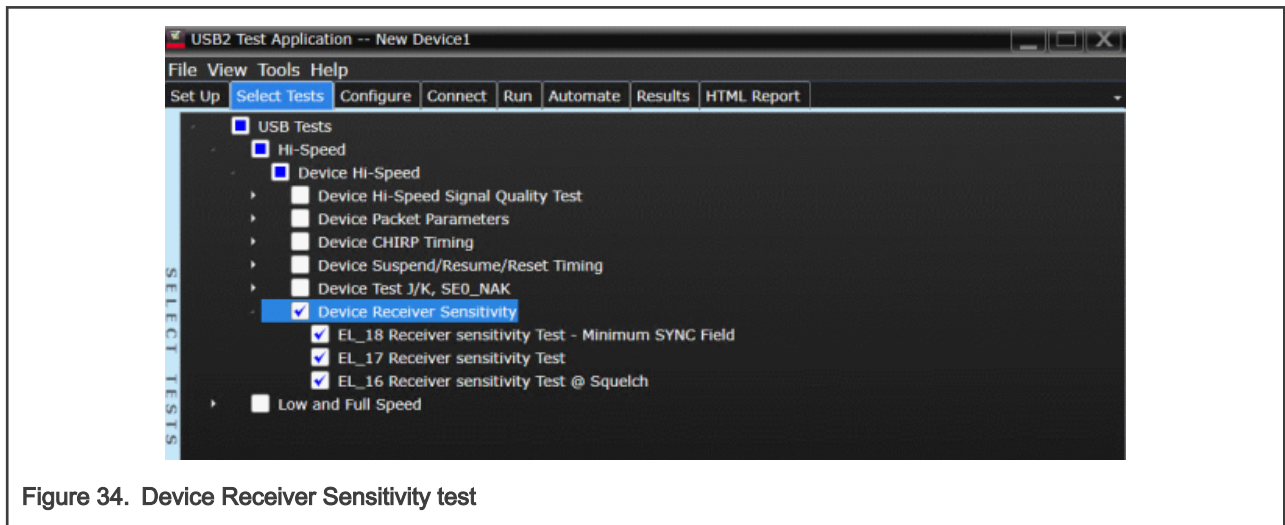

**Figure 34. Device Receiver Sensitivity test**

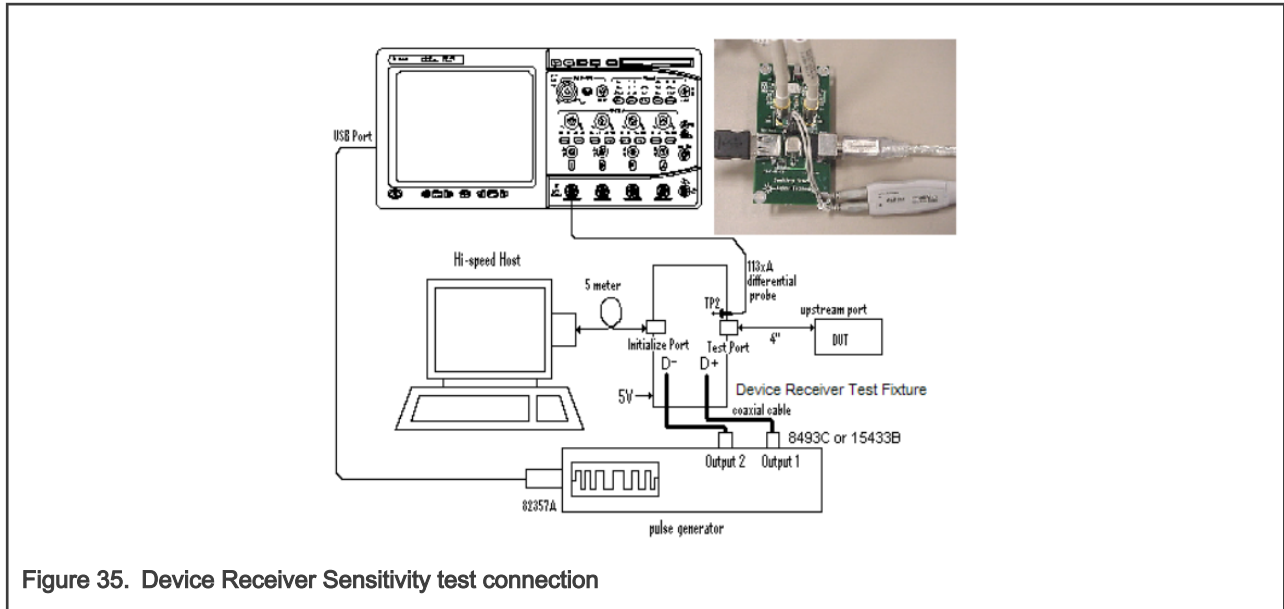

2. Connect the 81130A pulse generator to the oscilloscope through the 82357A USB/GPIB Interface. Connect the 8493C 6 dB attenuators to OUTPUT1 and OUTPUT2 of Agilent 81130A Pulse/Pattern Generator.
3. Use 8120-4948 SMA cables to connect OUTPUT1 to SMA1 (D+) of the E2649-66403 device receiver sensitivity test fixture. Use 8120-4948 SMA cables to connect OUTPUT2 to SMA2 (D-) of the E2649-66403 device receiver sensitivity test fixture.
4. Reset the power for the EVK and click **Run Tests** on the oscilloscope. On the **Device Test** menu of the HS electrical test tool, click **Enumerate Bus** once.
5. Select **TEST\_SE0\_NAK** from the **Device Command** drop-down menu. To place the device into TEST\_SE0\_NAK test mode, click **EXECUTE** once.
6. Place the test fixture Test Switch (S1) into the **TEST** position. This operation switches in the data generator in place of the host controller. The data generator emulates the **IN** packets from the host controller.
7. When the **Testing Complete** dialog appears, click **OK**.

### 3.1.2 Embedded Host Hi-Speed signal test

In a normal host test, the host is a product installed the HS electrical test tool based on windows system to run the test. But for the Embedded Host test, it cannot run the software. USB-IF defines a method of entering the specified test modes via PID/VID detection. The certification lab provides a PIDVID board to perform the host or embedded host test. To set this board to different PID, set the DIP switch, as shown in [Figure 36](#).



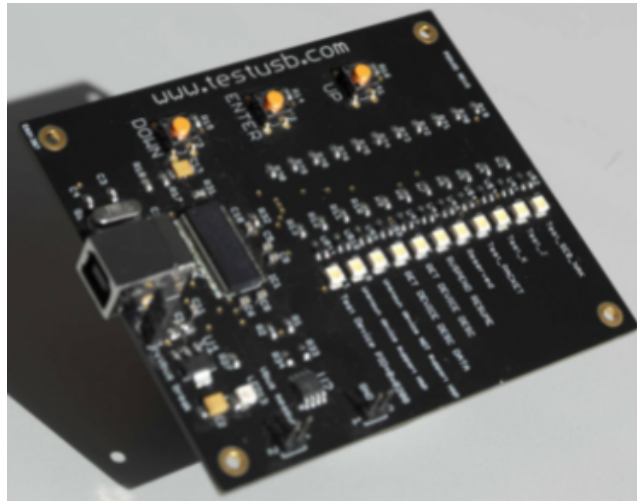


Figure 36. PIDVID board

Due to the lack of this test board, to achieve the same function, this application note uses another EVK board to download the program with different PID to the EVK. When performing the test, fix the VID of the EVK board as 0x1A0A, modify the PID of the EVK, and connect the EVK to the host under test through the test fixture. The host enters the specified test mode. Table 8 lists the commands for different PID.

Table 8. Test modes PID definitions

| PID    | Test mode                     |
|--------|-------------------------------|
| 0x0101 | TEST_SE0_NAK                  |
| 0x0102 | TEST_J                        |
| 0x0103 | TEST_K                        |
| 0x0104 | TEST_PACKET                   |
| 0x0105 | RESERVED                      |
| 0x0106 | HS_HOST_PORT_SUSPEND_RESUME   |
| 0x0107 | SINGLE_STEP_GET_DEV_DESC      |
| 0x0108 | SINGLE_STEP_GET_DEV_DESC_DATA |

The embedded Host Hi-Speed signal test items include:

- Embedded Host Hi-Speed Signal Quality test
- Embedded Host Controller Packet Parameters test
- Host CHIRP Timing test
- Host Suspend/Resume Timing test
- Host Test J/K, SE0\_NAK test

Table 9 describes the electrical test limits for the high-speed host.

**Table 9. HS host electrical test limits**

| Test name  | Pass limits   |
|--|---|
| EL_2 Data rate   | Within 480 Mb/s +/-0.05%  |
| EL_3 Data Eye and Mask Test                                | Must meet Template 1 transform waveform requirements at TP2     |
| EL_6 Host rise/fall time                                   | >500 ps   |
| EL_7 Host Non-Monotonic Edge Test                          | Must have monotonic data transitions over the vertical openings |
| EL_21 Sync Field Length Test                               | 32 bits, 65.62 ns <= VALUE <= 67.700 ns                         |
| EL_25 EOP Length Test                                      | 8 bits, 15.620 ns <= VALUE <= 17.700 ns                         |
| EL_23 Inter-packet gap between first 2 Packets Test        | 183.000 ns <= VALUE <= 399.400 ns                               |
| EL_55 SOF EOP Width Test                                   | 40 bits, 81.100 ns <= VALUE <= 83.388 ns                        |
| EL_22 Inter-packet gap between Host and Device Packet Test | 16.640 ns <= VALUE <= 399.90 ns                                 |
| EL_33 CHIRP timing response                                | 1 ns <= VALUE <= 100.000 $\mu$ s                                |
| EL_34 CHIRP J/K width                                      | 40.000 $\mu$ s <= VALUE <= 60.000 $\mu$ s                       |
| EL_35 SOF Timing Response                                  | 100.000 $\mu$ s <= VALUE <= 500.000 $\mu$ s                     |
| EL_39 Suspend Timing Response                              | 3.000 ms <= VALUE <= 3.125 ms                                   |
| EL_41 Resume Timing Response                               | VALUE <= 3.000 ms   |
| EL_8 Host J Test   | 360 mV <= D+ <= 440 mV -10mV <= D- <= 10 mV                     |
| EL_8 Host K Test   | 360 mV <= D- <= 440 mV -10 mV <= D+ <= 10 mV                    |
| EL_9 Host SE0_NAK Test                                     | -10 mV <= D+ <= 10 mV -10 mV <= D- <= 10 mV                     |

Select the Host option and check **Embedded Host** in the USB automated test software on the oscilloscope, as shown in [Figure 37](#).

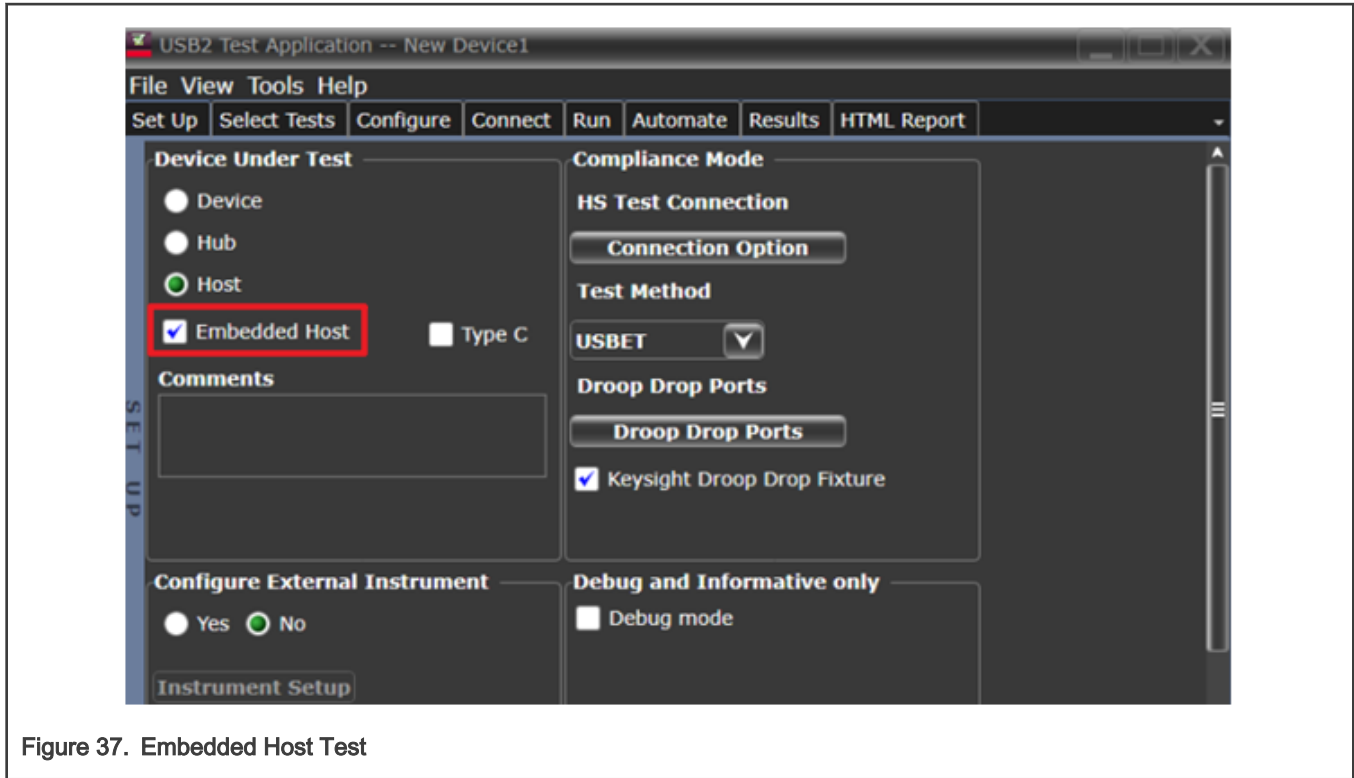


Figure 37. Embedded Host Test

### 3.1.2.1 Host Hi-Speed Signal Quality test procedure

Table 10 lists the equipment used in the test.

Table 10. Equipment used in Device Hi-Speed Signal Quality test

| Item   | Model                            | Quantity |
|--|----------------------------------|----------|
| Oscilloscope   | Keysight DSOS604A                | 1        |
| Differential probe   | Keysight 1131B with E2678B       | 1        |
| PIDVID board   | MIMXRT1010-EVK simulated         | 1        |
| Host Hi-Speed Signal Quality test fixture and 4" USB cable | Keysight E2649-66402             | 1        |
| 5 V power supply   | Keysight 0950-2546 or equivalent | 1        |
| USB cable  | Micro-B plug OTG cable           | 1        |

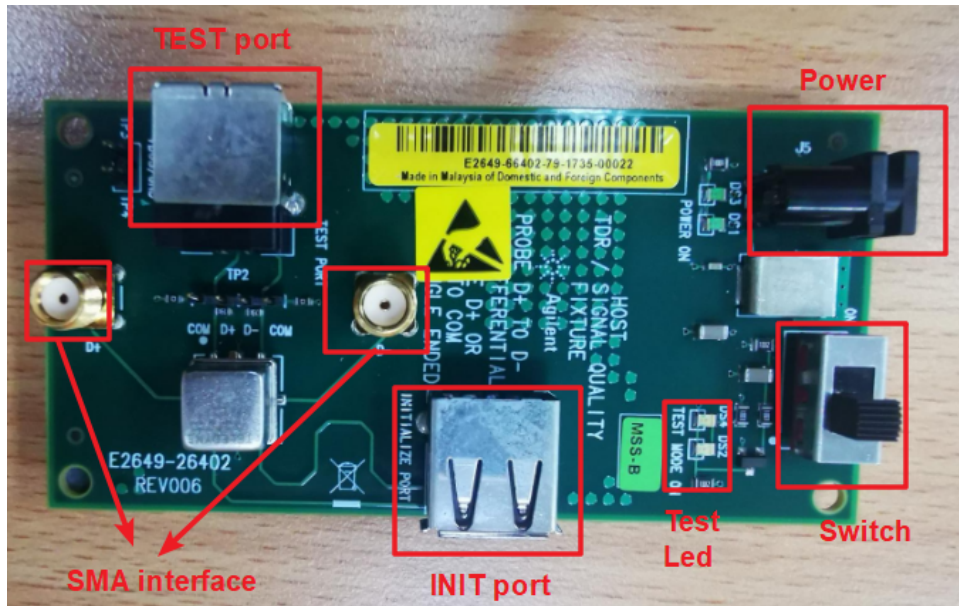


Figure 38. E2649-66402 entity

To run the test, perform the following steps:

1. Select the test items in the USB automated test software on the oscilloscope, as shown in Figure 39. Before running the test, set the test type to **Hi-Speed Near End**.


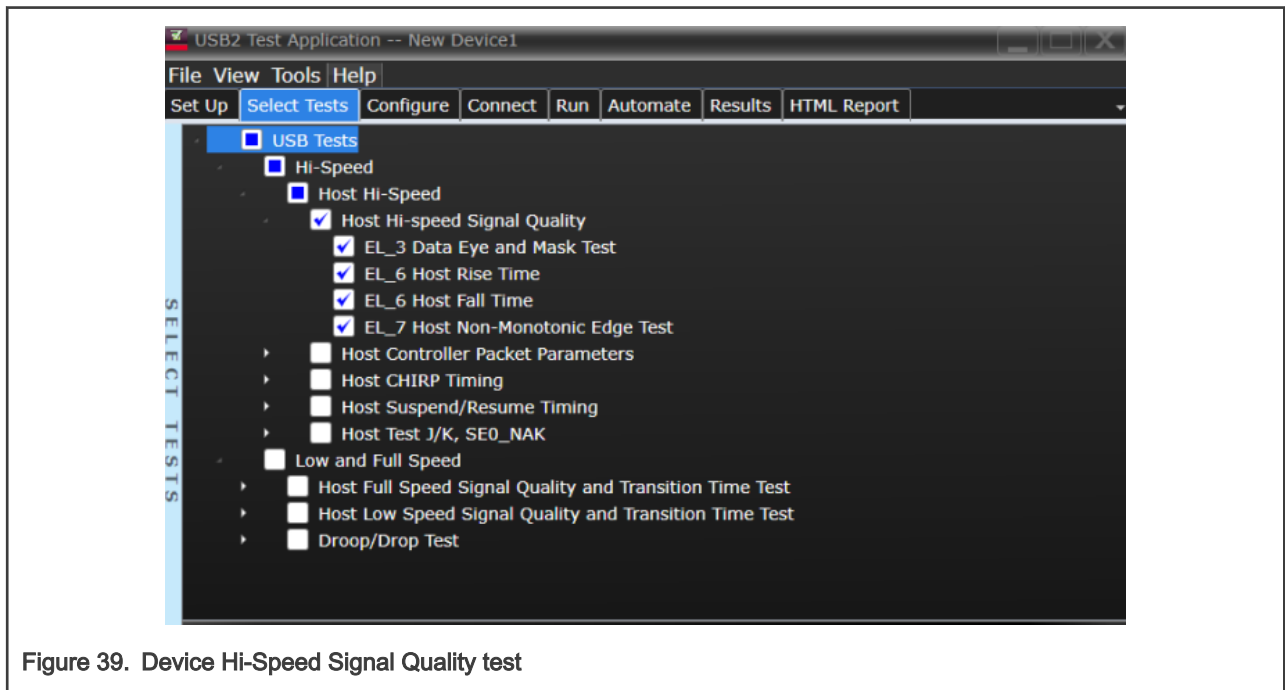


Figure 39. Device Hi-Speed Signal Quality test

2. Connect the test-embedded host board, fixture, and oscilloscope, as shown in Figure 40. Connect the 50 ohm terminator to the SMA interface on the fixture.

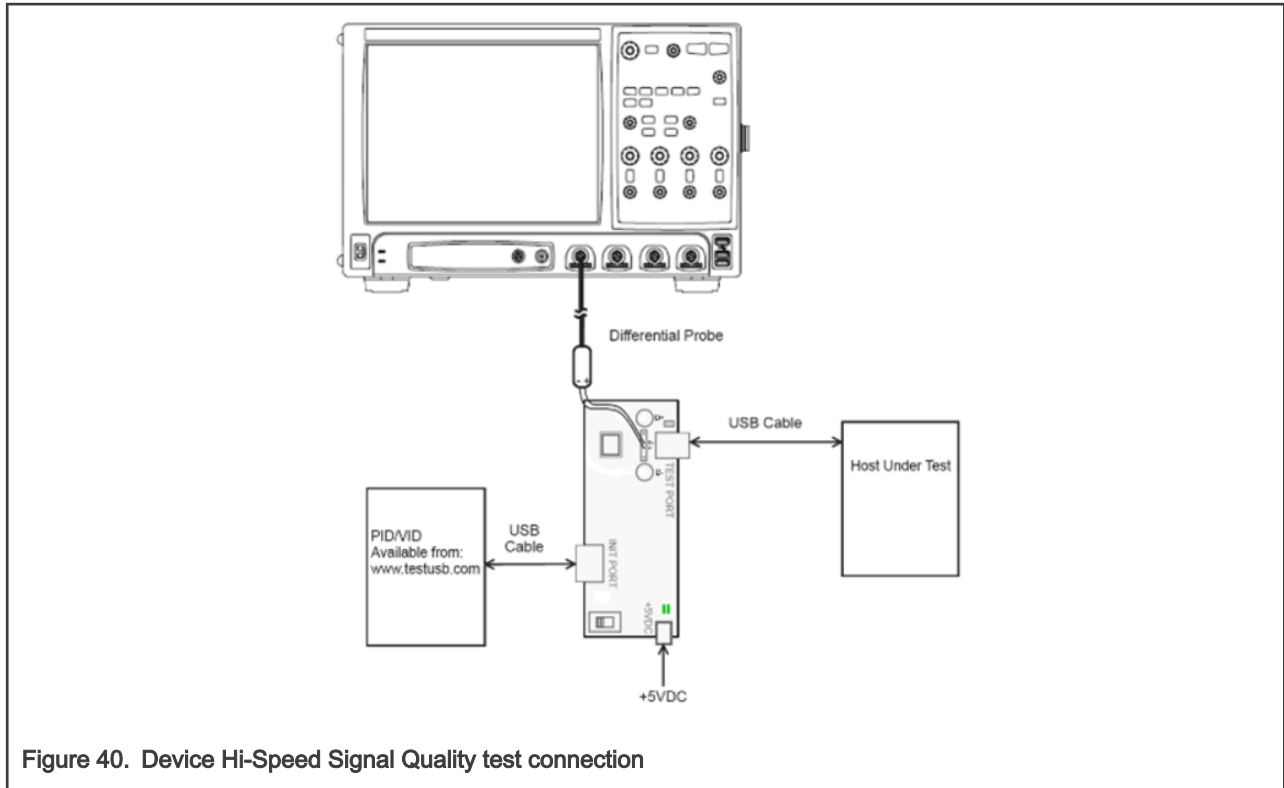

3. Attach the 5 V power supply to J5 of the E2649-26402 Hi-Speed Signal Quality test fixture. Verify that the green power LED, **D1**, is lit.
4. Use an OTG cable to connect the Micro-AB receptacles. Use a 4-inch USB cable to connect the **Test Port** of the test fixture into the downstream facing port of the type-A connector of the OTG cable.
5. Choose a USB device demo. Modify the VID to `0x1A0A` and PID to `0x0104`. Compile and download it to a MIMXRT1010-EVK. Connect the USB port of MIMXRT1010-EVK to the initialize port of the fixture.
6. Attach the differential probe on channel 1 to D+/D- of TP2 on the test fixture. Ensure that the + polarity on the probe lines up with D+.

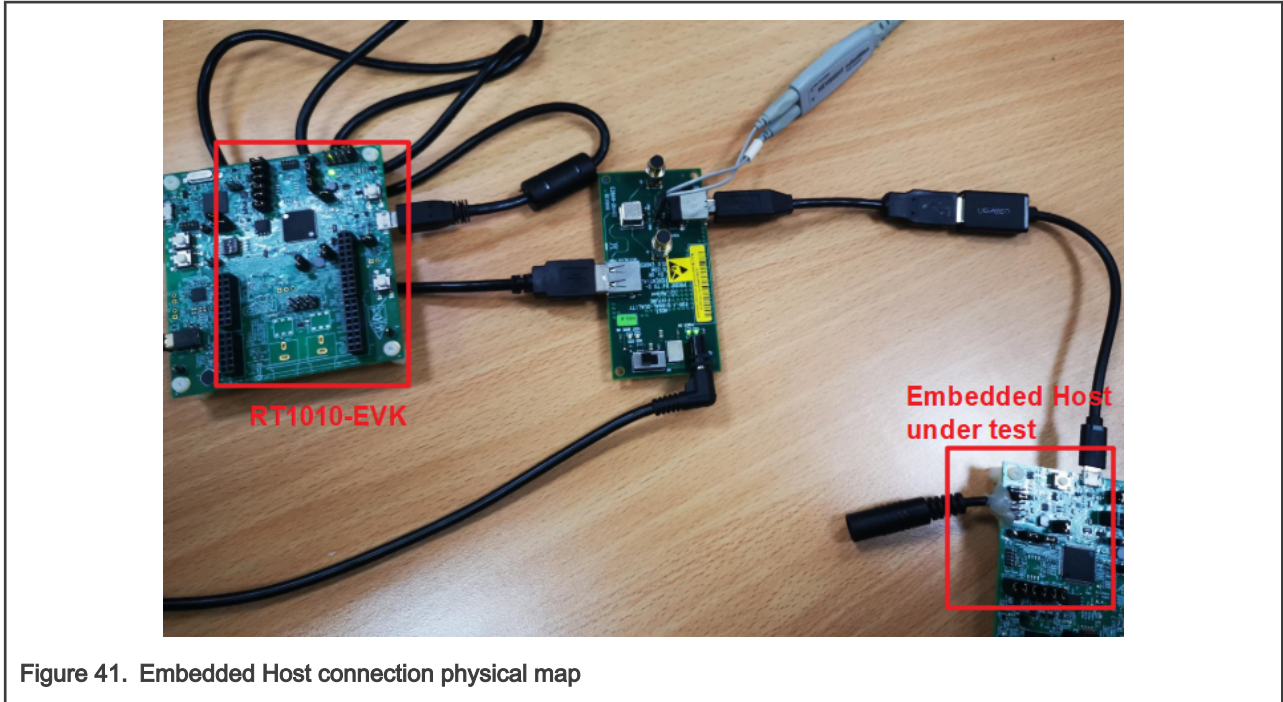


Figure 41. Embedded Host connection physical map

7. Click the **Run Tests** button of the automated test software on the oscilloscope. Enable the power to the Embedded Host under test and the MIMXRT1010-EVK. The host enumerates the RT1010-EVK board and responds to send `Test_Packet` continuously.
8. According to the prompt of the software on the oscilloscope, flip the switch of the test fixture that switches the termination on. Ensure that the yellow Test LED is lit. Confirm that the waveform oscilloscope catch is similar to the waveform prompted in the automated test software.

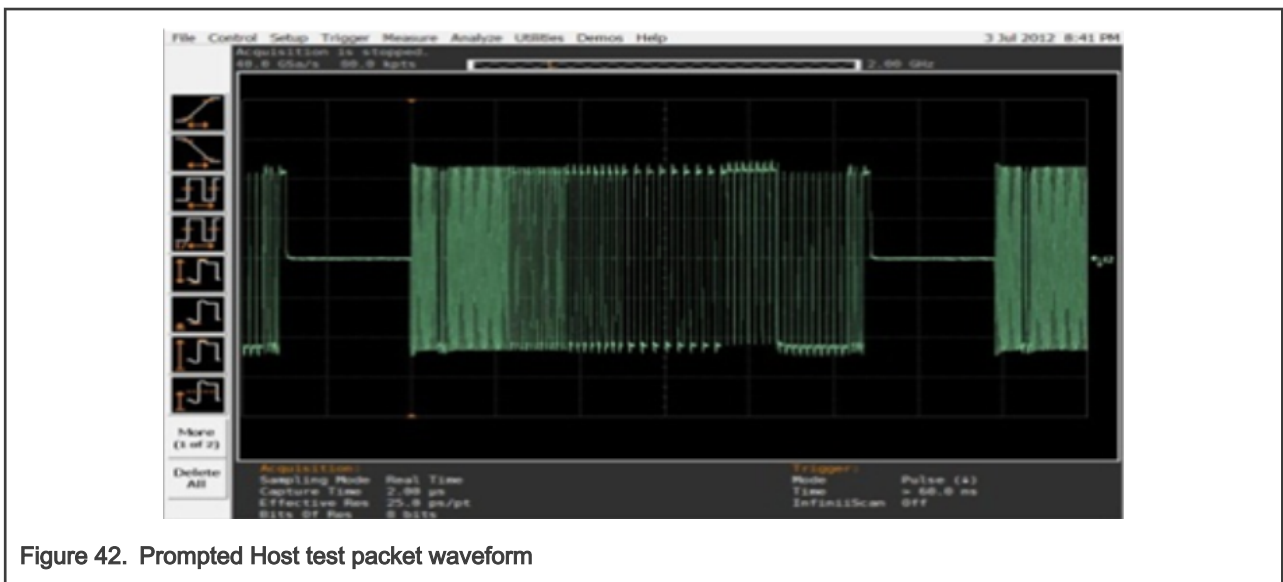


Figure 42. Prompted Host test packet waveform

9. When the **Testing Complete** dialog appears, click **OK** to finish the test.

### 3.1.2.2 Embedded Host Controller Packet Parameters test procedure

The equipment used in this test is same as Embedded Host High-Speed Signal Quality test, except that the 5 V power supply can be kept off all the time.

To run the test, perform the following steps:

1. Select the test items in the USB automated test software on the oscilloscope, as shown in [Figure 43](#). Connect the equipment and test fixture as shown in [Figure 40](#). Connect the 50 ohm terminator to the SMA interface on the fixture.


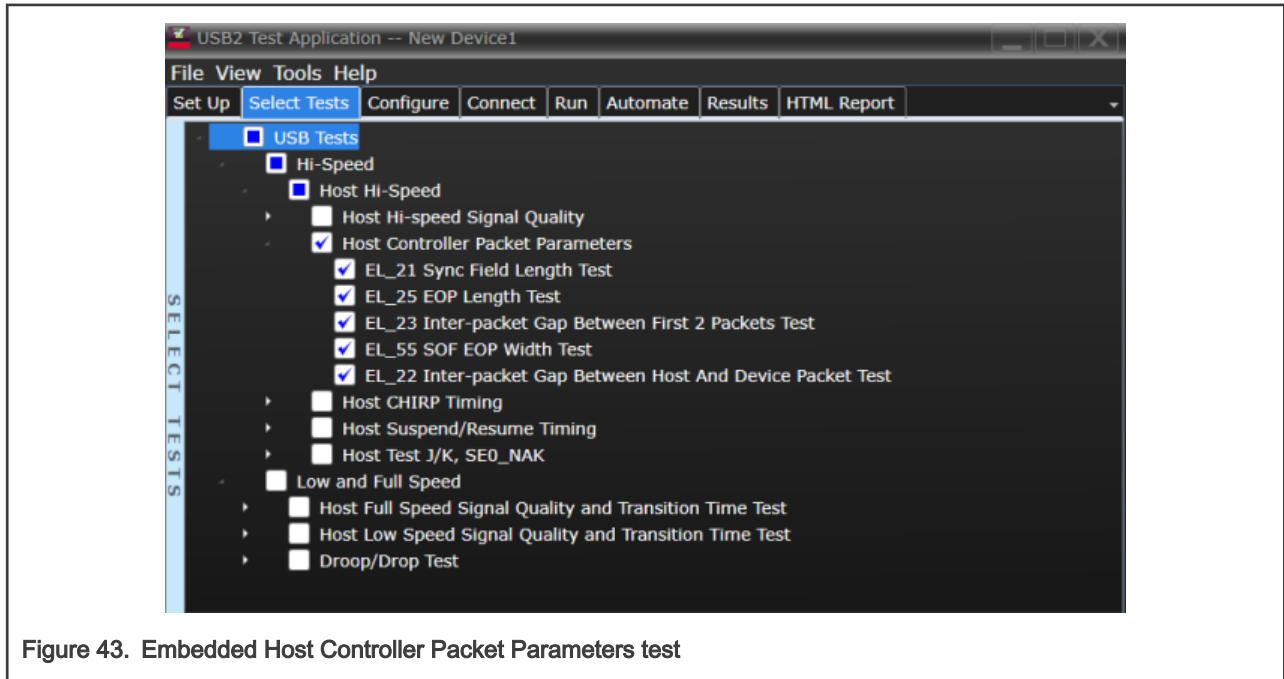


Figure 43. Embedded Host Controller Packet Parameters test

2. The connection of the embedded host under test, fixture, and oscilloscope probe is the same as the Signal Quality test.
3. Modify the PID of the demo to `0x0107`, re-compile, and download it to RT1010-EVK. Use a USB cable to connect the RT1010-EVK to the initialize port of the fixture.
4. Click the **Run Tests** button of the automated test software on the oscilloscope. The host enumerates the RT1010-EVK and responds to send SOFs for 15 seconds. Click **OK**.
5. After 15 seconds of SOFs the host initiates the setup phase of the `GetDescriptor()` command. The host sends **SETUP** and **DATA** (first and second packet). The device sends an **ACK**. The waveform that the oscilloscope catches is similar to the waveform prompted in the automated test software. Click **OK**.

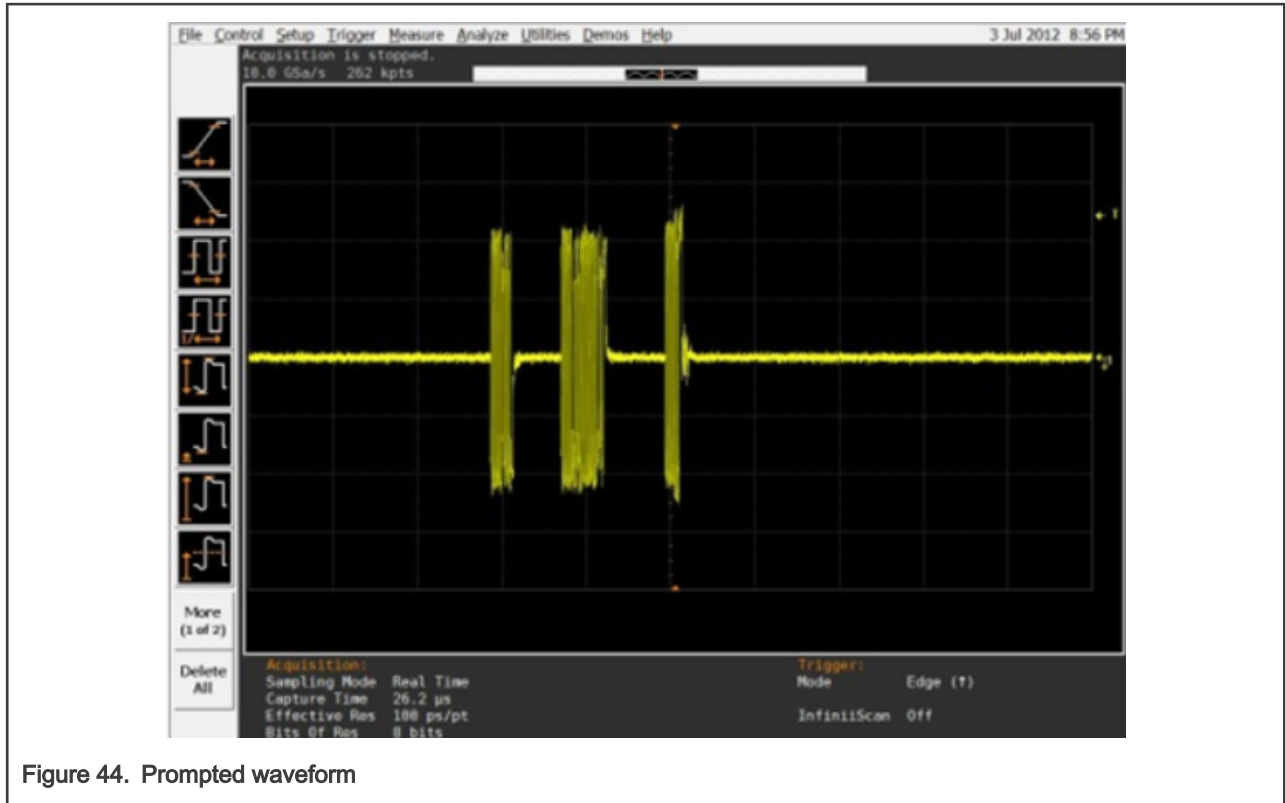

6. Disconnect the RT1010-EVK, modify the PID of the demo to `0x0108`, and download to the EVK again. Reconnect it to the test fixture.
7. The host enumerates the PID/VID, request `GetDescriptor()`, and waits for 15 seconds. The host issues an **IN**, the device responds with a **DATA**, and then the host sends an **ACK**. The oscilloscope catches the three packets and the waveform is similar to the waveform prompted in the automated test software. Click **OK**.





Figure 45. Prompted waveform

### 3.1.2.3 Host CHIRP Timing Test procedure

Table 11 lists the equipment used in the Host CHIRP Timing test.

Table 11. Equipment used in Host CHIRP Timing test

| Item   | Model                            | Quantity |
|--|----------------------------------|----------|
| Oscilloscope   | Keysight DSOS604A                | 1        |
| Single-ended probe   | Keysight N2873A                  | 2        |
| PIDVID board   | MIMXRT1010-EVK simulated         | 1        |
| Host Hi-Speed Signal Quality test fixture and 4" USB cable | Keysight E2649-66402             | 1        |
| 5 V power supply   | Keysight 0950-2546 or equivalent | 1        |
| USB cable  | Micro-B plug OTG cable           | 1        |

To run the test, perform the following steps:

1. Select the test items in the USB automated test software on the oscilloscope, as shown in [Figure 46](#).

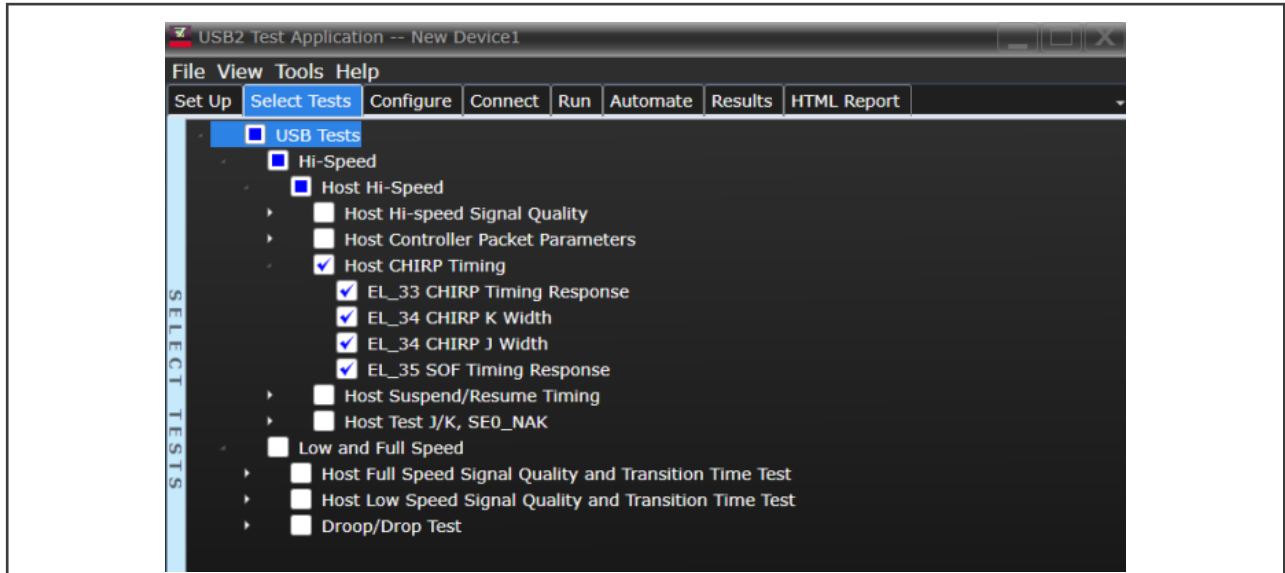


Figure 46. Host CHIRP Timing test

2. Connect the test-embedded host board, fixture, and oscilloscope, as shown in Figure 47. Connect the 50 ohm terminator to the SMA interface on the fixture. Verify that the switch in the fixture is OFF, the green Power LED is lit, and the yellow test LED is not lit.


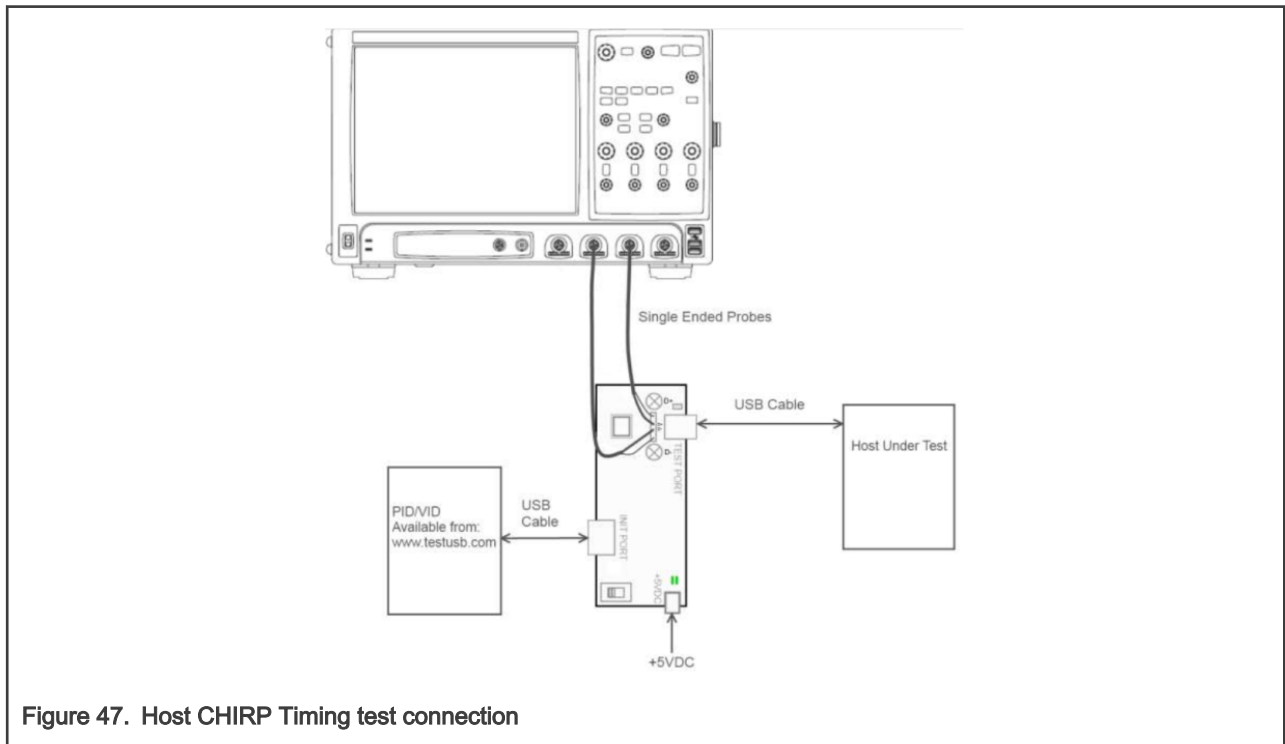


Figure 47. Host CHIRP Timing test connection

3. Connect any known good high speed device to the initialize port.
4. Click the **Run Tests** button of the automated test software on the oscilloscope. The oscilloscope captures the CHIRP handshake. The waveform is similar to the waveform prompted in the automated test software. Click **OK** to finish the test.

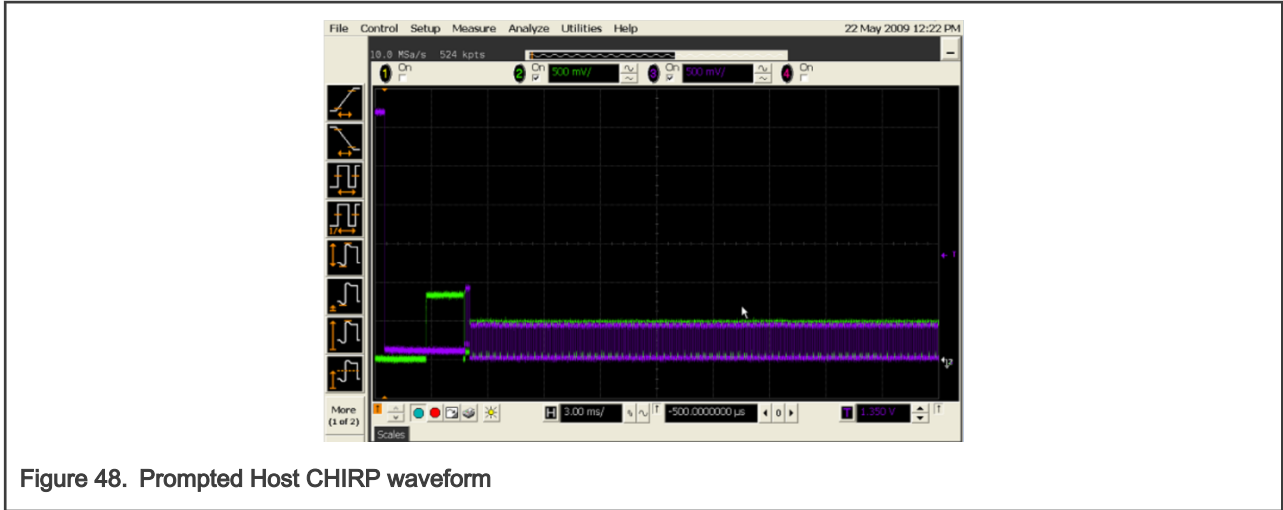


### 3.1.2.4 Host Suspend/Resume Timing Test procedure


The equipment used in this test is the same as Host CHIRP Timing test, as shown in Table 11.

To run the test, perform the following steps:


1. Select the test items in the USB automated test software on the oscilloscope, as shown in Figure 49.

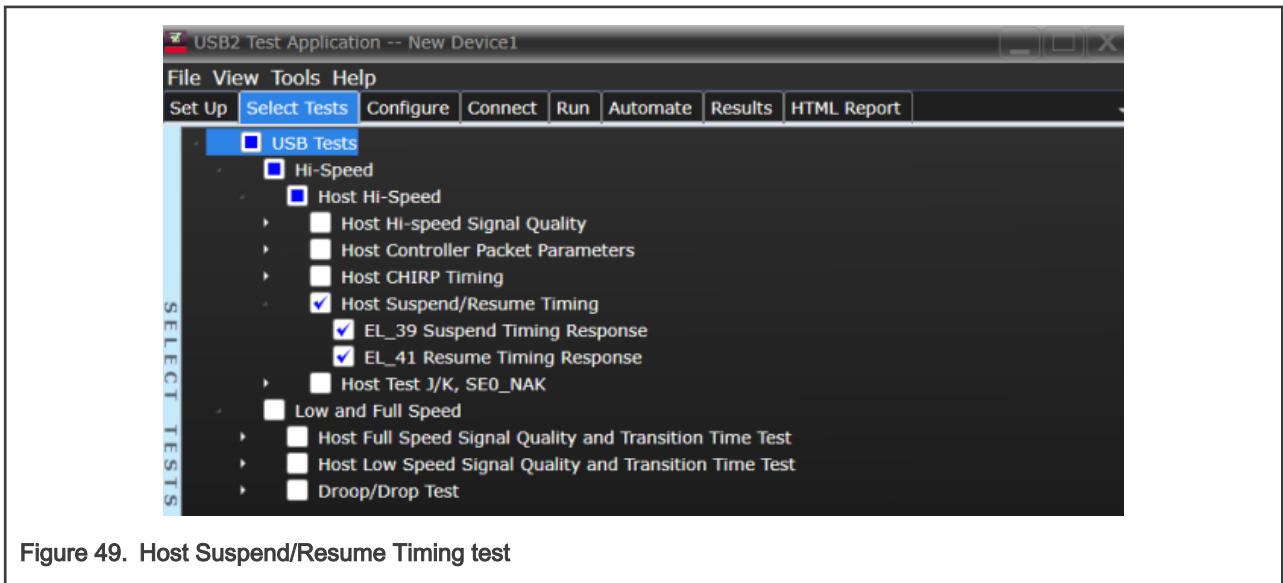

2. Connect the test embedded host board, fixture, and oscilloscope, as shown in Figure 47. Connect the 50 ohm terminator to the SMA interface on the fixture. Verify that the switch in the fixture is OFF, the green Power LED is lit, and the yellow test LED is not lit.
3. Modify the PID of the demo to 0x0106. Compile and download to RT1010-EVK again. Reconnect it to the test fixture.
4. Click the **Run Tests** button. After 15 seconds, the host port enters the Suspend state. The captured transition is similar to the prompt in the automated test software. Click **OK**.

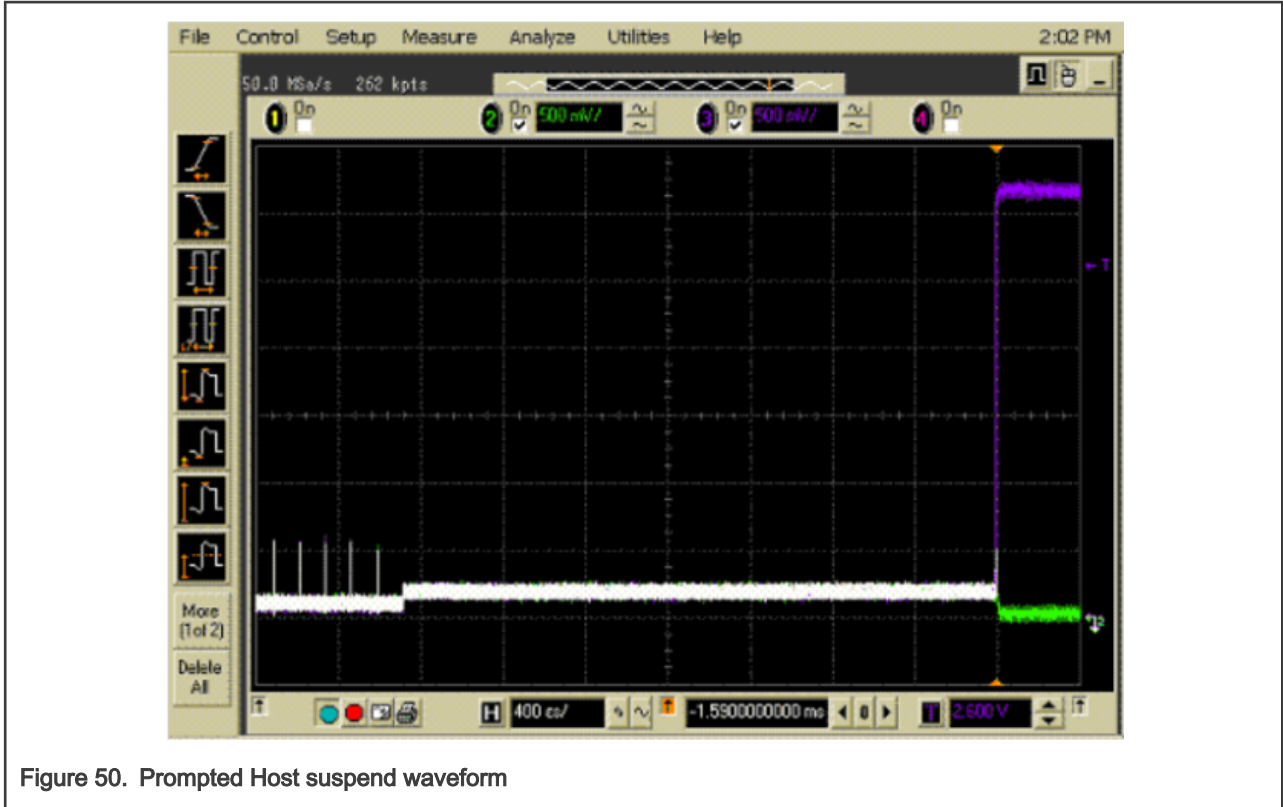

- After 15 seconds in the suspend state, the host issues a **ResumeK** state on the bus and then continues sending SOFs. The waveform that the oscilloscope captures is similar to the waveform prompted in the automated test software. Click **OK** to finish the test.

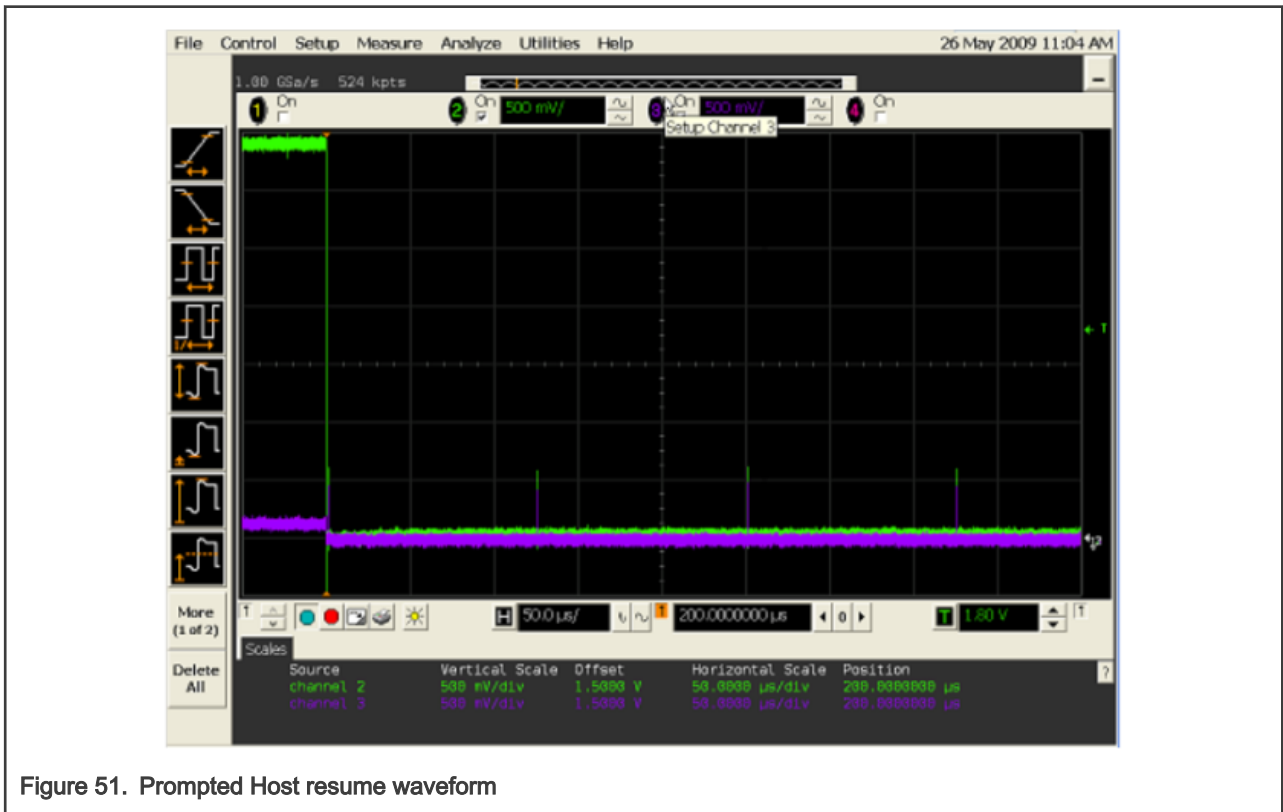

### 3.1.2.5 Host Test J/K, SE0\_NAK test procedure

Table 12 lists the equipment used in the Host Test J/K, SE0\_NAK test.

Table 12. Equipment used in Host Test J/K, SE0\_NAK test

| Item   | Model                            | Quantity |
|--|----------------------------------|----------|
| Multimeter   | Any                              | 1        |
| PIDVID board   | MIMXRT1010-EVK simulated         | 1        |
| Host Hi-Speed Signal Quality test fixture and 4" USB cable | Keysight E2649-66402             | 1        |
| 5V power supply  | Keysight 0950-2546 or equivalent | 1        |
| USB cable  | Micro-B plug OTG cable           | 1        |

To run the test, perform the following steps:

1. Select the test items in the USB automated test software on the oscilloscope, as shown in Figure 52.


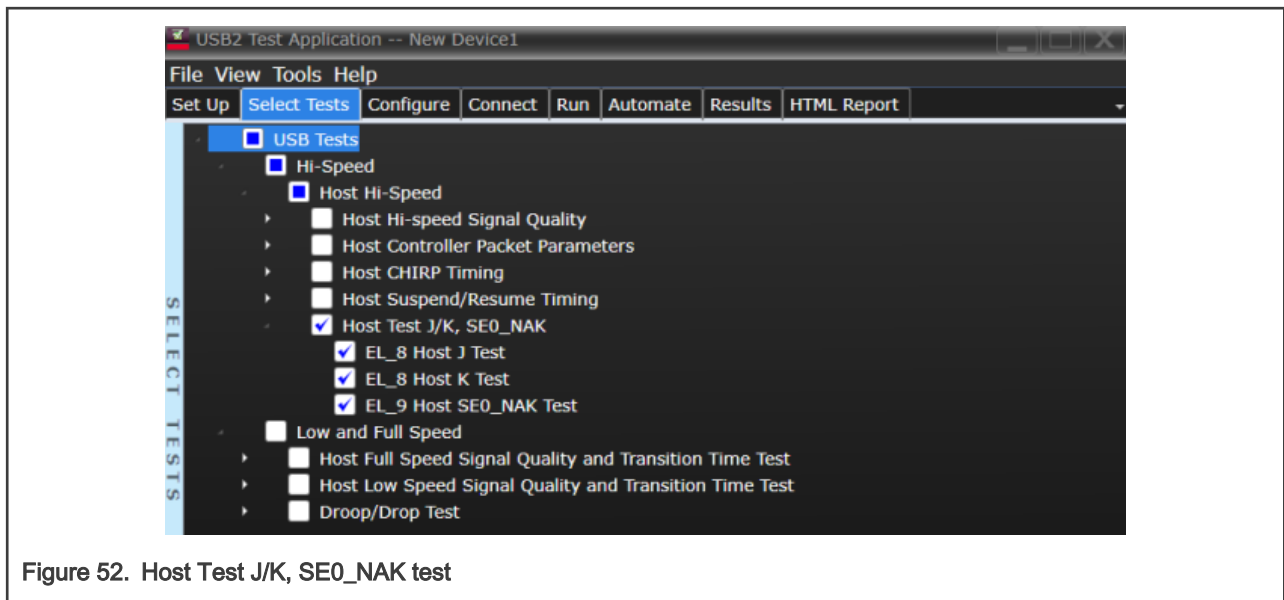


Figure 52. Host Test J/K, SE0\_NAK test

2. Connect the test embedded host board and the fixture, as shown in Figure 53. Connect the 50 ohm terminator to the SMA interface on the fixture. Verify that the switch in the fixture is OFF, the green Power LED is lit, and the yellow Test LED is not lit.

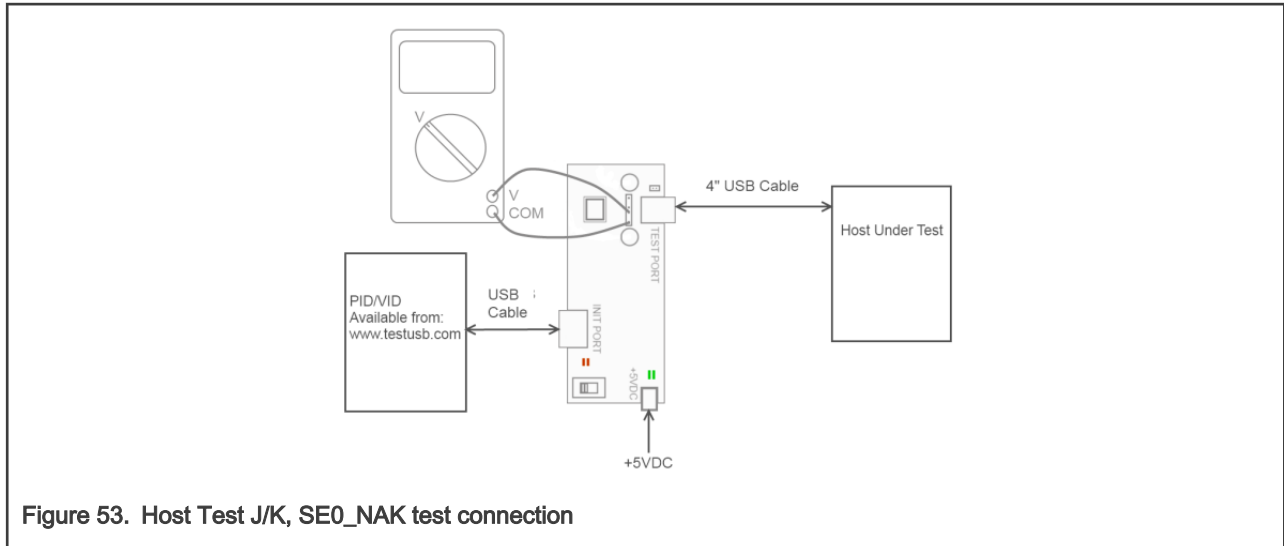

3. Click the **Run Tests** button of the automated test software on the oscilloscope.
4. Modify the PID of the demo to `0x0102`. Compile and download it to RT1010-EVK again. Reconnect it to the test fixture.
5. The host enumerates the RT1010-EVK and enters a high-speed J state (D+ high; D- low).
6. According to the prompt of the software, flip the switch of the test fixture that switches the termination on. Ensure that the yellow test LED is lit. Use a multimeter to measure the DC voltage on the D+/D- lines at TP2 with respect to GND. Record the measurement in the pop out dialog on the oscilloscope. Click **OK**.
7. Flip the test switch to OFF. Reset the power to the embedded host board under test.
8. Disconnect RT1010-EVK board. Modify the PID of the demo to `0x0103`. Compile and download it to RT1010-EVK again. Reconnect it to the test fixture.
9. The host enumerates the PID/VID and enters a high-speed K state (D+ low; D- high).
10. According to the prompt of the software, flip the switch of the test fixture that switches the termination on. Ensure that the yellow test LED is lit. Use a multimeter to measure the DC voltage on the D+/D- lines at TP2 with respect to GND. Record the measurement in the pop-up dialog on the oscilloscope. Click **OK**.
11. Flip the test switch to OFF. Reset the power to the embedded host board under test.
12. Disconnect RT1010-EVK board. Modify the PID of the demo to `0x0104`. Compile and download it to RT1010-EVK again. Reconnect it to the test fixture.
13. Flip the switch of the test fixture that switches the termination on. Ensure that the yellow Test LED is lit. Use a multimeter to measure the DC voltage on the D+/D- lines at TP2 with respect to GND. Record the measurement in the pop-up dialog on the oscilloscope. Click **OK** to finish the test.

### 3.1.3 Full-Speed and Low-Speed signal test

Low and Full Speed items include :

- For Device
  - Upstream Full Speed Signal Quality Test
  - Back-Voltage Test
  - Device Inrush Current Test
- For the host
  - Downstream Full Speed Signal Quality Test
  - Downstream Low Speed Signal Quality Test

— Host Drop Test

The i.MXRT series chips do not support the low-speed device, so the pre-test does not contain the Upstream Full-Speed Signal Quality Test.

3.1.3.1 Upstream Full-Speed Signal Quality Test procedure

Table 13 lists the equipment used in the Upstream Full-Speed Signal Quality Test.

Table 13. Equipment used in Upstream Full-Speed Signal Quality Test

| Item                  | Model                        | Quantity |
|-----------------------|------------------------------|----------|
| Oscilloscope          | Keysight DSOS604A            | 1        |
| Single ended probe    | Keysight N2873A              | 3        |
| SQiDD board           | Keysight E2646B              | 1        |
| USB self-powered hubs | Any listed on USB-IF website | 5        |
| 5 meter USB cables    | Any listed on USB-IF website | 6        |

To run the test, perform the following steps:

1. Select the test items in the USB automated test software on the oscilloscope, as shown in Figure 54.

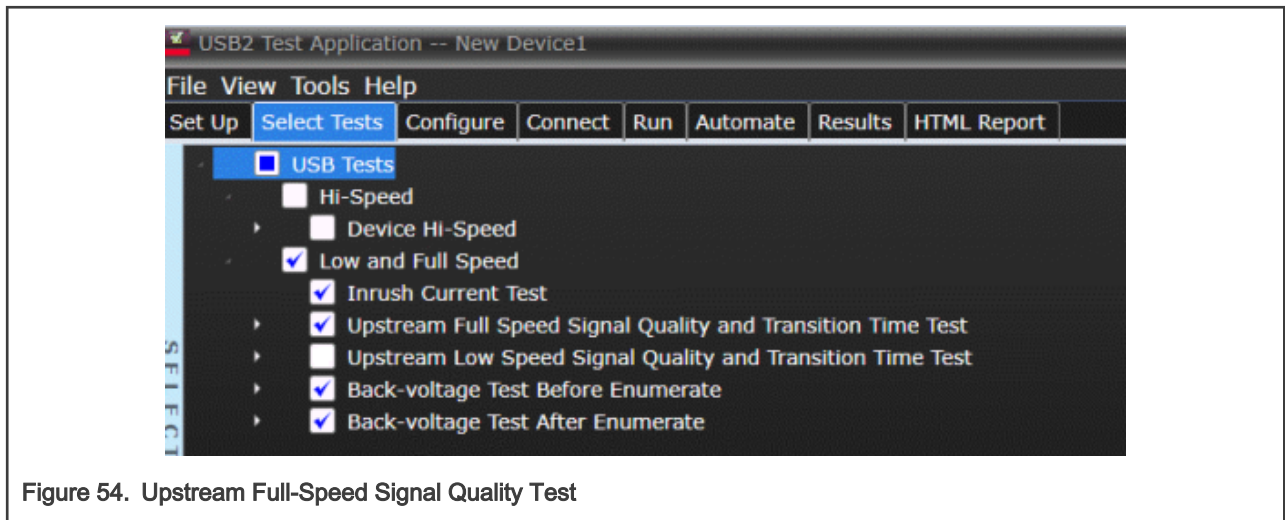


Figure 54. Upstream Full-Speed Signal Quality Test

2. Connect the equipment and test fixture as shown in Figure 55. Since the test is the signal quality of the Device's Upstream port, the upstream layer 5 hub has no effect on the signal integrity. Therefore, if you do not have enough hubs on hand during the pre-test, to force the Device to run at full speed, connect only one full speed hub. The obtained eye diagram is also credible.

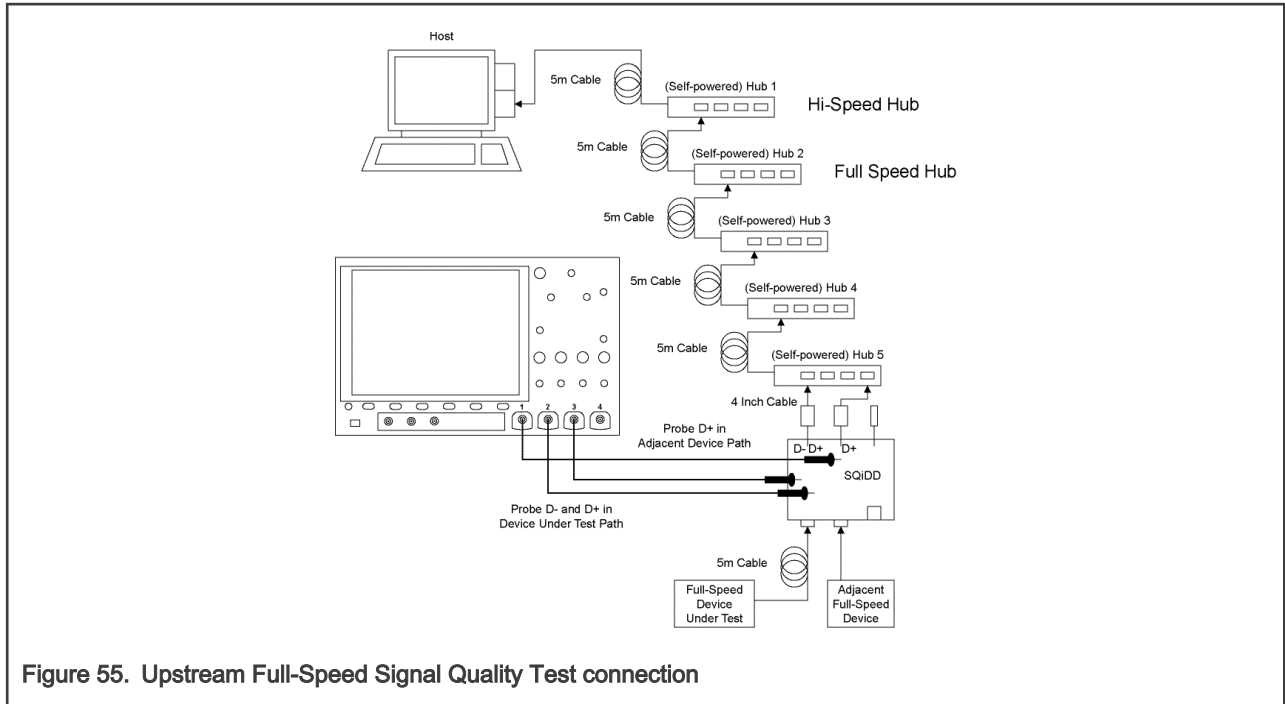


Figure 55. Upstream Full-Speed Signal Quality Test connection

3. Click **Run Tests** in the USB automated test software on the oscilloscope.
4. Similar to the High-Speed Signal Quality test, on the Device Test menu of the HS electrical test tool software, click **Enumerate Bus** once. Select the device under test in the device enumeration list, select **LOOP DEVICE DESCRIPTOR** from the Device Command drop-down menu, and click **Execute** once, as shown in Figure 56.

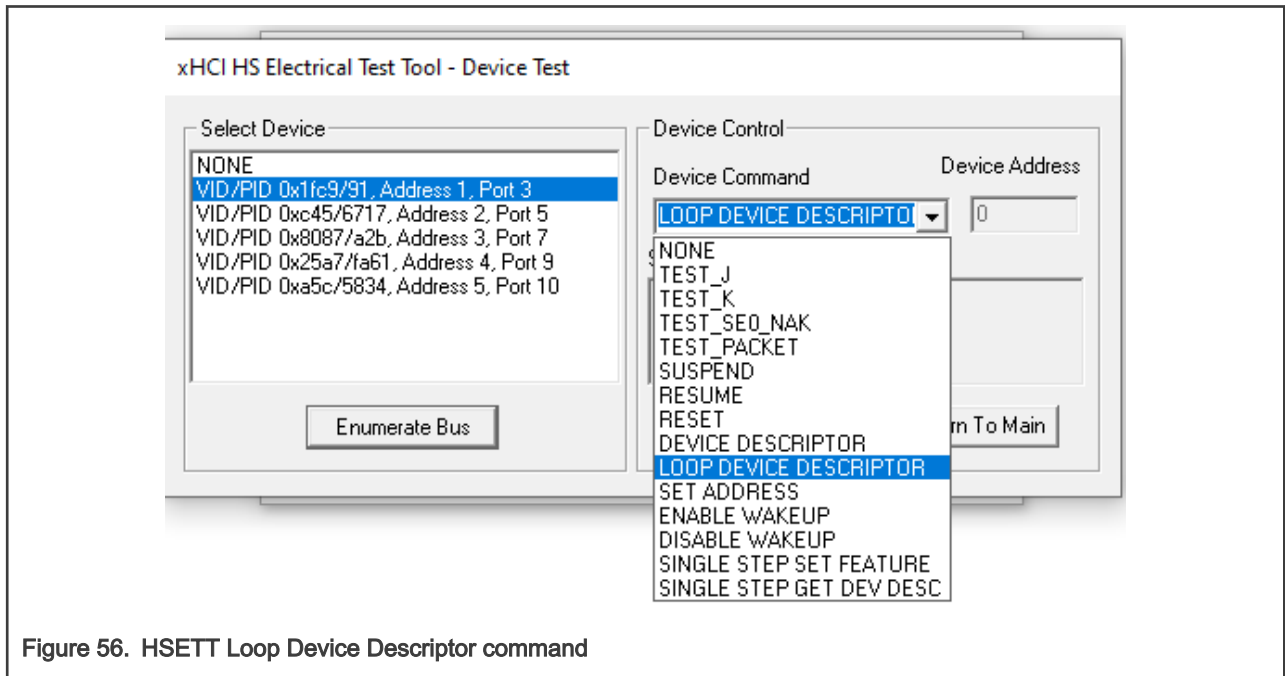


Figure 56. HSETT Loop Device Descriptor command

5. The oscilloscope captures the waveform. When the **Testing Complete** dialog appears, click **OK** to finish the test.

### 3.1.3.2 Back-Voltage test procedure

Use the multimeter and SQiDD board for the Back-Voltage test. All the voltages measured in this test must be less than or equal to 400 mV. Any voltages greater than 400 mV will be recorded as a failure.



To run the test, perform the following steps:

1. Select the test items in the USB Automated Test software on the oscilloscope as shown in [Figure 54](#).
2. Use a known good USB cable to connect the power supply to the DUT and the device upstream port to the SQiDD board, as shown in [Figure 57](#). Do not connect any Host. Click **Run Tests** in the USB automated test software on the oscilloscope.

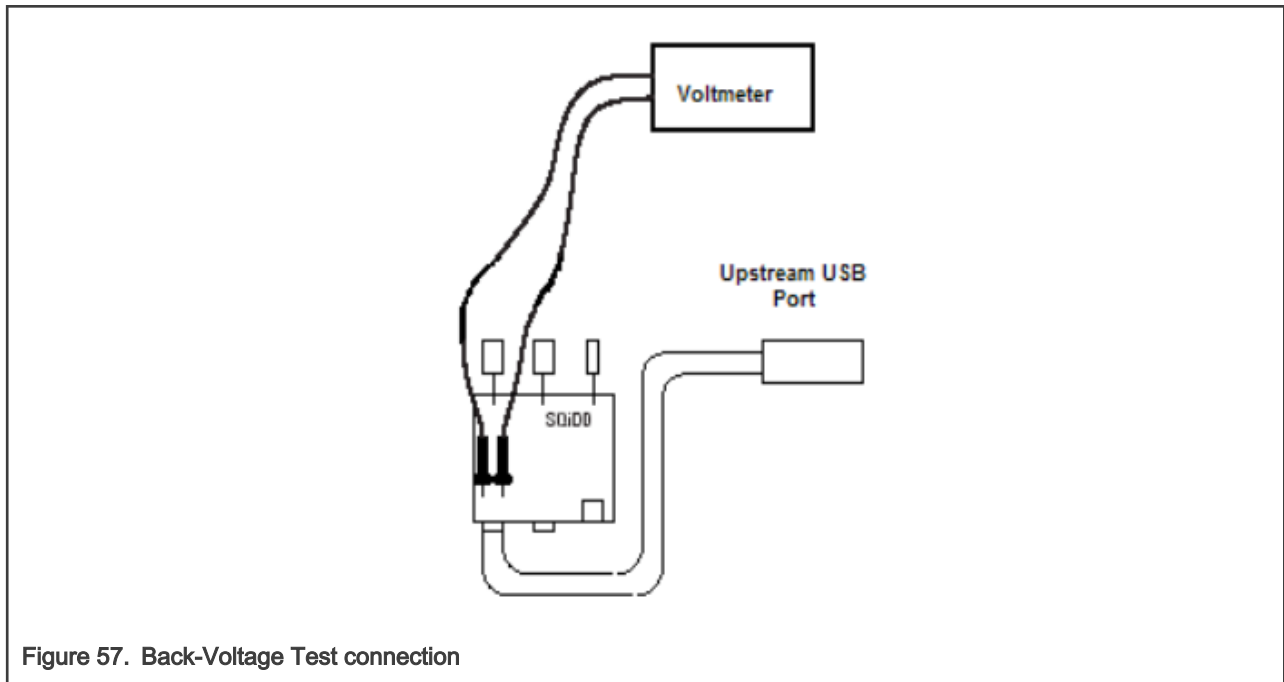


Figure 57. Back-Voltage Test connection

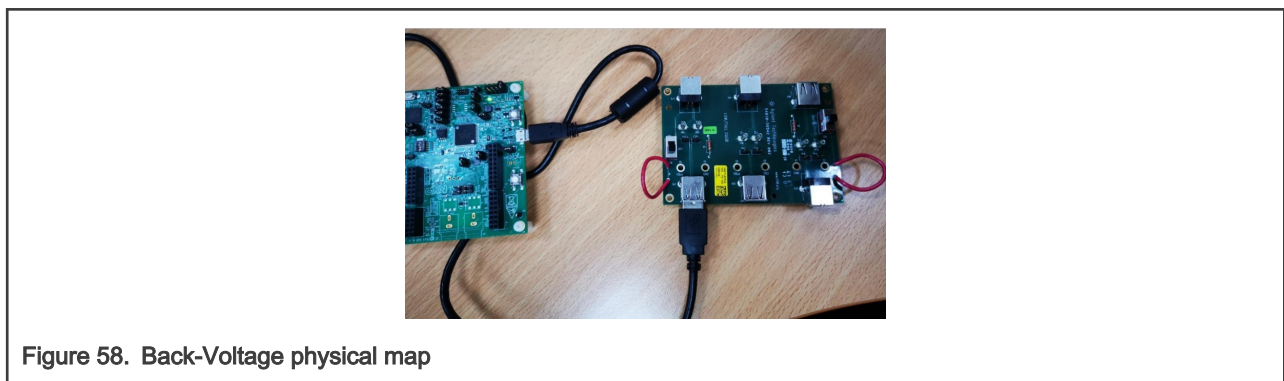


Figure 58. Back-Voltage physical map

3. Measure the DC voltages on Vbus, D+, and D-. Record them in the pop-up dialog on the oscilloscope. Click **OK**.
4. Plug the DUT into a known good host and verify proper enumeration. Unplug the USB cable from the host and reconnect the USB cable to the back-voltage test fixture.
5. Measure the DC voltages on Vbus, D+, and D- again. Record them in the pop-up dialog on the oscilloscope. Click **OK** to finish the test.

### 3.1.3.3 Device Inrush Current Test procedure

The USB 2.0 specification support maximum capacity of 10 uF and therefore a maximum inrush of 50 uC. Measure Inrush current for a minimum of 100 ms after attachment. As there is not a Keysight current probe in hand, in this application note, use a Tektronix oscilloscope for the test. The model number is DPO2024B and the current probe model number is TCP0030A.

To run the test, perform the following steps:

1. When taking the measurement, calibrate the current probe to 0 mA. If not performed beforehand, a current probe produces a DC offset resulting in an incorrect measurement.
2. Connect the equipment and test fixture, as shown in [Figure 59](#). Use the current probe to capture the **Vbus** current waveform. Ensure that the probe direction is the same.

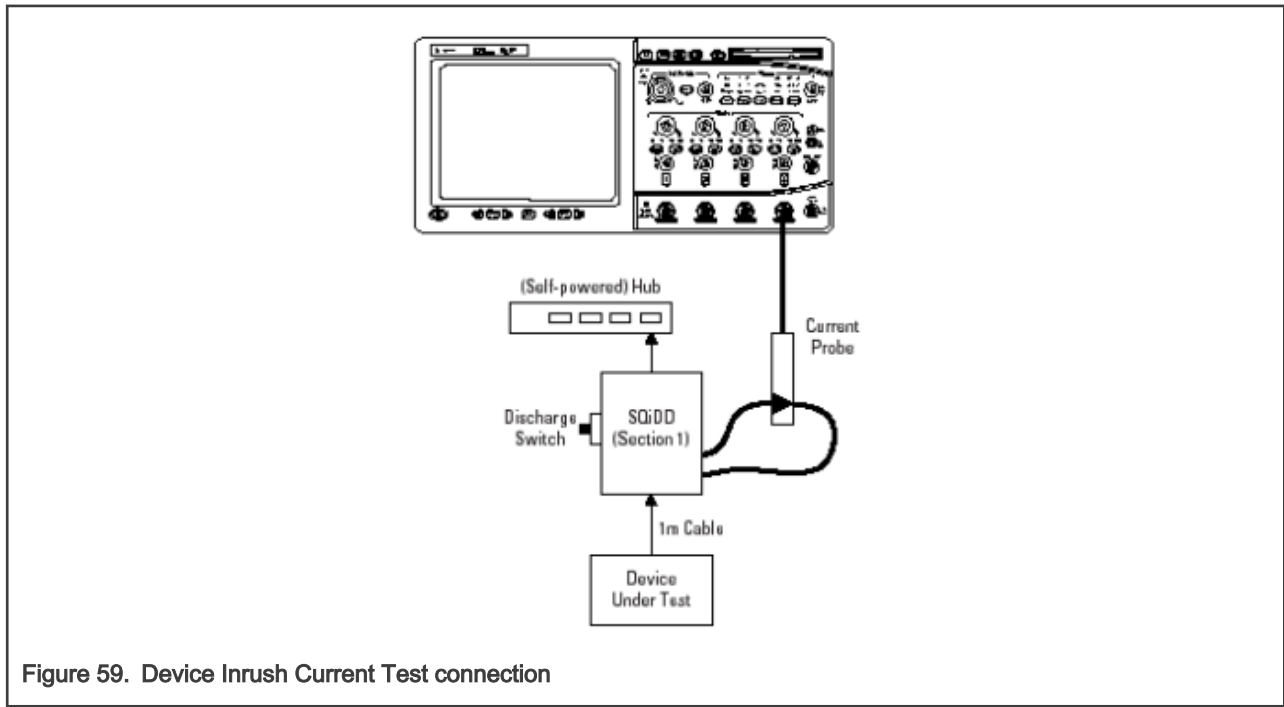


Figure 59. Device Inrush Current Test connection

3. Connect the device under test to the SQiDD board. Place the switch on the SQiDD board to the discharge position (opposite the ON position).
4. Set the oscilloscope as Single mode and the record length as 5 M which can match the requirement: time base 50 ms/div, vertical resolution 500 mA/div, sample rate >1MS/s.
5. Place the switch on the SQiDD board to the ON position. The oscilloscope captures the inrush current waveform and saves the waveform to the U-Disk as a \*.csv.
6. Copy the \*.csv file to PC. Open the file in the USBET20 software as shown in [Figure 60](#). The file can be downloaded from [USB-IF Document page](#). Click **Test**, and the result pops up.

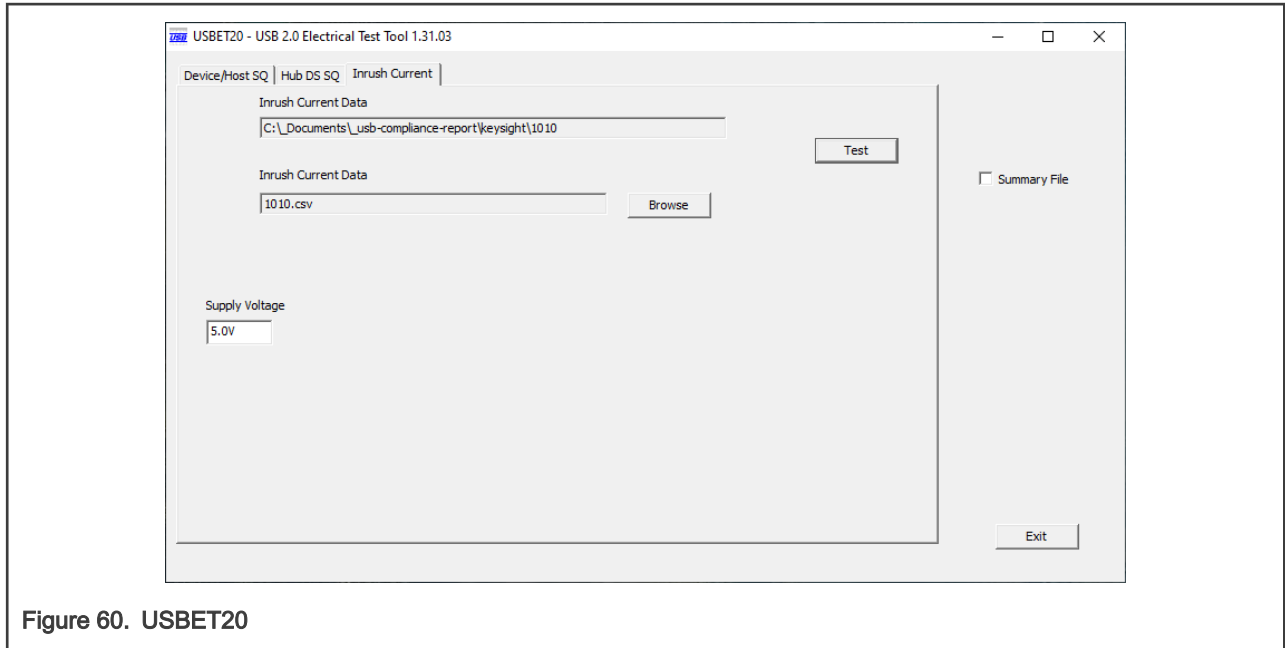


Figure 60. USBET20

### 3.1.3.4 Downstream Full-Speed Signal Quality Test procedure

Table 14 lists the equipment used in the Downstream Full-Speed Signal Quality Test.

Table 14. Equipment used in Downstream Full-Speed Signal Quality Test

| Item                  | Model                  | Quantity |
|-----------------------|------------------------|----------|
| Oscilloscope          | Keysight DSOS604A      | 1        |
| Single ended probe    | Keysight N2873A        | 2        |
| SQiDD board           | Keysight E2646B        | 1        |
| Full speed USB device | Any                    | 1        |
| USB cable             | Micro-B plug OTG cable | 1        |

To run the test, perform the following steps:

1. Select the test items in the USB Automated Test software on the oscilloscope, as shown in [Figure 61](#).

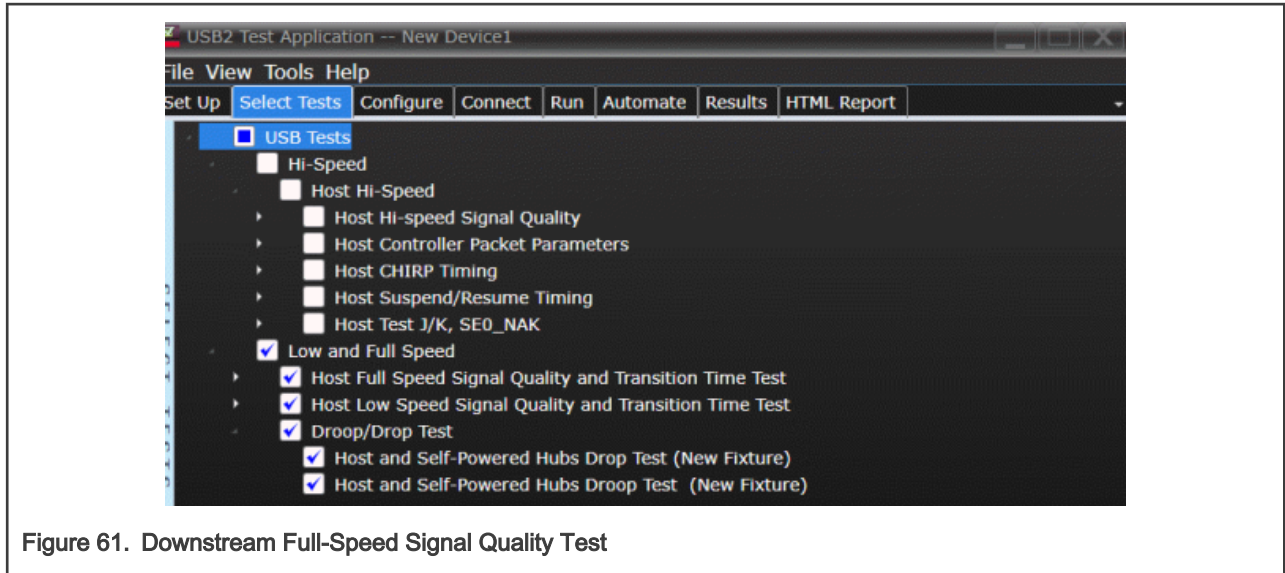


Figure 61. Downstream Full-Speed Signal Quality Test

2. Connect the Embedded Host under test, full speed device, and the SQiDD, as shown in Figure 62. Set the switch on SQiDD board to ON. The test is for the embedded host, so use the embedded host board to replace the PC in Figure 62.

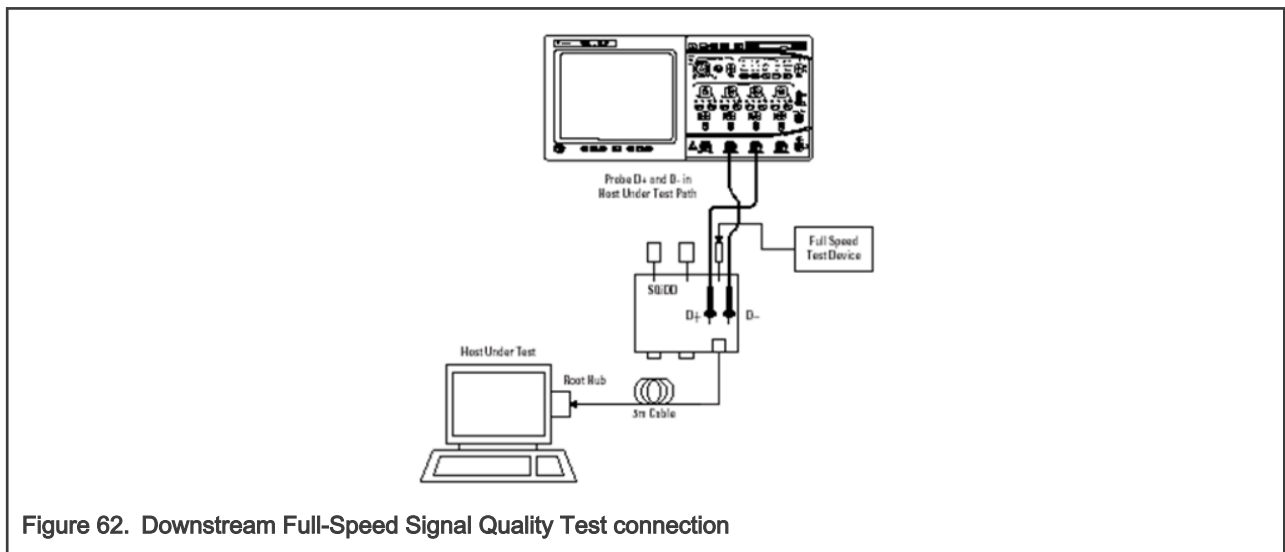


Figure 62. Downstream Full-Speed Signal Quality Test connection

3. Click **Run Tests** in the USB automated test software on the oscilloscope. When the **Testing Complete** dialog appears, click **OK** to finish the test.

### 3.1.3.5 Downstream Low-Speed Signal Quality Test procedure

Table 15 lists the equipment used in the Downstream Low-Speed Signal Quality Test.

Table 15. Equipment used in Downstream Low-Speed Signal Quality Test

| Item                 | Model             | Quantity |
|----------------------|-------------------|----------|
| Oscilloscope         | Keysight DSOS604A | 1        |
| Single ended probe   | Keysight N2873A   | 2        |
| Low speed USB device | Dell mouse        | 1        |


Table continues on the next page...

**Table 15. Equipment used in Downstream Low-Speed Signal Quality Test (continued)**

| Item        | Model                  | Quantity |
|-------------|------------------------|----------|
| SQiDD board | Keysight E2646B        | 1        |
| USB cable   | Micro-B plug OTG cable | 1        |

To run the test, perform the following steps:

1. Select the test items in the USB automated test software on the oscilloscope, as shown in [Figure 61](#).
2. Connect the Embedded Host under test, mouse, and the SQiDD, as shown in [Figure 63](#). Set the switch on SQiDD board to ON. The test is for Embedded Host, so use the Embedded Host board to replace the PC in [Figure 63](#).

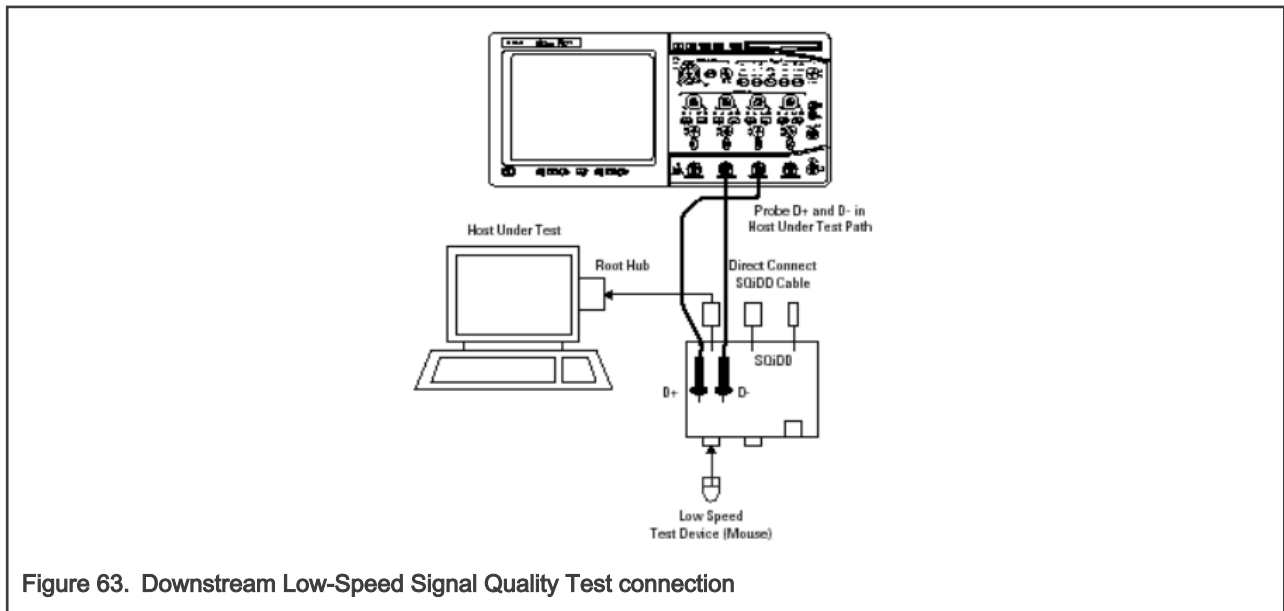

**Figure 63. Downstream Low-Speed Signal Quality Test connection**

3. Click **Run Tests** in the USB automated test software on the oscilloscope. When the **Testing Complete** dialog appears, click **OK** to finish the test.

### 3.1.3.6 Host Drop Test procedure

To host full-load current, the drop test measures a host/hub's ability while keeping the output voltage above specification. To perform this test, measure  $V_{bus}$  with all downstream ports loaded with 500 mA loads (for host and self-powered hubs). The lowest value measured across all ports must be between 4.75 V and 5.5 V1 for host and self-powered hubs.

The Droop test is a transient test on adjacent ports. When a device is hot plugged into another port, the droop in  $V_{bus}$  supplied to a port must be less than or equal to 330 mV for host, self-powered, and bus-powered hubs. There is only one port for the embedded host, so this test is not needed.

[Table 16](#) lists the equipment used in the Host Drop Test.

**Table 16. Equipment used in Host Drop Test**

| Item                          | Model  | Quantity |
|-------------------------------|--|----------|
| Computer or USB power adapter | Any computer with USB ports or USB power adapter | 1        |
| Multimeter                    | Any  | 1        |

*Table continues on the next page...*

**Table 16. Equipment used in Host Drop Test (continued)**

| Item                    | Model                  | Quantity |
|-------------------------|------------------------|----------|
| Droop Drop test fixture | Keysight E2649-66405   | 1        |
| USB cable               | Micro-B plug OTG cable | 1        |

To run the test, perform the following steps:

1. Select the test items in the USB automated test software on the oscilloscope, as shown in [Figure 61](#). Switch to **Set Up** tab and select **Keysight Droop Drop Fixture**.
2. Connect the **J11** of the test fixture to the USB port of the PC or the USB power adaptor to power the fixture. The green LED DS1 is lit.
3. Flip the switch S5 to **Drop Test** and switch S4 to 500 mA. Press and hold **S1** until the 7-segment LED test port indicator lights up. The test fixture is now turned on. U7 illuminates with a zero, indicating the initial state. This means the Port 0 is the test port.
4. Connect J3 to the USB port of the Embedded Host under test. Measure  $V_{bus}$  and record it as  $V_{non-load}$ .
5. Press **S1**. While holding it down, press S2, measure the  $V_{bus}$ , and record it as  $V_{load}$ .
6. Fill in these two values to the pop-up dialog of the oscilloscope to finish the test.

## 3.2 Device Framework test

To test a USB device or hub, test the USBCV (Command Verifier). It automatically tests the device framework and the descriptor. It tests the standard commands in Chapters 9 and 11 of the USB 2.0 specification. Depending on the controller of the test host, the CV test contains USB20CV and USB30CV. As the PC with EHCI is not in hand, this application note just performs the USB30CV test. USB20CV test items are same as USB30CV.

Some software tools are required for the CV test. USB 3 GEN X CV can be downloaded from [USB-IF Document page](#).

Device Framework pre-test items include:

- USBCV Chapter 9 Test
- USBCV Class Test

### 3.2.1 USBCV Chapter 9 test

Chapter 9 test covers the device support of the commands set in Chapter 9 of the USB specification.

To run the test, perform the following steps:

1. Connect the device under test to the test bed computer, open the USBCV software, and let the software control the USB controller of the computer. All standard peripherals on your computer such as mouse and u-disk are invalid at this moment. [Figure 64](#) shows the interface of the USBCV software.

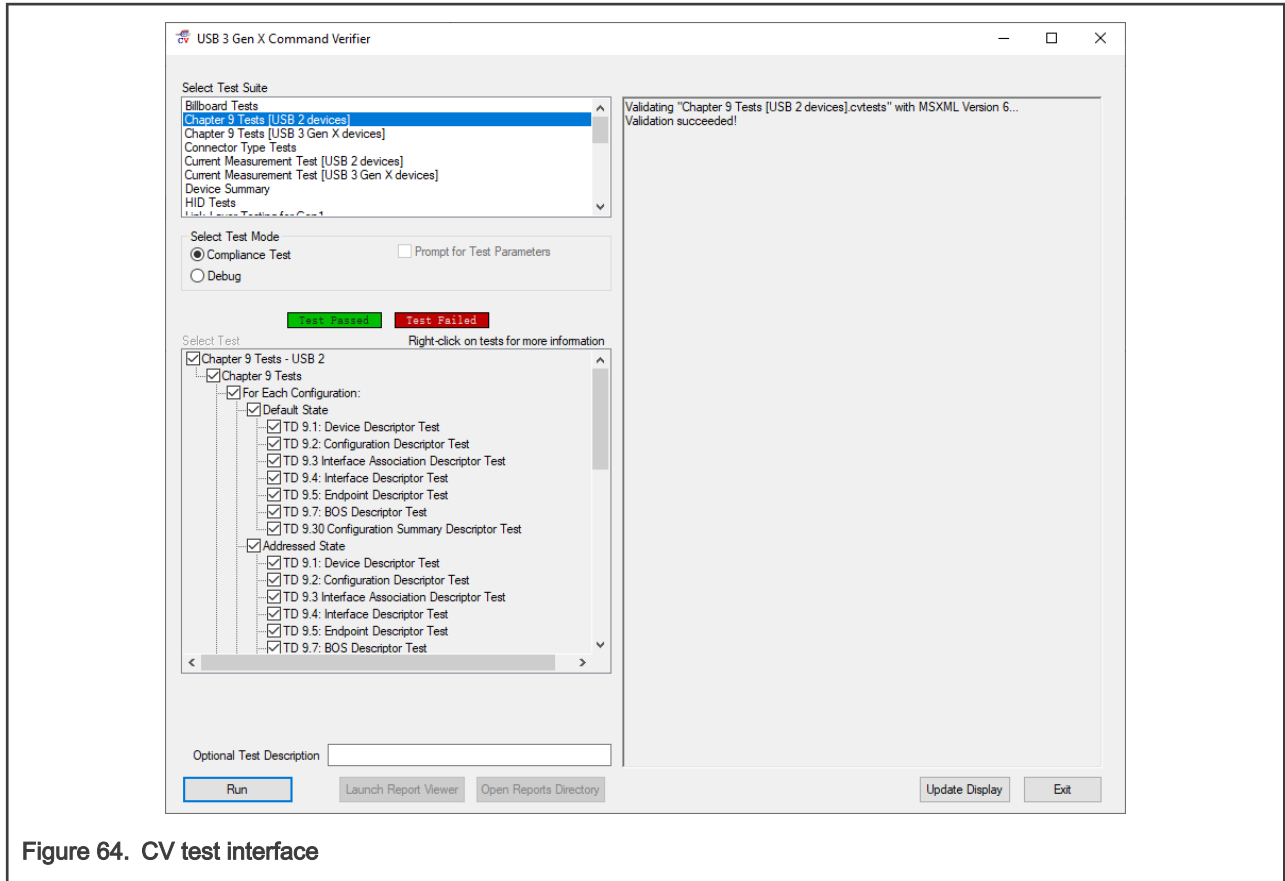


Figure 64. CV test interface

2. Select **Chapter 9 Tests[USB 2 devices]** and click **Run**. Select the device under test in the pop-up dialog, as shown in [Figure 65](#). Click **OK** to run the test.

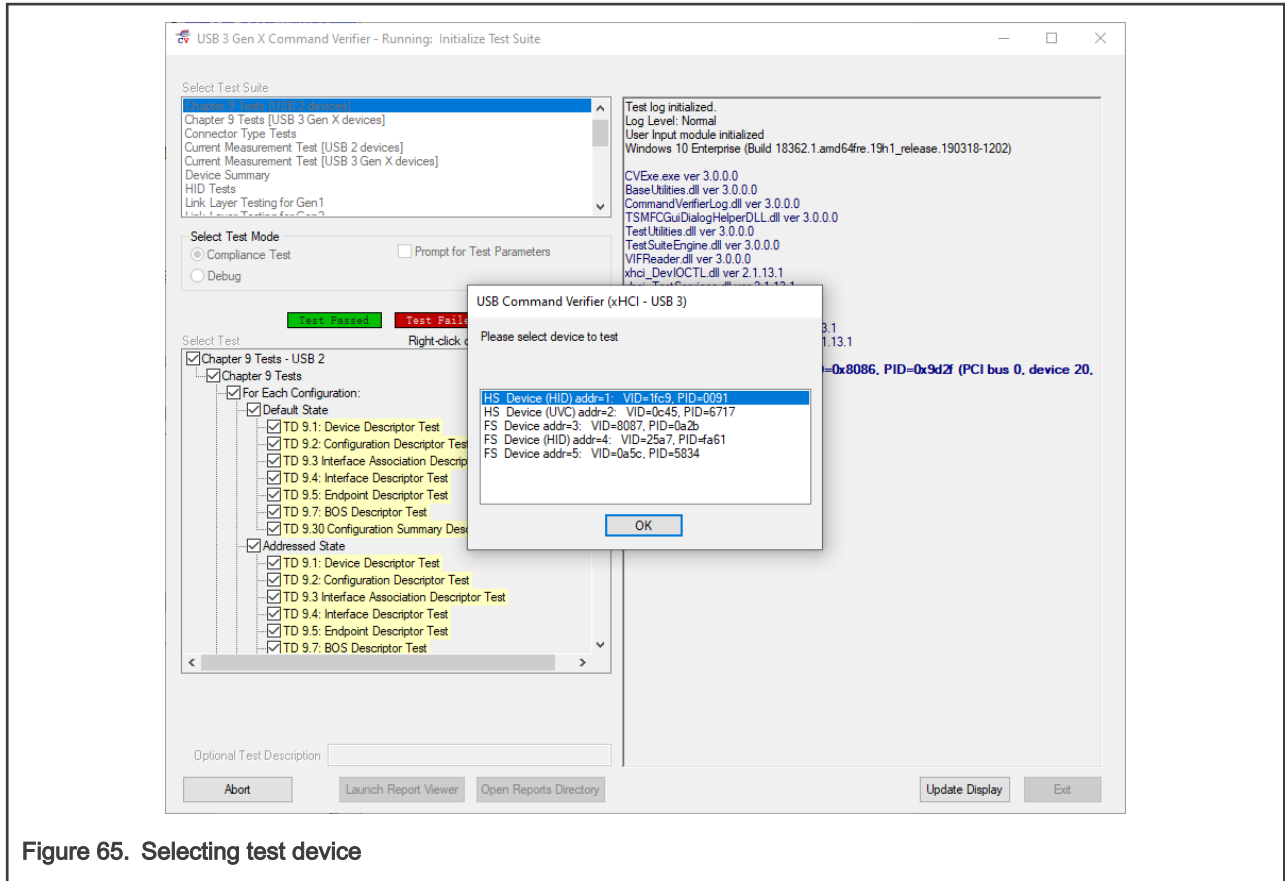


Figure 65. Selecting test device

3. The software performs all test items automatically. The test result is printed in the dialog box on the right. When the test finishes, click **Launch Report Viewer** to see the report.
4. To make the device run in full speed, add a Full-Speed Hub between the device under test and the PC. Repeat the test.

### 3.2.2 USBCV Class test

Run appropriate class tests (HID, HUB, MSC, UVC, PHDC) according to the prompt of Chapter 9 tests, as shown in [Figure 66](#). The device under test in this application note uses the USB HID Mouse demo, so just perform the HID test.



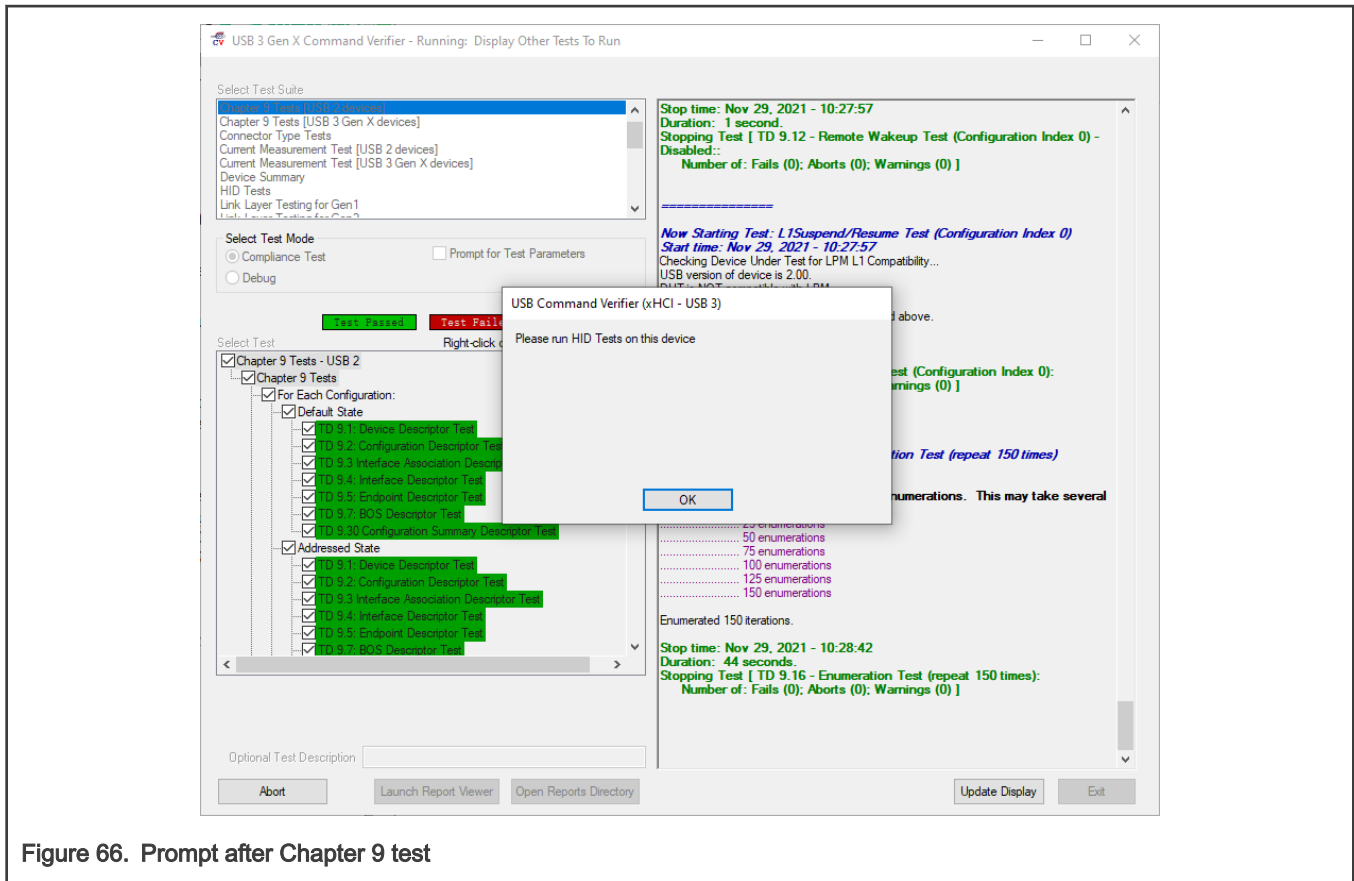


Figure 66. Prompt after Chapter 9 test

To run the test, perform the following steps:

1. Select **HID Tests** and click **Run**. Select the device under test in the pop-up dialog and click **OK** to run the test.
2. When the test finishes, click **Launch Report Viewer** to see the report.
3. To make the device run in full speed, add a Full-Speed Hub between the device under test and the PC. Repeat the test.

## 4 Notes and Failure items fix

### 4.1 Notes

#### 4.1.1 Test software notes

Many test items in the pre-test of the USB compliance test need to use the PC, but the USB controller of most computers nowadays is xHCI. It is difficult to find a computer with EHCI controller. Therefore, for all software tool used in above tests, use the xHCI version. For example, for HSETT software, download the XHCI HSETT to perform the test; for CV software, use USB 3 GEN X CV software. In the formal laboratory test, the laboratory uses a host with EHCI to complete the EHCI part of the test.

If you cannot confirm the USB controller of the computer, get this information from the device manager. To open the **Computer Management** interface, right click **This PC**, choose, and click **Manage**. Click **Device Manager**, expand **Universal Serial Bus controllers** in the middle of the dialog box, as shown in [Figure 67](#). Now, you can get the controller type of your computer.

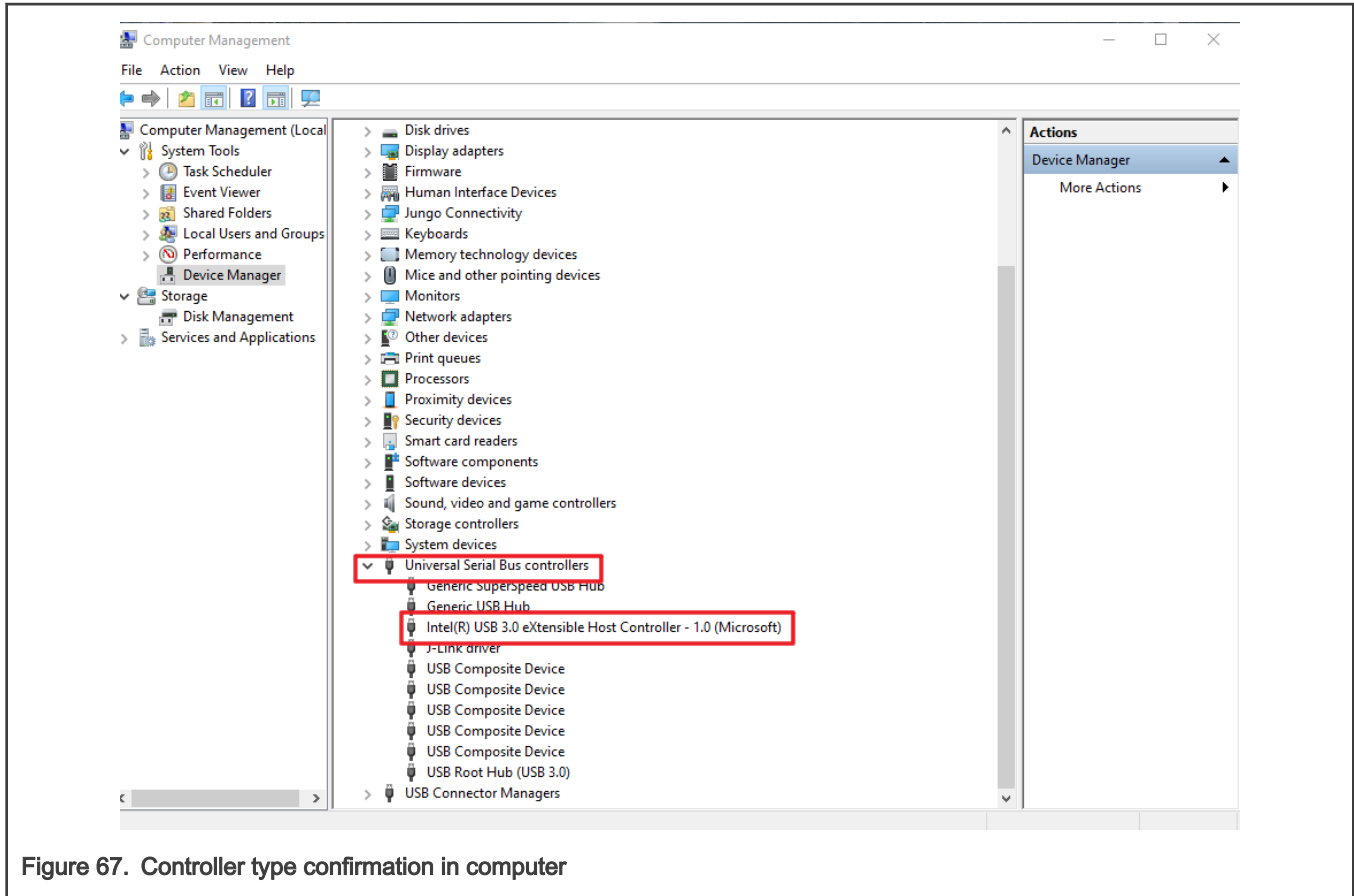


Figure 67. Controller type confirmation in computer

### 4.1.2 Configuration for test demo

The demo used in the device test is `usb_device_hid_mouse_bm`. This demo keeps the cursor moving on the screen. It may interfere with some functional tests. Therefore, modify the program in the `USB_DeviceHidMouseAction()` function before the test, as shown in Figure 68.

```

static usb_status_t USB_DeviceHidMouseAction(void)
{
    g_UsbDeviceHidMouse.buffer[1] = 0U;
    g_UsbDeviceHidMouse.buffer[2] = 0U;
    /* Send mouse report to the host */
    return USB_DeviceHidSend(g_UsbDeviceHidMouse.hidHandle, USB_HID_MOUSE_ENDPOINT_IN, g_UsbDeviceHidMouse.buffer,
        USB_HID_MOUSE_REPORT_LENGTH);
}
    
```


Figure 68. Application code modification

The EVK board used for the pre-test does not have a battery. Disable the `USB_DEVICE_CONFIG_CHARGER_DETECT` macro in `usb_device_config.h` during the test. Otherwise, the laboratory performs the BC1.2 test. For the board without the battery, this test is not required.

When performing the interoperability test for the embedded host, use cascaded Hubs. To support the cascaded Hubs, define the `USB_HOST_CONFIG_HUB` value in the `usb_host_config.h` file of the `usb_host_msd_fatfs_bm` to 5.

### 4.1.3 Configuration for test hardware

The formal test of the certification laboratory contains a series of interoperability tests. For the interoperability test of Embedded Host, there are regulations on when  $V_{bus}$  power is supplied in the test items. As an embedded host, only when the ID pin is pulled low, the  $V_{bus}$  can be supplied. So when designing the hardware, use the design shown in Figure 69 to control the timing of  $V_{bus}$  power supply. Only when the ID line is pulled low, the power chip is enabled to supply power to  $V_{bus}$ .

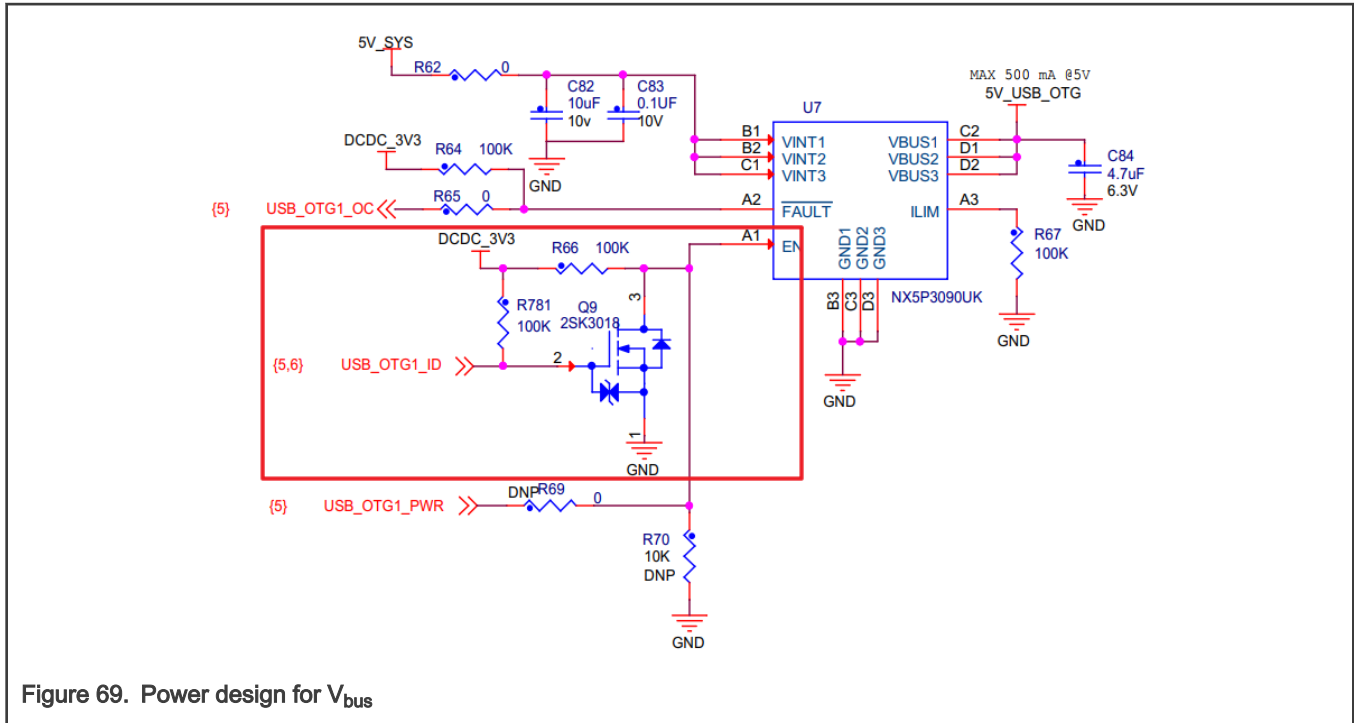

## 4.2 Eye diagram adjustment

The signal quality test for the device and embedded host generates the eye diagram. In these tests, a failure may occur, as shown in Figure 70. This failure occurs because the drive capability of the transmitter is insufficient.

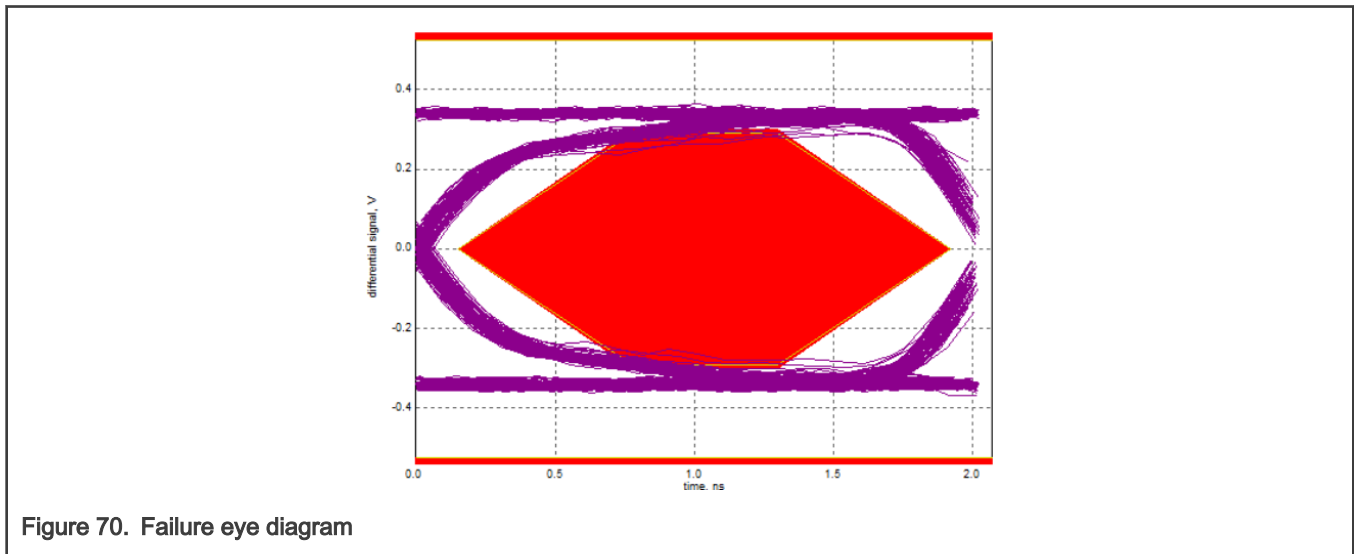


Figure 71 shows a good eye diagram.

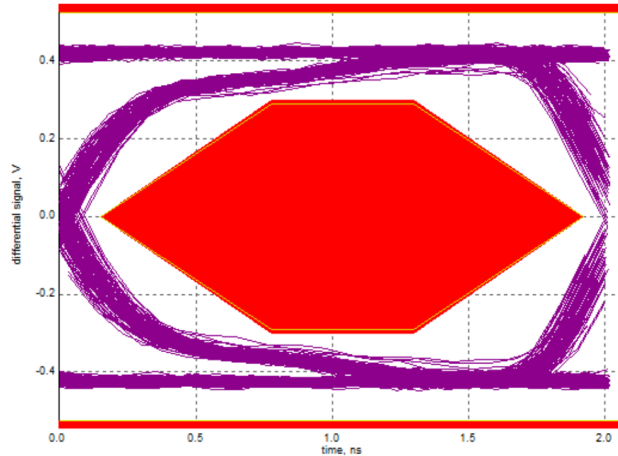


Figure 71. Good eye diagram

You can see that in the good eye diagram, no data point violates the eye template which is the red area. For certification test, no data point violating the eye template is the standard to pass this test. The failure eye diagram is as shown in Figure 70, it has many data points that violate the eye standard, how can we improve it?

The USB2.0 specification stipulates that the high-speed transmission adopts the current drive method, the current source, and the terminal resistance on the D+/D- line affect the drive capability of the transmitter.

To adjust the transmitter current source and the size of the terminal resistance on D+/D-, in the PHY of the RT series chips, there are three registers, TXCAL45DP, TXCAL45DN, and D\_CAL. Table 17 describes the corresponding values of the specific register.

Table 17. Current source and terminal resistance adjustment

| Field                  | Reset value | Description  |
|------------------------|-------------|--|
| TXCAL45DP<br>TXCAL45DN | 0110b       | Adjust DP resistance<br>Select a 45-Ohm resistance to the USB_DP output pin.<br>Maximum resistance = 0000<br>0000 45+6*1.66<br>0001 45+5*1.66<br>0010 45+4*1.66<br>0011 45+3*1.66<br>0100 45+2*1.66<br>0101 45+1*1.66<br>0110 45<br>0111 45-1*1.66<br>1000 45-2*1.66<br>1001 45-3*1.66<br>1010 45-4*1.66<br>1011 45-5*1.66<br>1100 45-6*1.66 |

Table continues on the next page...

**Table 17. Current source and terminal resistance adjustment (continued)**

| Field | Reset value | Description  |
|-------|-------------|--|
|       |             | 1101 45-7*1.66<br>1110 45-8*1.66<br>1111 45-9*1.66   |
| D_CAL | 0111b       | Adjust the current of HS<br>0000 1.19*17.78mA<br>0001 1.16*17.78mA<br>0010 1.14*17.78mA<br>0011 1.12*17.78mA<br>0100 1.09*17.78mA<br>0101 1.06*17.78mA<br>0110 1.03*17.78mA<br>0111 1.00*17.78mA<br>1000 0.97*17.78mA<br>1001 0.95*17.78mA<br>1010 0.93*17.78mA<br>1011 0.90*17.78mA<br>1100 0.88*17.78mA<br>1101 0.86*17.78mA<br>1110 0.83*17.78mA<br>1111 0.79*17.78mA |

As described in [Table 17](#), D\_CAL can adjust the value of the current source. If the eye diagram is not wide enough, reduce the value of the D\_CAL and then test again. If the eye is still not wide enough, keep reducing the value of D\_CAL until it has no data point violating the eye template. During the period, you can also modify the TXCAL45DP and TXCAL45DP to fine-tune the eye diagram. Vice versa, if the eye diagram spread too much, enlarge the value of D\_CAL which can reduce the output of the current source, and then the eye diagram can open in a normal range.

For the failure in [Figure 70](#), to increase the output current source, reduce the value of D\_CAL according to [Table 17](#) and then get the eye diagram again. Then, it can pass the test. The eye diagram test is the most important test in the HS Signal Quality Test. Modifying the three registers above does not interfere with the rest of the test.

### 4.3 Inrush Test failure

The test limit for Inrush current is that the maximum compliant inrush is 50 uC at 5 V. The maximum capacity is 10 uF. However, different PCB designs may make additional capacitance, so the Inrush test may fail. When the Inrush Current test fails, to pass the test, reduce the capacitance connected to V<sub>bus</sub>. This capacitance cannot be completely removed. To make ADP detection possible, at least 1 uF of capacity is required.

## 4.4 Drop test failure

When performing the drop test on the embedded host, the voltage on the  $V_{bus}$  drops too much after the device is inserted. Used as a host, supply power to the inserted device. If the power supply of the host is insufficient, a large voltage drop occurs. When testing the embedded host, use a power adapter to supply the board.

## 5 Registering product in USB-IF

When the certification lab finishes all the test, submit your product to the USB-IF for registration to get the TID.

1. Check that your company is a member of USB-IF, register and log in to your account at <https://groups.usb.org/site/login>.
2. After logging in, click **Visit the Compliance Management Area** to enter the management interface. Click **Register USB Product**. Select a product type for your product, as shown in [Figure 72](#). If you do not know what product type to choose, consult your test lab.

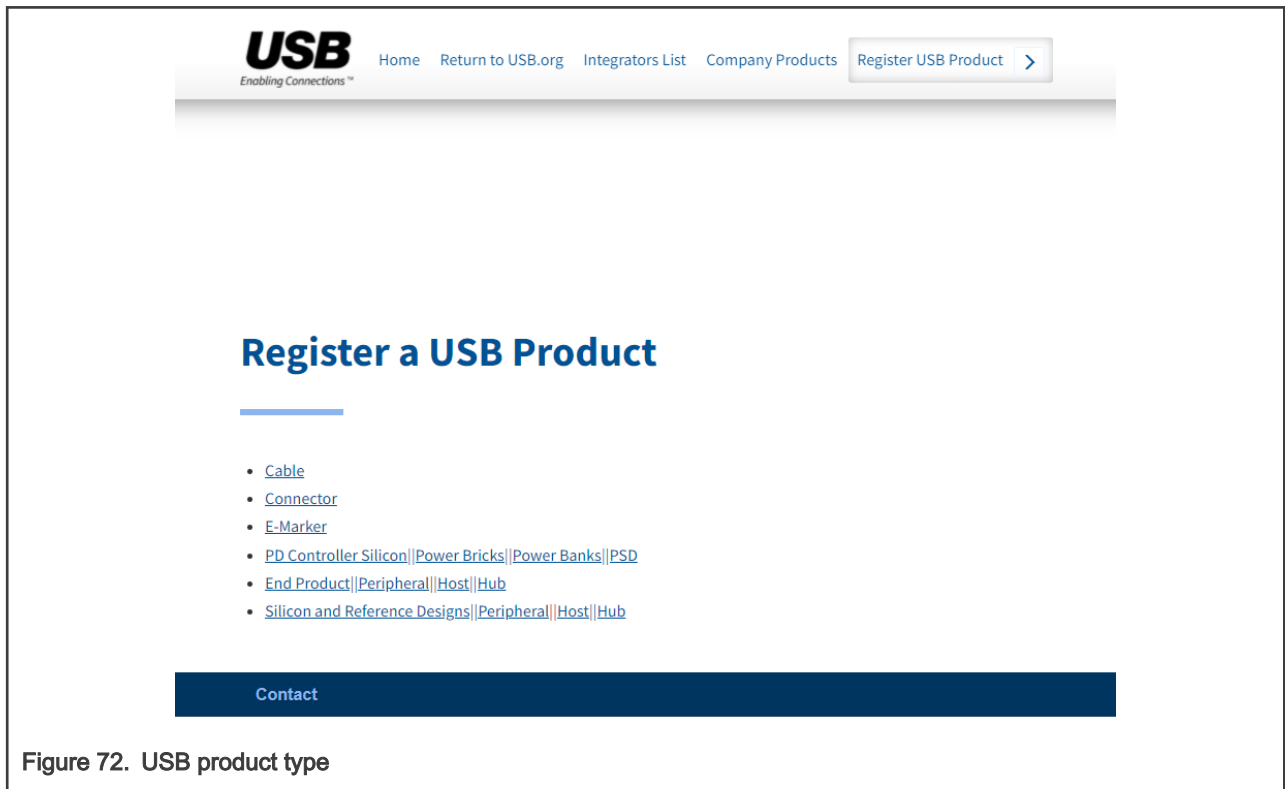


Figure 72. USB product type

3. Fill in the detailed information for your product, according to the guide that the certification lab sent to you to add the VIF file and the picture of the product.
4. After filling in all the information, click **Save**. The registered product is displayed in the **Company Products** menu.

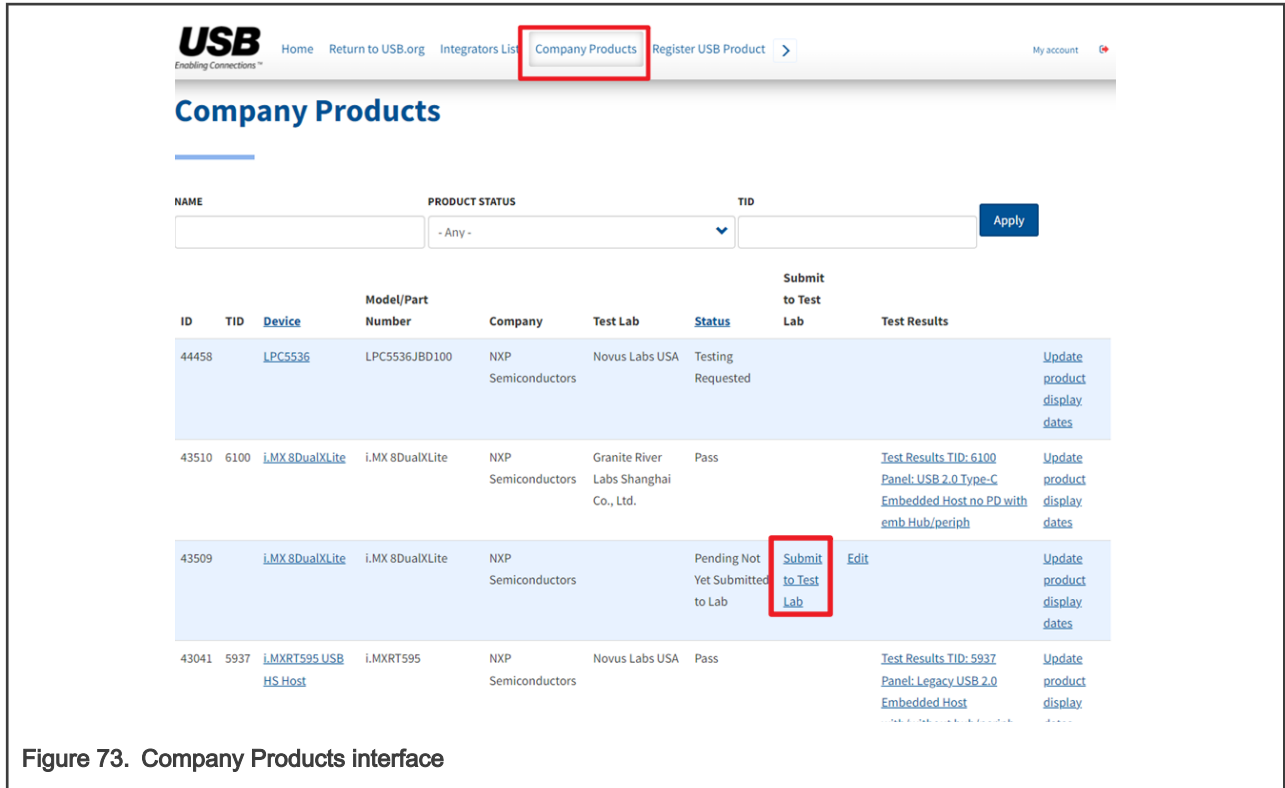


Figure 73. Company Products interface

5. Click **Submit to Test Lab** of your product, as shown in [Figure 73](#). Choose the test lab on the test lab submission page.
6. Wait for the certification lab to upload the test result and wait for USB-IF to approve your product.

## 6 References

1. USB 2.0 Electrical Compliance Test Specification
2. Universal Serial Bus Implementers Forum Full and Low Speed Compliance Test Procedure
3. Embedded Host High Speed Electrical Test Procedure
4. Universal Serial Bus Revision 2.0 - USB Command Verifier Compliance Test Specification
5. Keysight D9010USBC USB 2.0 Compliance Test Application
6. i.MX6/7 Series USB Certification Guide

## 7 Revision history

| Revision number | Date            | Substantive changes |
|-----------------|-----------------|---------------------|
| 0               | 14 January 2022 | Initial release     |

## A Abbreviations

| Term   | Definition  |
|--------|---|
| HSETT  | High Speed Electrical Test Tool   |
| DUT    | Device Under Test   |
| EHCI   | Enhanced Host Controller Interface(USB2.0)                                  |
| xHCI   | Extensible Host Controller Interface(USB3.0)                                |
| PID    | Product Identification Number   |
| VID    | Vendor Identification Number  |
| TID    | Product Test ID assigned by USB-IF after passing the USB Certification Test |
| USB-IF | USB Implementers Forum  |



## How To Reach Us

### Home Page:

[nxp.com](http://nxp.com)

### Web Support:

[nxp.com/support](http://nxp.com/support)

**Limited warranty and liability**— Information in this document is provided solely to enable system and software implementers to use NXP products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document. NXP reserves the right to make changes without further notice to any products herein.

NXP makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does NXP assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. “Typical” parameters that may be provided in NXP data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including “typicals,” must be validated for each customer application by customer’s technical experts. NXP does not convey any license under its patent rights nor the rights of others. NXP sells products pursuant to standard terms and conditions of sale, which can be found at the following address: [nxp.com/SalesTermsandConditions](http://nxp.com/SalesTermsandConditions).

**Right to make changes** - NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

**Security**— Customer understands that all NXP products may be subject to unidentified or documented vulnerabilities. Customer is responsible for the design and operation of its applications and products throughout their lifecycles to reduce the effect of these vulnerabilities on customer’s applications and products. Customer’s responsibility also extends to other open and/or proprietary technologies supported by NXP products for use in customer’s applications. NXP accepts no liability for any vulnerability. Customer should regularly check security updates from NXP and follow up appropriately. Customer shall select products with security features that best meet rules, regulations, and standards of the intended application and make the ultimate design decisions regarding its products and is solely responsible for compliance with all legal, regulatory, and security related requirements concerning its products, regardless of any information or support that may be provided by NXP. NXP has a Product Security Incident Response Team (PSIRT) (reachable at [PSIRT@nxp.com](mailto:PSIRT@nxp.com)) that manages the investigation, reporting, and solution release to security vulnerabilities of NXP products.

NXP, the NXP logo, NXP SECURE CONNECTIONS FOR A SMARTER WORLD, COOLFLUX, EMBRACE, GREENCHIP, HITAG, ICODE, JCOP, LIFE, VIBES, MIFARE, MIFARE CLASSIC, MIFARE DESFire, MIFARE PLUS, MIFARE FLEX, MANTIS, MIFARE ULTRALIGHT, MIFARE4MOBILE, MIGLO, NTAG, ROADLINK, SMARTLX, SMARTMX, STARPLUG, TOPFET, TRENCHMOS, UCODE, Freescale, the Freescale logo, Altivec, CodeWarrior, ColdFire, ColdFire+, the Energy Efficient Solutions logo, Kinetic, Layerscape, MagniV, mobileGT, PEG, PowerQUICC, Processor Expert, QorIQ, QorIQ Qonverge, SafeAssure, the SafeAssure logo, StarCore, Symphony, VortiQa, Vybrid, Airfast, BeeKit, BeeStack, CoreNet, Flexis, MXC, Platform in a Package, QUICC Engine, Tower, TurboLink, EdgeScale, EdgeLock, eIQ, and Immersive3D are trademarks of NXP B.V. All other product or service names are the property of their respective owners. AMBA, Arm, Arm7, Arm7TDMI, Arm9, Arm11, Artisan, big.LITTLE, Cordio, CoreLink, CoreSight, Cortex, DesignStart, DynamIQ, Jazelle, Keil, Mali, Mbed, Mbed Enabled, NEON, POP, RealView, SecurCore, Socrates, Thumb, TrustZone, ULINK, ULINK2, ULINK-ME, ULINK-PLUS, ULINKpro, µVision, Versatile are trademarks or registered trademarks of Arm Limited (or its subsidiaries) in the US and/or elsewhere. The related technology may be protected by any or all of patents, copyrights, designs and trade secrets. All rights reserved. Oracle and Java are registered trademarks of Oracle and/or its affiliates. The Power Architecture and Power.org word marks and the Power and Power.org logos and related marks are trademarks and service marks licensed by Power.org. M, M Mobileye and other Mobileye trademarks or logos appearing herein are trademarks of Mobileye Vision Technologies Ltd. in the United States, the EU and/or other jurisdictions.

© NXP B.V. 2022.

All rights reserved.

For more information, please visit: <http://www.nxp.com>

For sales office addresses, please send an email to: [salesaddresses@nxp.com](mailto:salesaddresses@nxp.com)

Date of release: 14 January 2022

Document identifier: AN13474

